

# POTTERY BARN

## Logan Small TV Stand Assembly Instructions

### PRE-ASSEMBLY:

- Please read all instructions before beginning assembly.
- For your safety and convenience, assembly by two people is recommended.
- Use the parts and hardware lists to identify and separate each of the components included.
- Save all packing materials until assembly is complete to avoid the accidental discarding of smaller parts or hardware.
- **WARNING: INSTALLING AN ANTI-TIP KIT IS NEEDED TO PREVENT INJURY FROM TIPPING FURNITURE**



## CAUTION

The top shelf of this cart/stand is intended for use with:

Plasma/LCD/DLP/HD televisions having a maximum screen size of 46 inches and weight of 135 lbs.

All other support shelves should not be loaded more than 25 lbs.

**DO NOT EXCEED RECOMMENDED LOAD.** Use with products heavier than the maximum sizes and weights indicated may result in instability causing possible injury.

This unit contains a permanent sticker located beneath the top shelf.

 
Do not allow children under 16 years to move this console.

04-000077-2

### Tools Required:




Allen wrench 4mm (1 x)




Philip screwdriver (not included)


### Parts Included:

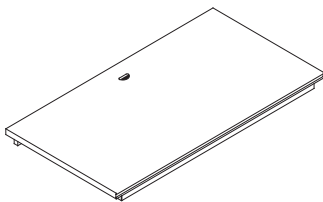 


A – Top Panel (1 x)

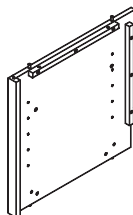 


B – Side Panel (2 x)

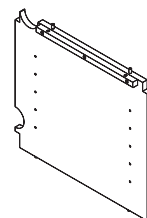 


C – Partition panel (1 x)

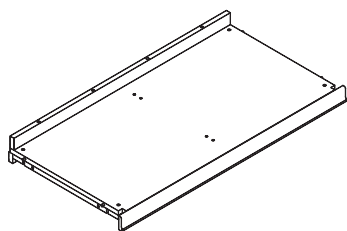 

D- Bottom Panel (1 x)

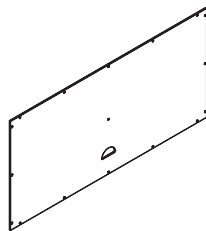 


E- Back Panel (1 x)

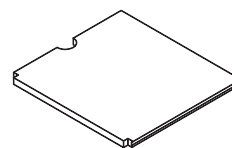 


F-Adjustable Shelf (4 x)

### Hardware Included:

 

 a - Bolt:  $\varnothing 1/4" \times 1-1/8" L$  (12 x)




b - Wood Screw: #8\*5/8" L (17 x)




c - Shelf Pins (16 x)

### Assembly Instructions:

 
1. Attach the side panel (B) and the partition panel (C) to the bottom panel (D) using bolts (a) as shown in **Fig. 1**. Tighten by hand at first. Securely tighten all bolts with Allen wrench, but do not over tighten the bolts.

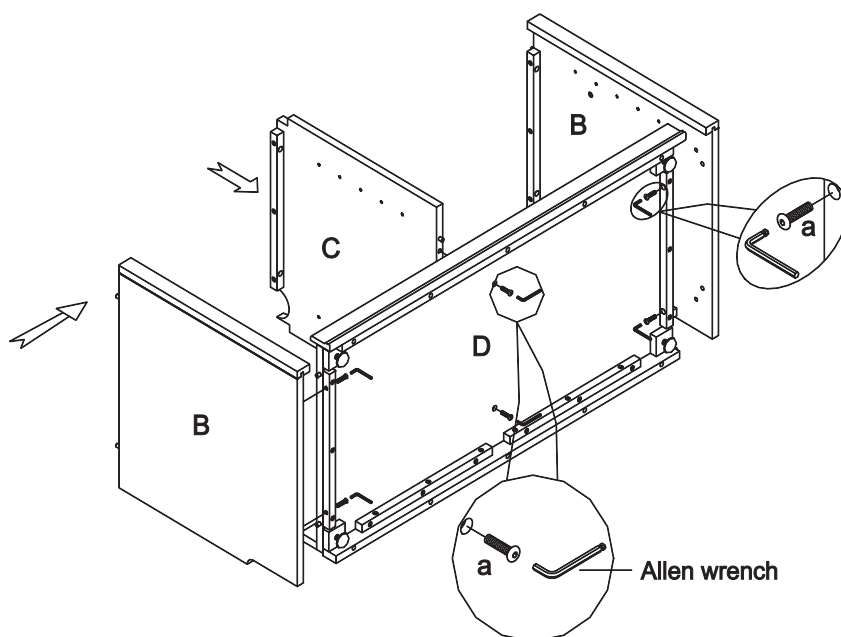


2. Attach the top panel (A) to the assembled pedestal using bolts (a) as shown in **Fig. 2**. Tighten by hand at first. Securely tighten all bolts with Allen wrench, but do not over tighten the bolts.

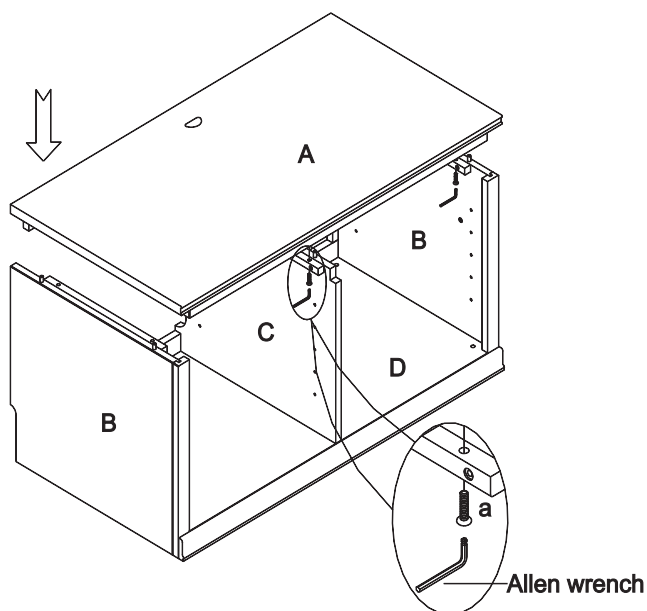 


3. Attach the back panel (E) to the assembled pedestal using wood screw (b) as shown in **Fig. 4**. Securely tighten with Philip screwdriver.

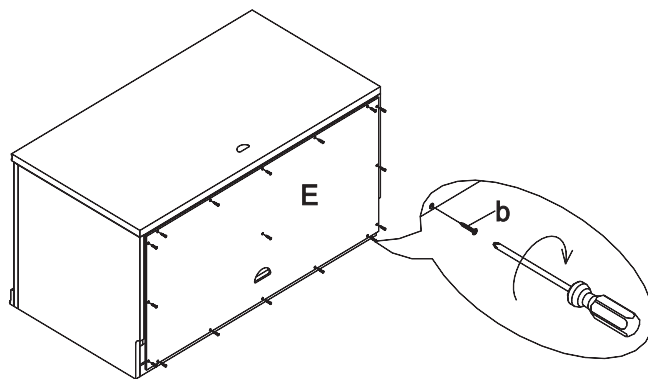 

 4. Determine the desired height for the shelf. Insert the shelf pin (c) into the pre-drilled holes as shown below. Gently lay the shelf (F) onto the shelf pins.

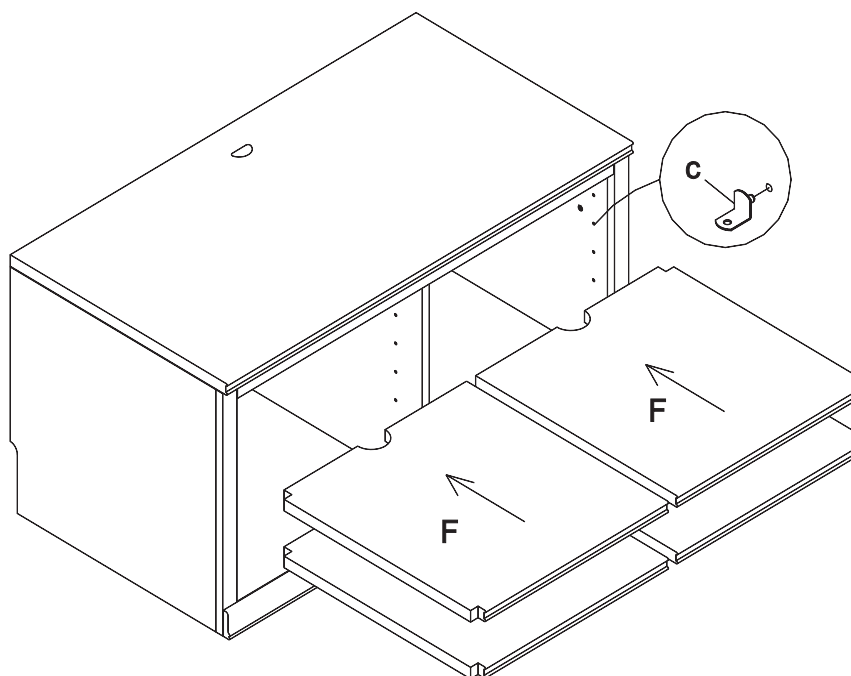

 5. If the furniture still wobbles, adjust the levelers through the holes at the four corners with Allen wrench.

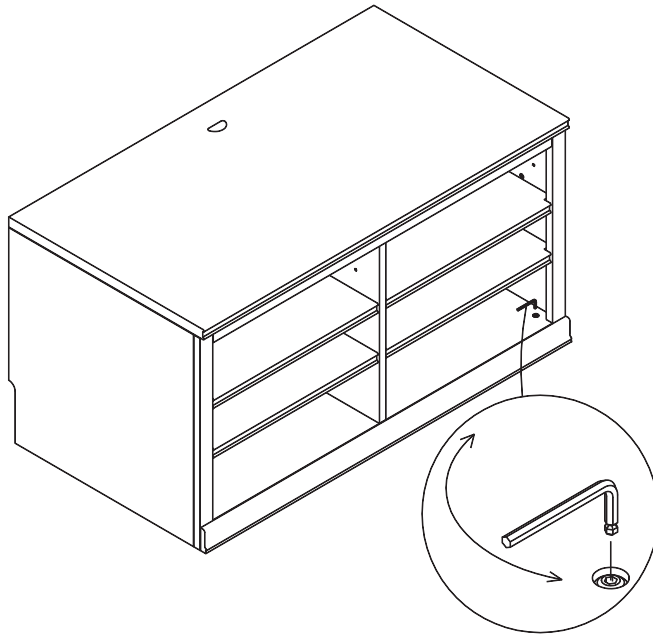

6. Assembly is now complete.

Care instructions:

- Dust with a clean, soft damp cloth and wipe dry immediately
- Avoid the use of chemicals and harsh cleaning agents

thank you for your purchase  
stores | catalog [www.potterybarn.com](http://www.potterybarn.com)