

# P O T T E R Y B A R N

## Hundi Lantern

### Assembly Instructions

#### Important Safety Instructions:

- These instructions are provided for your safety. It is important that they are read carefully and completely before installing fixture.
- THIS PRODUCT MUST BE INSTALLED IN ACCORDANCE WITH THE APPLICABLE INSTALLATION CODE BY A PERSON FAMILIAR WITH THE CONSTRUCTION AND OPERATION OF THE PRODUCT AND THE HAZARDS INVOLVED
- **We strongly recommend that a professional electrician install all direct wire fixtures.**
- This fixture has been rated for up to three (3) **40-Watt maximum Type B standard incandescent light bulbs** (not included) or three (3) **9-Watt compact fluorescent bulbs** (not included). To avoid the risk of fire, do not exceed the recommended lamp wattage.
- The lighting fixture is meant for indoor use, **SUITABLE FOR DRY LOCATIONS..** It must be connected only to 3-wire, single-phase electrical supply systems (provided with Ground wire or equivalent protection system).
- Save these instructions.

#### WARNING:

- To reduce the risk of fire, electrical shock or personal injury, always turn off light fixture and allow it to cool prior to replacing light bulb.
- Do not touch bulb when fixture is turned on. Do not look directly at lit bulb.
- Keep flammable materials away from lit bulb.
- This lighting fixture contains lead, a chemical know to the State of California to cause cancer, birth defects and other reproductive harm. Wash hands after installing, handling, cleaning or otherwise touching this light fixture.

#### Pre-assembly:

- Remove all parts and hardware from the box and lay out on a clear workspace, along with any plastic protective packaging. Do not dispose of any contents until assembly is completed to avoid accidentally discarding small parts or hardware.
- Use the parts and hardware lists to identify and separate each of the components included.
- NOTE: If needed, (depending upon final fixture hanging position from the ceiling), cut off the extra power cord length on the 2 wire cord and bare copper ground wire. Make sure when cutting the power cord and bare copper ground wire to cut them so that they all are at least 6 inches (152.4 mm) long within the outlet junction box (J-box). Prepare the cut power cord wires using the following steps. Use wire strippers to prepare the ends of the two wires so that there is about 1/2 inch of exposed wire for the Plastic Wire Connectors (b).

#### Parts List:

- (1) Mounting Plate (A)
- (1) Canopy (B)
- (1) Hook (C)
- (1) Upper Pipe (D)
- (1) Lower Pipe (E)
- (3) Sockets (F)
- (1) Glass Shade (G)
- (1) Lighting Fixture (H)
- (1) Supporting Ring (I)
- (3) Chains (J)

#### Hardware Enclosed:

- (3) Mounting screws (a)
- (3) Plastic wire connectors (b)
- (1) Green ground screw (c)
- (1) Hanging Loop (d)
- **(4) Silicon pads (e)**

#### To Install You Will

Need:


- Phillips Screwdriver
- Electrical tape
- Wire cutters

To Assemble:

1. **SHUT OFF THE MAIN ELECTRICAL SUPPLY FROM THE MAIN FUSE BOX/CIRCUIT BREAKER!**
2. This chandelier / lantern features extra electrical cord. Carefully measure the length you wish to mount chandelier / lantern. Once you have determined the correct length, cut the cord and remove any extra links from the support chain (if applicable). Prior to cutting the cord make sure to leave enough electrical cord to properly install the chandelier / pendant,
3. Carefully unpack all fixture parts and hardware and lay them out on a clear workspace.
4. Gently pull wiring down from ceiling junction box and allow it to hang.
5. Remove the mounting plate (A) from the canopy (B) by turning hanging loop (d) counterclockwise.
6. Carefully inspect the fixture's wires. The NEUTRAL FIXTURE WIRE has FINE LONGITUDINAL RIDGES running along its length (labeled as N). The HOT FIXTURE WIRE is SMOOTH (labeled as L), and the bare copper wire is the GROUND WIRE.
7. Attach the GROUND WIRE from the fixture to the GROUND JUNCTION BOX WIRE from the outlet (usually green or bare wire). Fasten each together with a plastic wire connector (b) and wrap the connection with electrical tape. Be sure that no wire strands are exposed. If your outlet box DOES NOT have a GROUND WIRE, insert the green ground screw (c) into the mounting plate (A) facing DOWN, and wrap the fixture's bare ground wire around the ground screw. **IT IS IMPERATIVE THAT THE OUTLET BOX IN YOUR HOME BE PROPERLY GROUNDED.**
8. Connect the NEUTRAL FIXTURE WIRE to the NEUTRAL JUNCTION BOX WIRE (usually white). Fasten each together with a wire connector (b) and wrap the connection with electrical tape. Be sure no strands are exposed.
9. Connect the HOT FIXTURE WIRE to the HOT JUNCTION BOX WIRE (usually black). Fasten each together with a plastic wire connector (b) and wrap the connection with electrical tape. Be sure no wire strands are exposed.  
**DO NOT REVERSE THE HOT AND NEUTRAL CONNECTIONS OR SAFETY WILL BE COMPROMISED.**
10. Gently tuck the wire connections neatly into the ceiling junction box.
11. Attach the mounting plate (A) to the ceiling outlet box using the enclosed mounting screws (a). Tighten screws with a screwdriver.
12. Pull canopy (B) up over the mounting plate until it is flush with the ceiling.
13. Raise the hanging loop (d) to the canopy and turn clockwise until the canopy is flush with the ceiling.
14. Raise the Upper Pipe (D) to the Hook (C) and turn clockwise until it is fully tightened. Follow by threading the Lower Pipe (E) into the upper pipe turning clockwise. Attach the Lighting Fixture (F) to the lower pipe.
15. Put the Supporting Ring (I) around the Glass Shade (G) and then hang the Chains (J) to the hook. Rest the fixture into the glass shade.
16. Gently allow light fixture to hang.
17. Insert (3) **40-Watt maximum Type B standard incandescent light bulbs** (not included) or (3) **9-Watt compact fluorescent bulbs** (not included) into the sockets (F). **DO NOT EXCEED SPECIFIED WATTAGE.**
18. Restore power to junction box and test fixture.
19. Assembly is complete.

Care Instructions:

- Wipe clean using a soft, dry cloth or static duster
- Always avoid the use of harsh chemicals and abrasives to clean fixture as they may damage the finish.
- The glass shade may be removed and cleaned using a solution of mild soap and water.
- **The glass shade can be adjusted to level by using the round silicon pads (e), stick them to the inside of the Supporting ring (I) if needed , as below drawing show.**

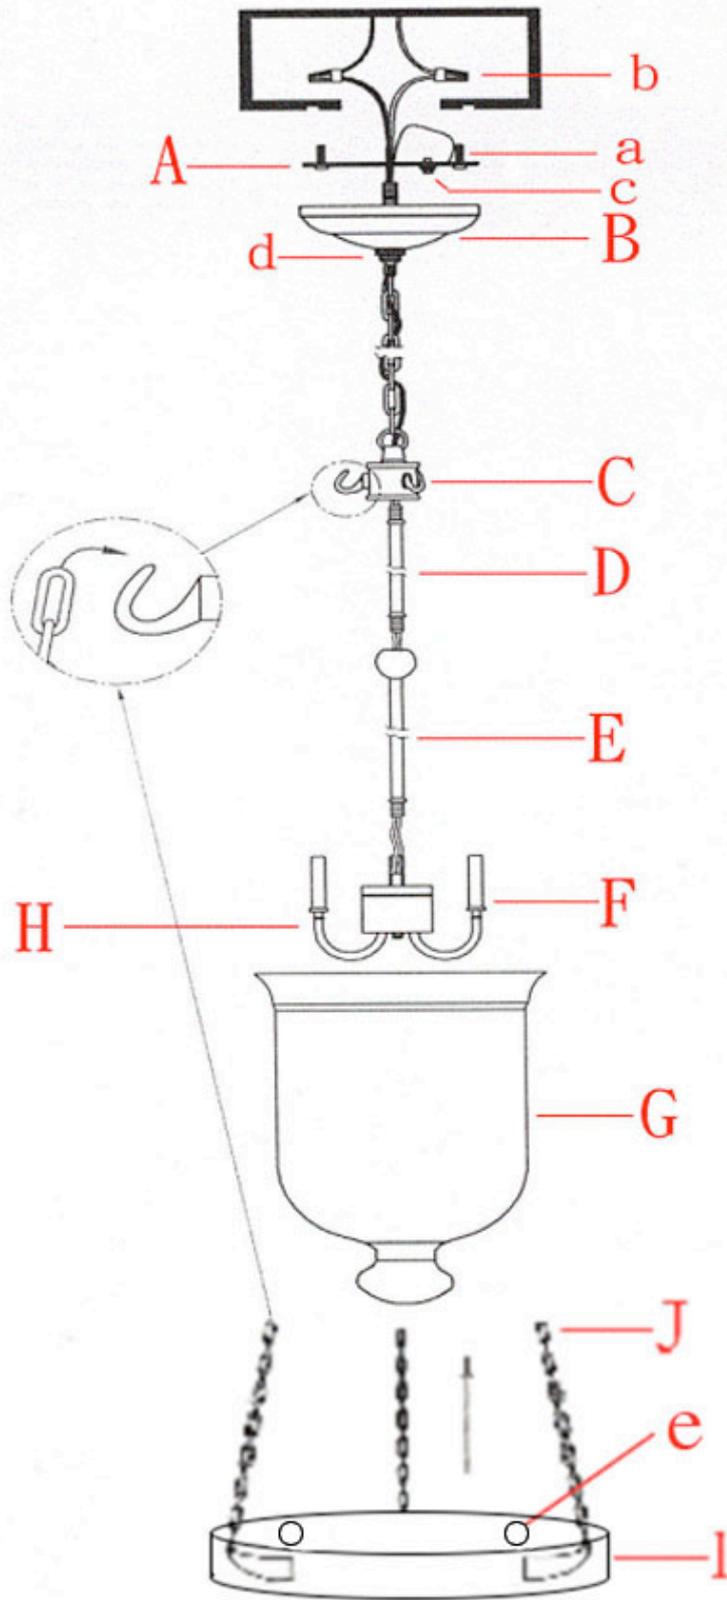

thank you for your purchase

Stores | catalog | [www.potterybarn.com](http://www.potterybarn.com)