

P O T T E R Y B A R N

RUFFLE PENDANT CEILING LAMP - LARGE

Important Safety Instructions:

- These instructions are provided for your safety. It is important that they are read carefully and completely before installing fixture.
- **We strongly recommend that a professional electrician install all direct wire fixtures.**
- This fixture has been rated for up to **(1) 100-WATT MAXIMUM STANDARD TYPE A BULB** (not included). To avoid the risk of fire, do not exceed the recommended wattage.

Pre-assembly:

- Remove all parts and hardware from the box and lay out on a clear workspace, along with any plastic protective packaging. Do not dispose of any contents until assembly is completed to avoid accidentally discarding small parts or hardware.
- Use the parts and hardware lists to identify and separate each of the components included.

Parts List:


- (1) Mounting plate (A)
- (1) Canopy (B)
- (1) Socket (C)
- (1) Glass shade (D)

Hardware Enclosed:

- (2) Mounting screws (a)
- (2) Plastic wire connectors (b)
- (1) Green ground screw (c)
- (2) Long screw (d)
- (2) Metal nut (e)
- (1) Metal ring (f)
- (1) Shade ring (g)

To Install You Will Need:

- 2 people recommended
- Phillips Screwdriver
- Electrical tape
- Wire cutters

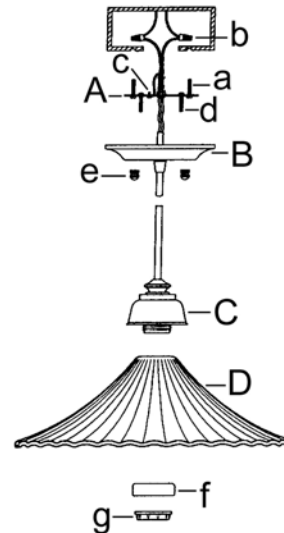

To Assemble:

1. SHUT OFF THE MAIN ELECTRICAL SUPPLY FROM THE MAIN FUSE BOX/CIRCUIT BREAKER.
2. Carefully unpack all fixture parts and hardware and lay them out on a clear workspace.

Connecting the Wires:

3. Gently pull wiring down from ceiling junction box and allow it to hang.
4. Remove the mounting plate (A) from the canopy (B) by turning metal nut (e) in a clockwise direction.
5. Carefully inspect the pendant's fixture wires. The NEUTRAL FIXTURE WIRE has very fine ridges molded into its plastic covering. The HOT FIXTURE WIRE has a smooth covering. The bare copper wire is the GROUND WIRE.
6. Attach the GROUND WIRE from the fixture to the GROUND JUNCTION BOX WIRE from the outlet (usually green or bare wire). Fasten each together with a plastic wire connector (b) and wrap the connection with electrical tape. Be sure that no wire strands are exposed. If your outlet box DOES NOT have a GROUND WIRE, insert the green ground screw (c) into the mounting plate (A) facing DOWN, and wrap the fixture's bare ground wire around the ground screw. **IT IS IMPERATIVE THAT THE OUTLET BOX IN YOUR HOME BE PROPERLY GROUNDED.**
7. Connect the NEUTRAL FIXTURE WIRE to the NEUTRAL JUNCTION BOX WIRE (usually white). Fasten each together with a wire connector (b) and wrap the connection with electrical tape. Be sure no strands are exposed.
8. Connect the HOT FIXTURE WIRE to the HOT JUNCTION BOX WIRE (usually black). Fasten each together with a plastic wire connector (b) and wrap the connection with electrical tape. Be sure no wire strands are exposed. **DO NOT REVERSE THE HOT AND NEUTRAL CONNECTIONS OR SAFETY WILL BE COMPROMISED.**

9. Gently tuck the wire connections neatly into the ceiling junction box.
10. Attach the mounting plate (A) to the ceiling outlet box using the enclosed mounting screws (a). Tighten screws with a screwdriver.
11. Pull canopy (B) up over the mounting plate until it is flush with the ceiling.
12. Firmly secure metal nut (e) to canopy turning in a clockwise direction until the canopy is flush with the ceiling.
13. Release light fixture slowly to hang.

Completing the Assembly:

1. Unscrew the shade ring (g) from the socket (C) and take out the metal ring (f). Put the glass shade (D) onto the socket (C) and place the metal ring (f) back onto the Socket (C). Secure the shade ring (g) onto the socket until tight.
2. Insert one TYPE A 100W bulb (not included) into the socket (C). DO NOT EXCEED SPECIFIED WATTAGE.
3. Restore power to junction box and test fixture.
4. Assembly is complete.

Care Instructions:

- Wipe clean using a soft, dry cloth or static duster.
- Always avoid the use of harsh chemicals and abrasives to clean fixture as they may damage the finish.

thank you for your purchase

stores | catalog | www.potterybarn.com