


POTTERY BARN

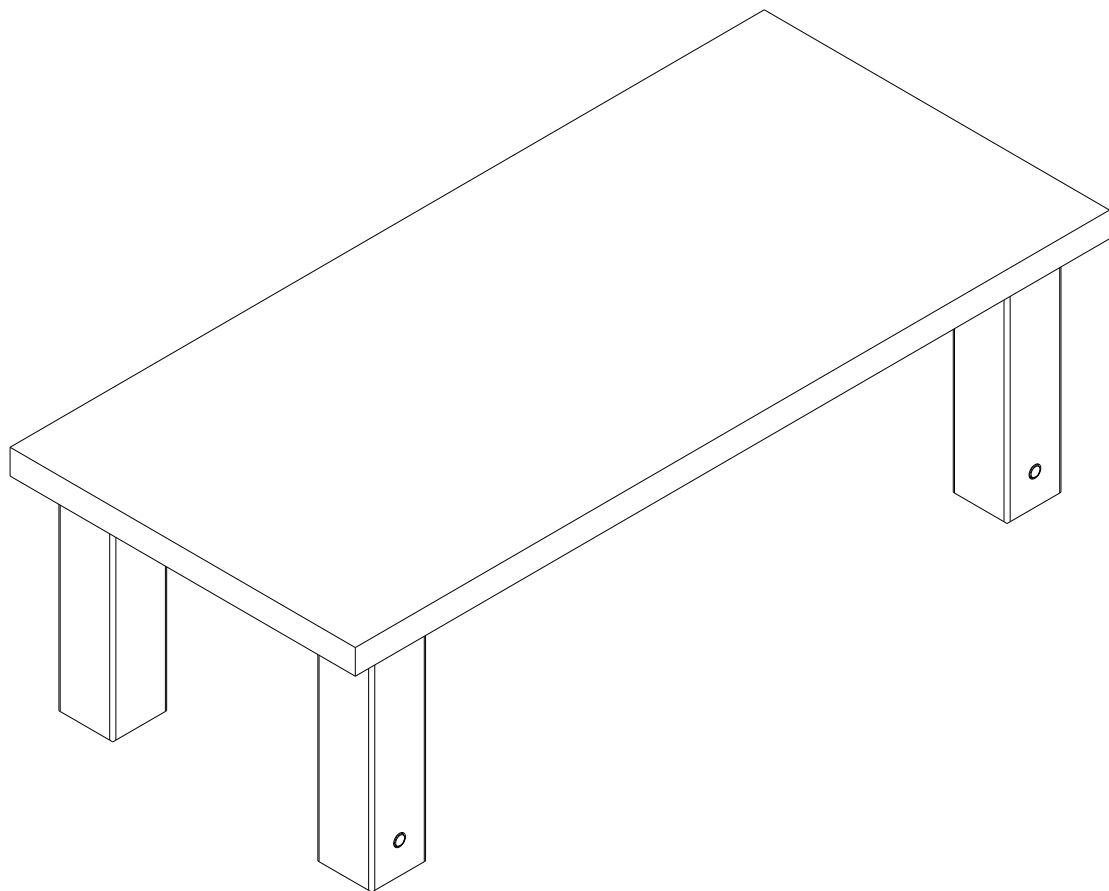

CHUNKY DINING TABLE

Important Safety Instructions:


- Please read all instructions carefully before assembling.
- For your safety and convenience, assembly by six adults is strongly recommended.
- Keep instructions for future use.
- Use only hardware supplied by vendor to assemble. Using unauthorized hardware could jeopardize the structural integrity of the item.

Pre-assembly:

- Remove all parts and hardware from the box and lay them out on a clear carpeted or scratch-free work surface, to avoid damaging parts during assembly. The shipping box provides an ideal work surface.
- Save all packing materials until assembly is complete to avoid the accidental discarding of smaller parts or hardware.
- Use the parts and hardware list below to identify and separate each of the pieces included.
- The illustrations provided allow for easier assembly when used in conjunction with the assembly instructions.
- The use of power tools is not recommended. Power tools can damage hardware and split wood.

Parts included:


(A)	Cemet Top	1 x
(B)	Leg	4 x
(C)	Mounding panel	2 x
(D)	Metal bar	2 x

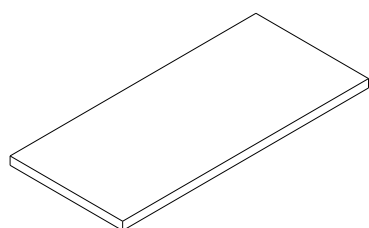


(A)



(B)

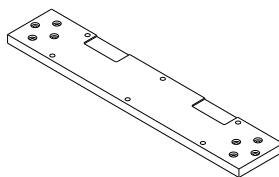

(C)

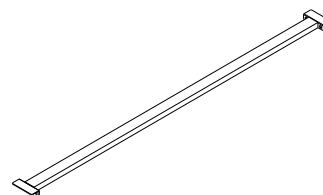

(D)

Hardware Included:

(E) Temporary Alignement Screws	(F) Long Bolts	(G) Short Bolts	(H) Spring Washers	(I) Flat Washers
Ø8mm x L70mm	Ø8mm x L65 mm	Ø8mm x L25 mm	Ø8mm x 12mm	Ø8mm x 22mm
2 x	28 px	8 x	36 x	36 px

Tool Required:

(J) – Allen Key (included)




(1pc)

Assembly Instruction Steps:


1. Attach moulding panel (C) to legs (B) using Long bolt (F), Spring washer (H) and Flat washer (I). Tighten with Allen Key (J). (See Fig. 1)

Fig. 1

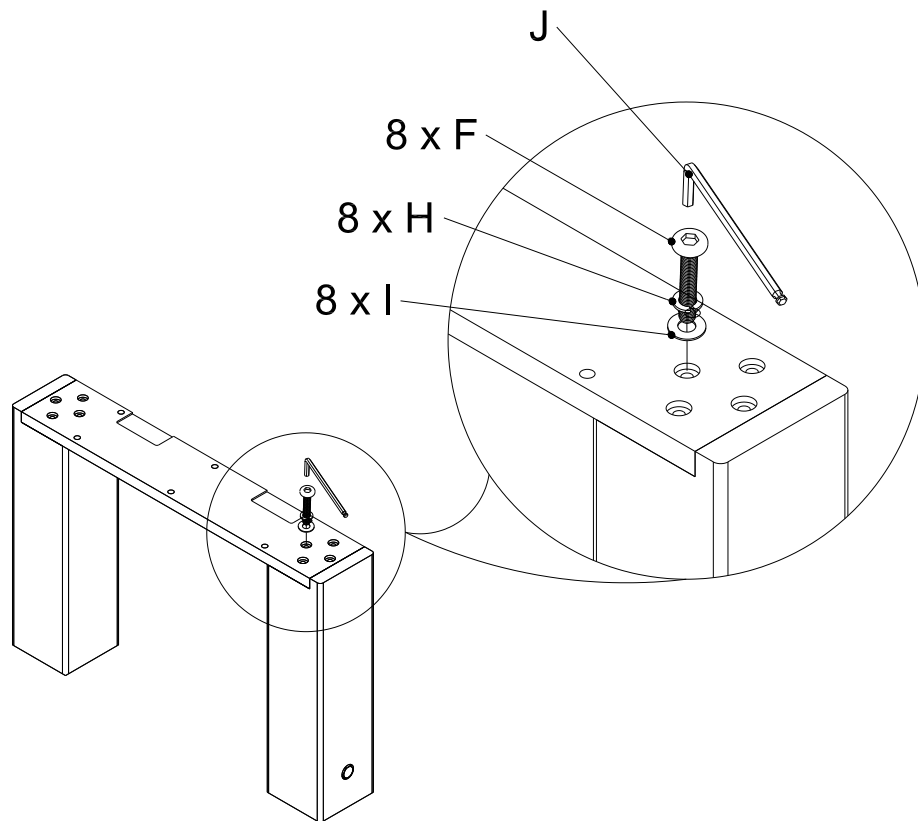

2. Repeat step 1 for the remaining Legs and moulding panel.
3. Attached metal bar (D) to two assembled legs using short bolt (G), Spring washer (H) and Flat washer (I). Tighten with Allen Key (J). (See Fig.2). Make sure metal bar (D) flat or lower a bit compare with moulding's surface.


Fig. 2

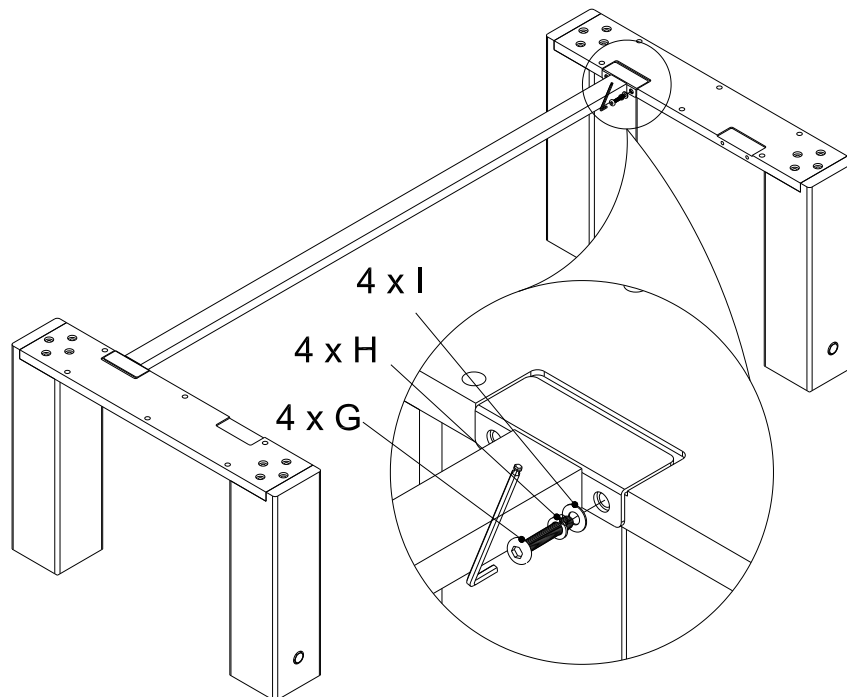

4. Repeat step 3 for the remaining metal bar (D).
5. Carefully upside down Cement Top (A) on scratch free surface. Insert 2 **Temporary** Alignment Screws (E) into the threaded holes on Cement Top (A). Attention: The 2 **Temporary** Alignment Screws (E) should be inserted


into 2 diagonally opposed threaded holes. The purpose of these **Temporary** Alignment Screws is to properly position the Bases for more easily inserting the rest of the bolts.(See **Fig.3**)

Fig. 3

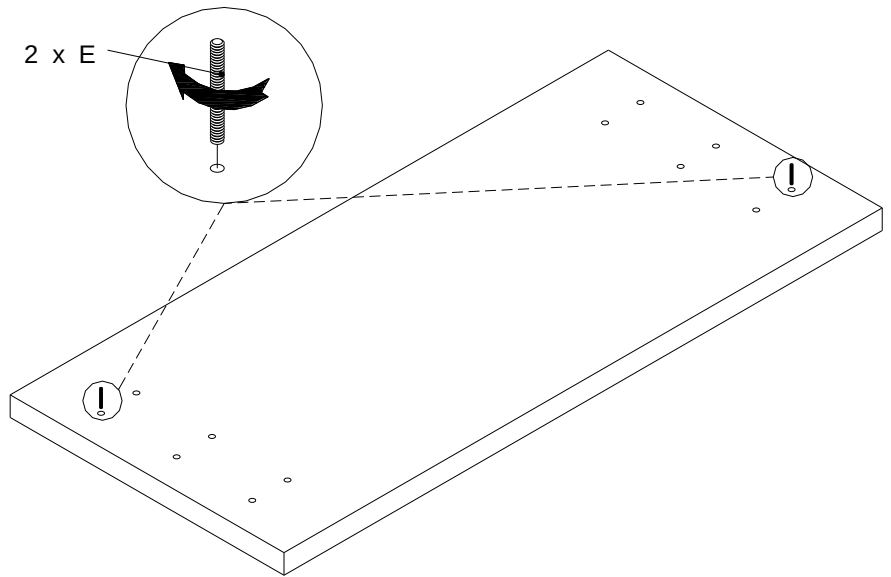


6. Place Top **(A)** upright on assembled base by aligning the two **Temporary** Alignment Screws **(E)** to holes on Mounting Panels **(C)** (See **Fig. 4**)

Fig. 4

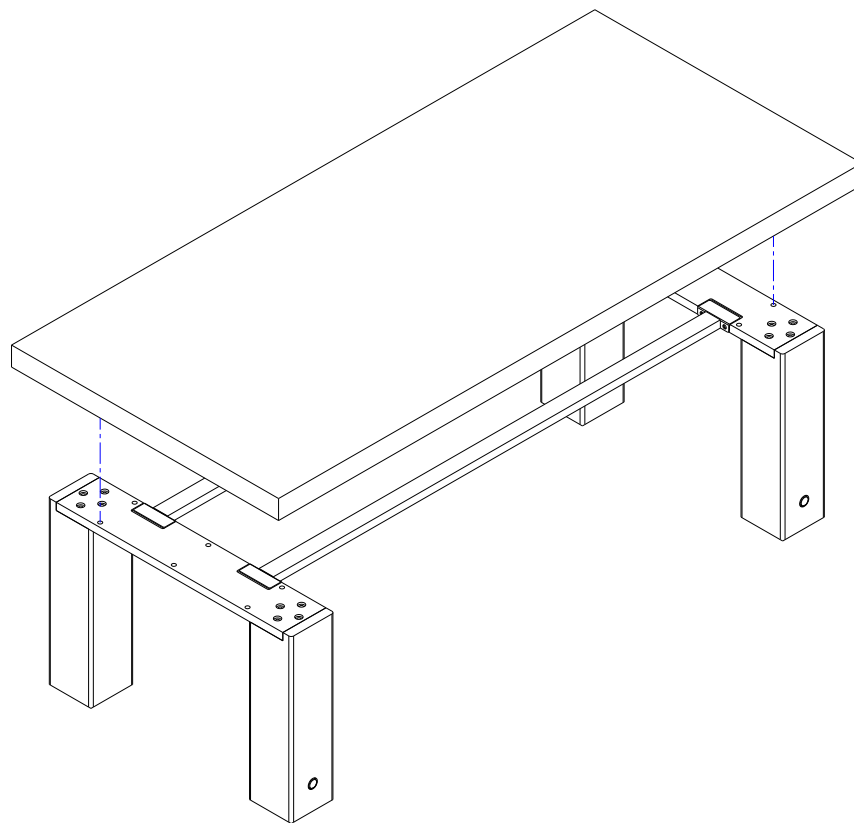

7. Adjust a bit for Top cement **(A)** at good position which is the temporary alignment scw **(E)** match with center point of hole on mounding panel. Then, unscrew two temorary alignment screw **(E)**. Attached the top **(A)** to the assembled base using Long bolts **(F)**, spring washer **(H)** and flat washer **(I)**. Tighten with allen key **(J)**. (See **Fig.5**)

Fig. 5

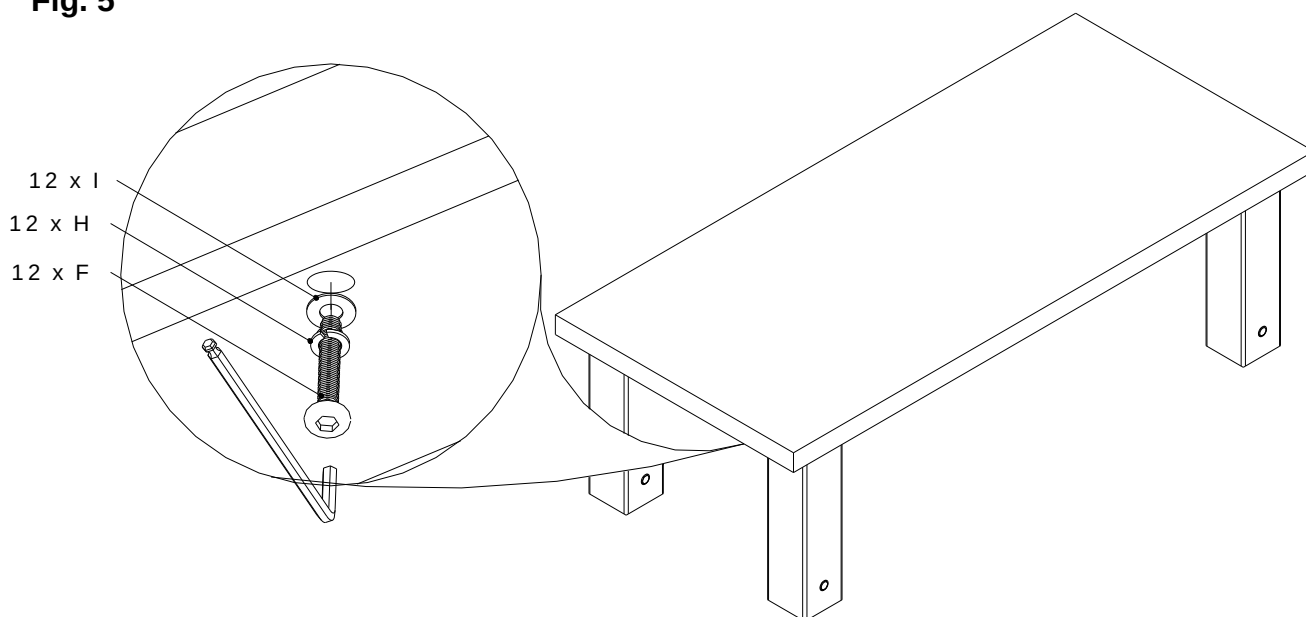


8. Assembly complete.

Adjusting Levelers:

Due to an uneven floor the furniture may not sit level causing it to wobble. If the Table wobbles, determine which corner does not touch the ground correctly. With two people follow these steps:

1. Carefully lift the Table slightly to provide access to the levelers attached to the bottom of the legs.
2. Turn the levelers until adequate contact is made with the floor. Gently set down the buffet and check stability.
3. Repeat steps until buffet sits firmly on the ground.

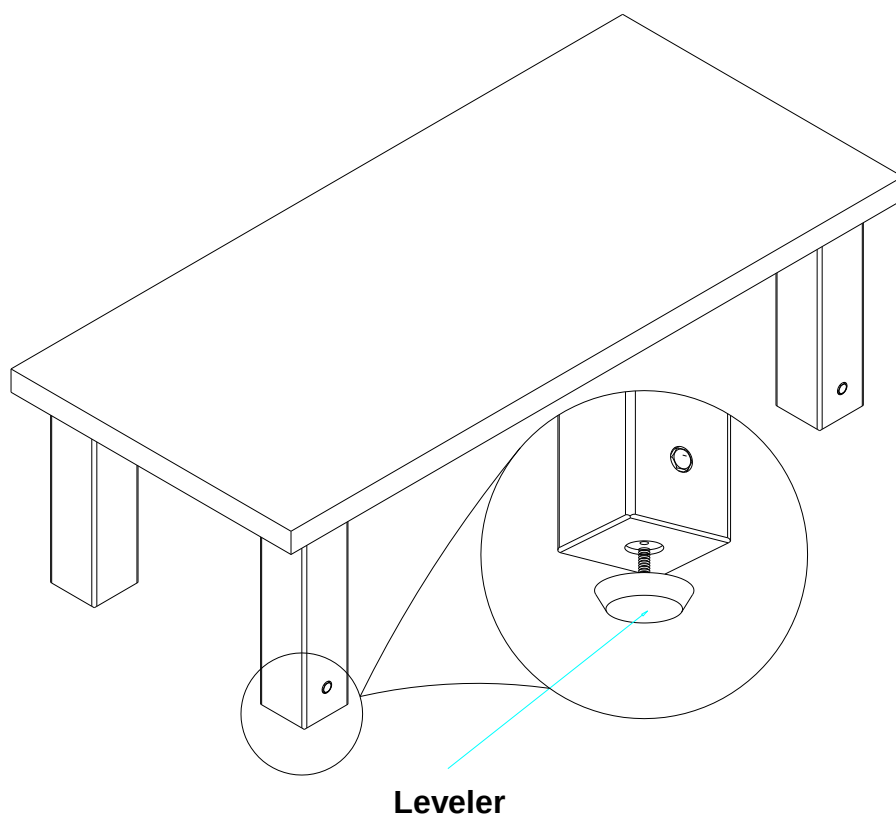

Care Instructions:

- It is important to store wood furniture INDOORS out of season. Make certain that the furniture is completely dry before storage.
- Cover furniture with outdoor covers (sold separately) when left outside during inclement weather or when not in use.
- Wipe spills with a clean dry cloth. Do not use chemicals or abrasives for cleaning!
- Periodically apply a high quality outdoor furniture oil to darken the finish and add protection.
- **TAKE NOTE: THE BOLTS MAY SLIGHTLY LOOSEN OVER TIME. IF YOUR FURNITURE FEELS "WOBBLY" OR LOOSE, PLEASE RE-TIGHTEN BOLTS.**

Thank you for your purchase.
stores | catalog | www.potterybarn.com