

# P O T T E R Y B A R N

## Printers Writing Desk Assembly Instructions


### Pre-Assembly:

- Please read all instructions before beginning assembly.
- Use the parts and hardware lists to identify and separate each of the components included.
- Save all packing materials until the assembly is completed to avoid the accidental discarding of smaller parts or hardware.

### Part Included:


(1) Top - A	(4) Leg - B
	

### Hardware enclosed:

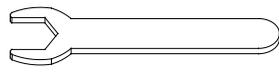
(8) Flat Washer - C	(8) Lock Washer - D	(8) Nut - E	(1) Allen Wrench - F
			
(8) Wood Screw (#8*16mmL)			
			

### Assembly Instructions:

1. Carefully lay the Top (A) upside down on a carpet or the foam in shipping box. Attach the Leg (B) to Top (A) by inserting the hanger bolts on the leg into pre-drilled hole on the corner brace of top. Secure by Flat Washer (C), Lock Washer (D) and Nut (E) by Allen Wrench (F)
2. Slowly turn the table upright by its back to keep the drawer from running out. Adjust the leveler under legs if the table doesn't sit level. Assembly is completed.

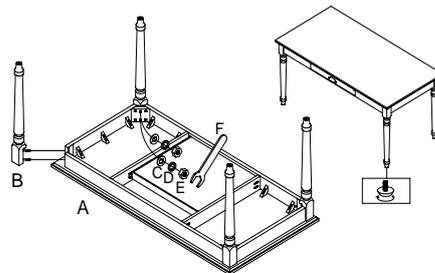

3. Keep the Wood Screws for future use when the table is combined with the Printer Bookcase Hutches or the Large Hutch as below illustration.

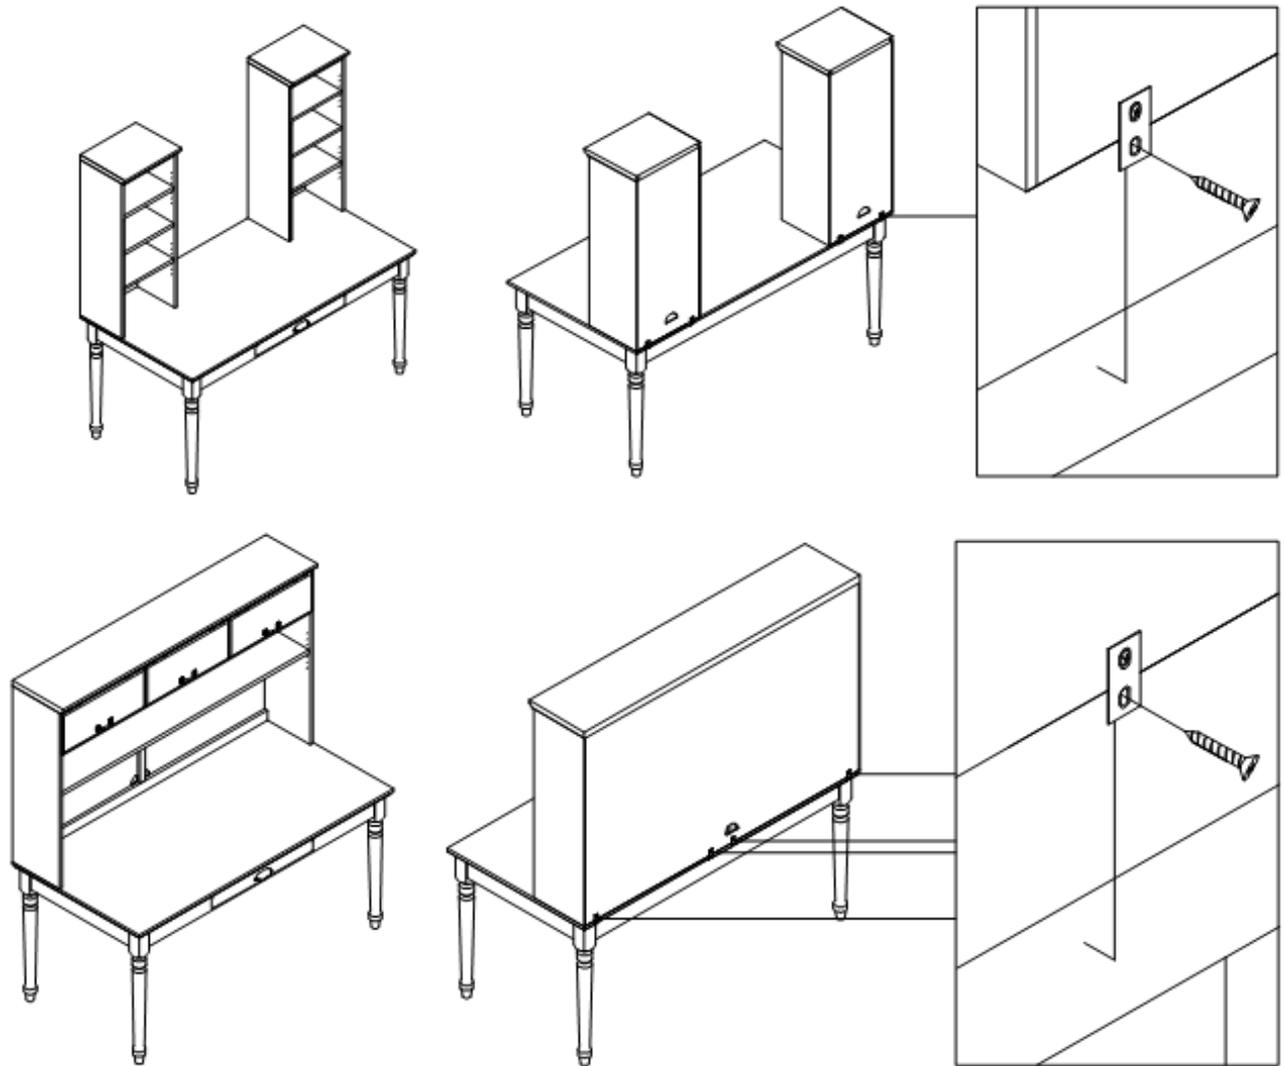

## CAUTION:

The table top's capacity is 200 lbs. Please check with seller for the weight of product (s) you want to place on. Do not load more than capacity which may lead to product damaged and cause injury.

Assembly is completed.

### Care Instructions:

- For daily cleaning, wipe with a soft damp cloth; Wipe dry immediately.
- To protect the finish, avoid the use of chemicals and harsh cleaning agents.

Thank you for your purchase  
Stores | Catalog | [www.potterybarn.com](http://www.potterybarn.com)