POTTERYBARN

Trigger Lift Cantilever umbrella Instruction Manual


Patented product

WARNING: Do not leave your umbrella in the open position during wind or rain storms. Close your umbrella when not in use. This umbrella must be used with the base designed for it.

Step 1

Secure your cantilever umbrella to the base, See separate base instructions.

Note: For safety reasons 2 persons are required to co-lift the umbrella to the base.

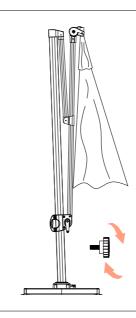


Step 2

Spueeze the Trigger and push up to the first or second position.
Crank the handle clockwise to open your umbrella.


WARNING


Do not crank in counter clockwise direction as the umbrella will go up but not hold and suddenly will come down.

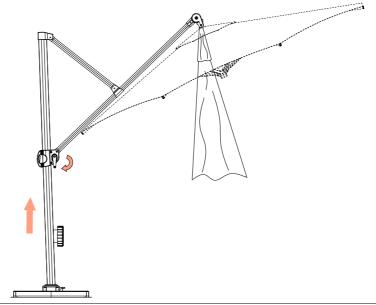

Step 3

Once your umbrella has been opened you can now squeeze the trigger and push up to the highest position. The fully open position will have the canopy parallel to the ground.

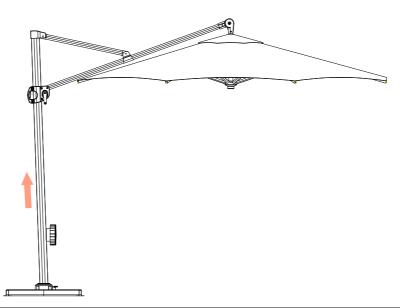

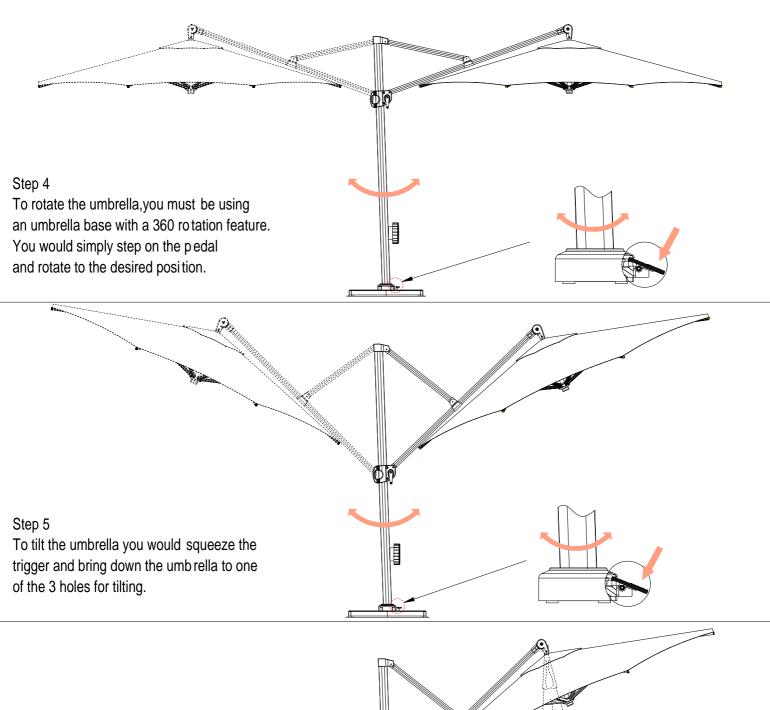


Step 6

To close the umbrella, squeeze the Trigger again and bring down to the first or second position. Crank the umbrella counter clockwise to close.

Re-Squeeze the trigger and bring all the way down.

Care Instructions

- · rush to remove dirt and dust
- · For spot cleaning , sponge lightly with a solution of mild soap and warm water.

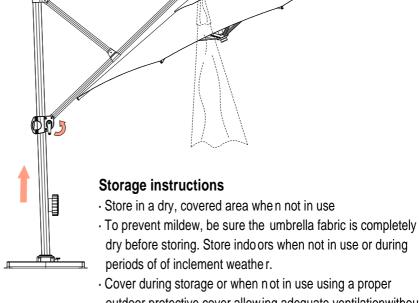

- outdoor protective cover allowing adequate ventilationwithout trapping moisture.
- · Do not cover with plastic or similar materials that will trap moisture. Pottery Barn umbrell a covers are vented and can be used.

Thank you for your purchase Stores/ catalog/ www. potterybar n.com