

P O T T E R Y B A R N

Armonk Outdoor Chandelier Assembly Instructions

CAUTION:

- **BEFORE INSTALLING FIXTURE, MAKE SURE THE POWER TO THE CIRCUIT IS TURNED OFF AT THE MAIN FUSE BOX / CIRCUIT BREAKER UTILITY BOX.**

Important Safety Instructions:

- These instructions are provided for your safety. It is very important that they are read carefully and completely before beginning the assembly and installation of this lighting fixture.
- We strongly recommend that a professional electrician install all direct wire fixtures.
- THIS PRODUCT MUST BE INSTALLED IN ACCORDANCE WITH THE APPLICABLE INSTALLATION CODES BY A PERSON FAMILIAR WITH THE CONSTRUCTION AND OPERATION OF THE PRODUCT AND THE HAZARDS INVOLVED.
- The lighting fixture is meant for indoor use. It must be connected only to 3-wire, single-phase electrical supply systems (provided with Ground wire or equivalent protection system).
- For your safety, it is strongly recommended that two people install the lighting fixture.
- This fixture has been rated for up to six (6) **60-Watt maximum TYPE B standard light bulbs** (not included) or six (6) **13-Watt compact fluorescent light bulbs** (not included) or six (6) **4.5-watt SBLED light bulbs** (not included). To avoid the risk of fire, do not exceed the recommended lamp wattage.
- This lighting fixture is intended for indoor or protected/covered outdoor areas. Do not expose to direct rainfall. **SUITABLE FOR EITHER DRY OR DAMP LOCATIONS.**
- **Save these instructions.**






WARNING:

- **To reduce the risk of fire, electrical shock or personal injury, always turn off light fixture and allow it to cool prior to replacing light bulb.**
- **Do not touch bulb when fixture is turned on. Do not look directly at lit bulb.**
- **Keep flammable materials away from lit bulb.**

Pre-assembly:

- Remove all parts and hardware from box along with any plastic protective packaging.
- Do not discard any contents until after assembly is complete to avoid accidentally discarding small parts or hardware.
- For your safety and convenience, assembly by two people is recommended.

TOOLS REQUIRED (not included):

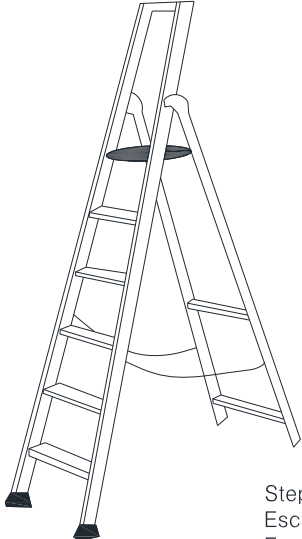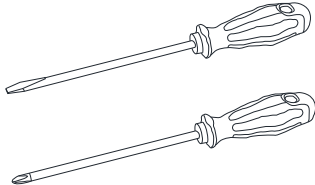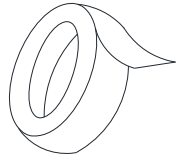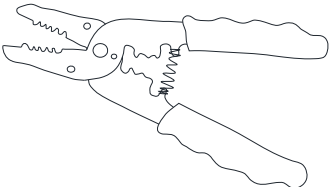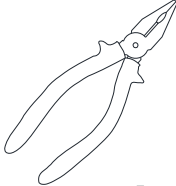 <p>Step Ladder Escabeau Escalera</p>	 <p>Phillips Head, Flat Blade Screwdrivers Tournevis à tête Phillips et à tête plate Destornilladores Cabeza Phillips y Destornilladores Cabeza Plana</p>	 <p>Electrical tape Ruban isolant Cinta Electrica.</p>
	 <p>Wire Cutter/Stripper Pince coupe-fil/ à dénuder Cortador de Cable</p>	 <p>Plier Pince Alicates</p>


Parts Included:

- (A) Mounting Strap (1)
- (B) Canopy (1)
- (C) Canopy Ring (1)
- (D) Mounting Loop (1)
- (E) Closable Links with Screw Caps (2)
- (F) Chain (1)
- (G) Hanging Loop (1)
- (H) Sockets (6)
- (I) Green Ground Screw (1)
- (J) Nipple (1)
- (K) Hex Nuts (2)




Hardware Enclosed:

- (L) Mounting Screws (2)
- (M) Plastic Wire Nut Connectors (3)

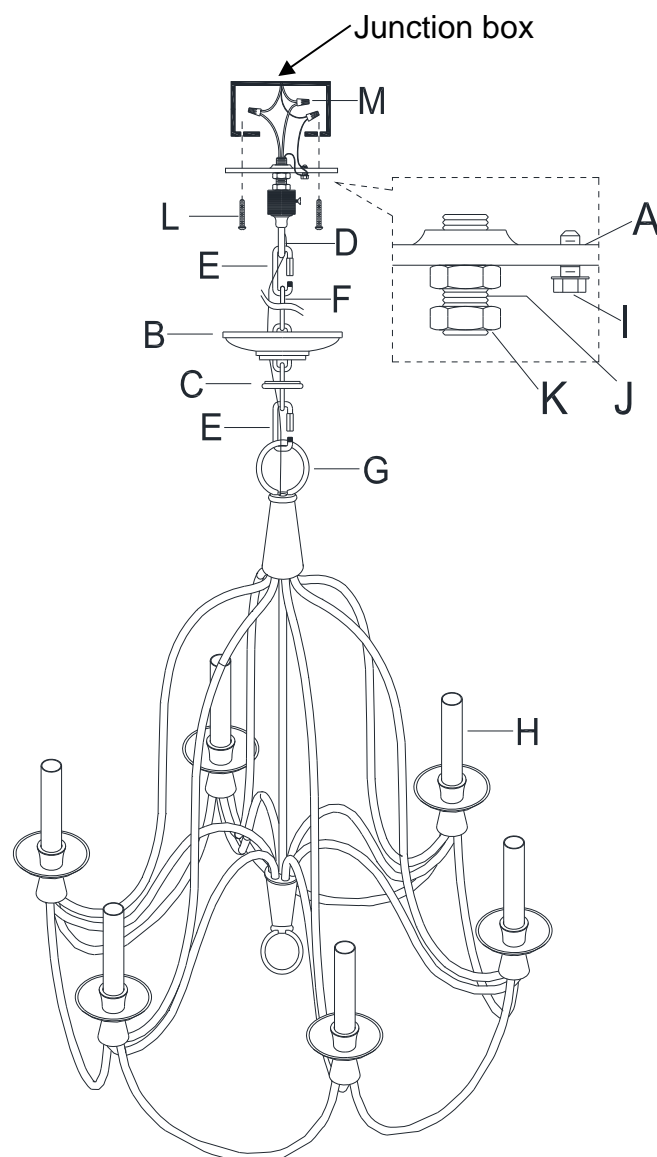


To adjust the suspension length of the fixture:


1. Note: The adjustment or shortening of the lighting fixture's suspension length is only needed if the factory set chain length is not appropriate for your installation. We recommend that you adjust the chain to the proper desired length before cutting the electrical cord.
2. (See B1) Pull out the fixtures 2 wire power cord and bare ground wire woven through the Chain (F).

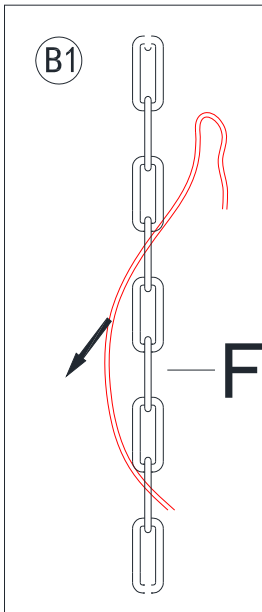


3. (See B2 & B3) The chain length may be shortened from either end. Use two pairs of pliers to gently pry the link apart so that a space is created large enough for the link to be removed from the remaining chain. Use a cloth or folded piece of paper between the pliers and the link to protect the finish of the link during bending. Once the Chain (F) is at the desired length, reattach the Chain (F) as the diagram shown below. (See B4)

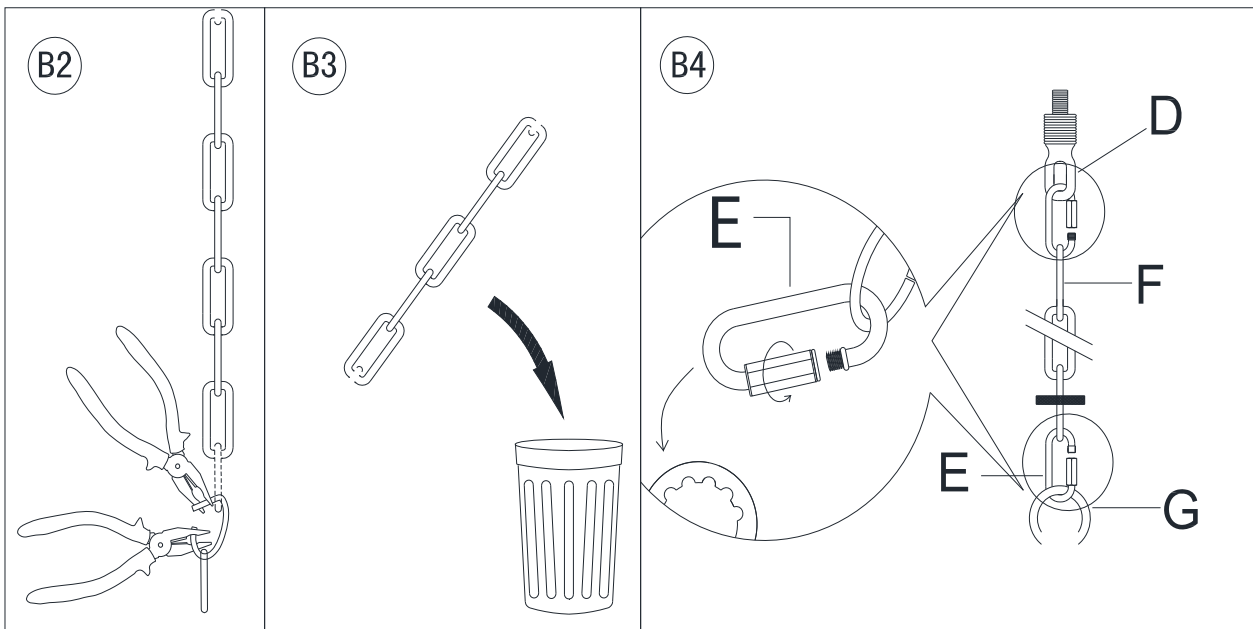

4. (See B5) Re-weave the fixtures 2 wire power cord and bare ground wire through every other loop to the top of Chain (F).

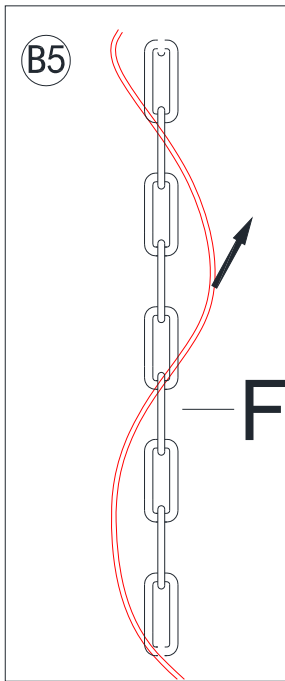


5. (See B6) If needed, cut off the extra power cord length on the 2 wire cords and bare ground wire so that they all are at least 6 inches (152.4 mm) long within the outlet junction box (J-box).

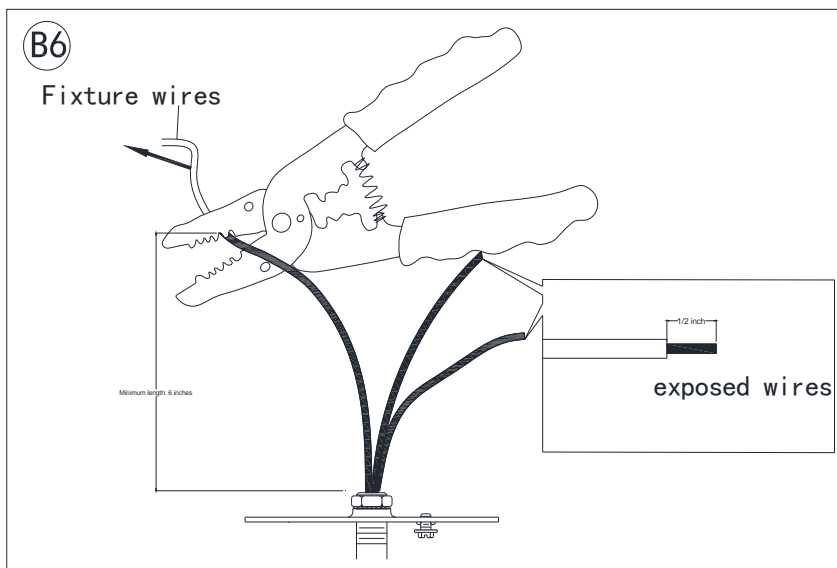


Assembly & Installation Instructions:


- **SHUT OFF THE MAIN ELECTRICAL SUPPLY FROM THE MAIN FUSE BOX/CIRCUIT BREAKER.**
- Carefully unpack all fixture parts and hardware and lay them on a clear workspace.

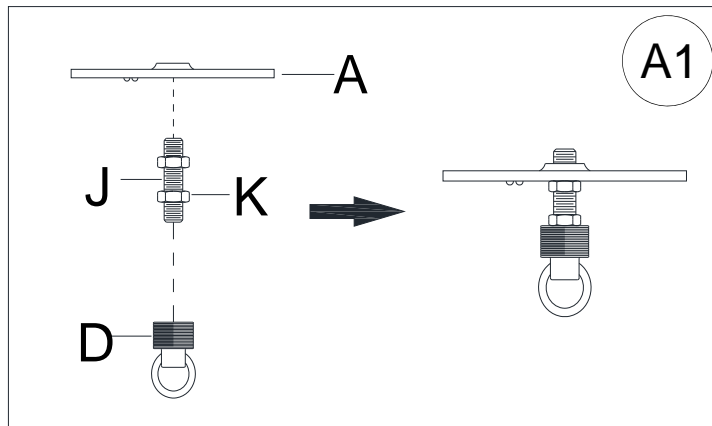


1. Attach the Nipple (J) into the threaded bore of the Mounting Loop (D) and rotate the Nipple (J) clockwise until it is tightly engaged within the Mounting Loop (D).
2. Screw Hex Nuts (K) to Nipple (J).
3. Attach the Mounting Strap (A) onto the top end of the Nipple (J) so that a portion of the Nipple (J) extends beyond the Mounting Strap (A).

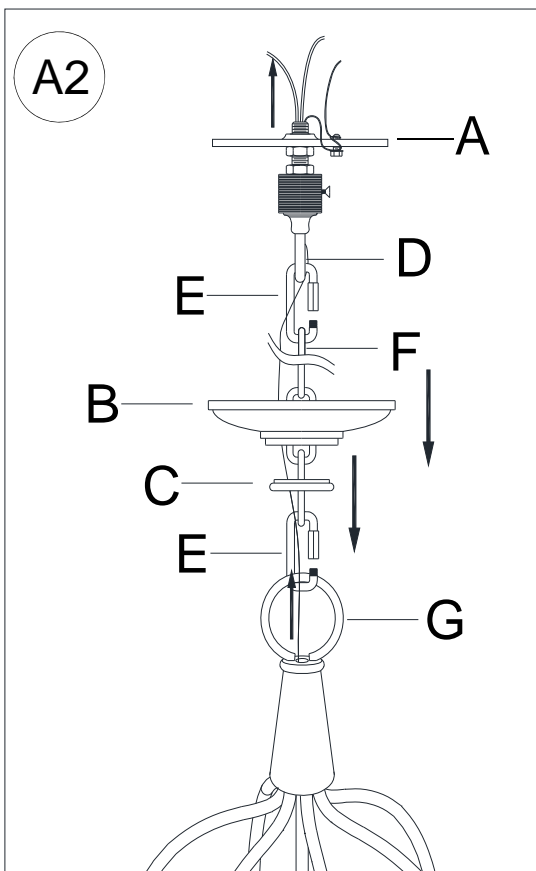


1. Slide the Canopy Nut (C) and Canopy (B) to the Chain (F).
2. Weave the fixtures power cord and bare ground wire through the Chain (F), Canopy Nut (C), Canopy (B), Mounting Loop (D) and Mounting Strap (A).
3. Attach closable Link (E) to Mounting Loop (D) and remaining Closable Link (E) to Hanging Loop (G) and secure with screw caps.

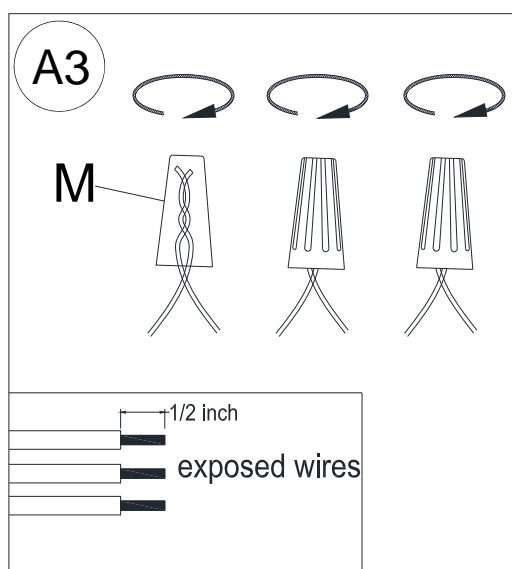

1. Please read the section “ **To Make the Wire Connections**” Below.

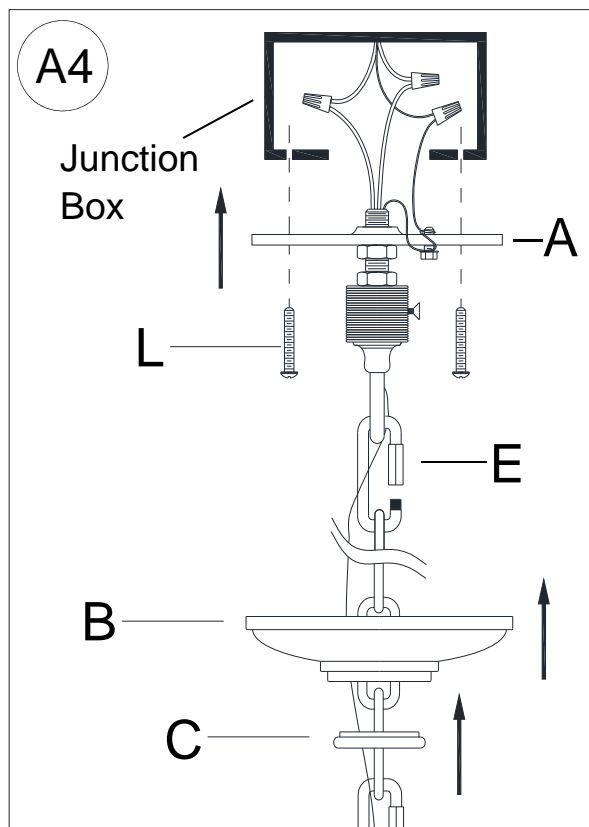

1. Attach Mounting Strap (A) onto the junction box using Mounting Screws (L).
2. Slide the Canopy (B) upward along the Chain with the upper rim of the canopy pressed gently against the ceiling surface. Position the Canopy Nut (C) against the Mounting Loop (D) and rotate the Canopy Nut (C) clockwise to engage it with the threaded portion of the Mounting Loop (D) until secure. Do not over tighten this nut.

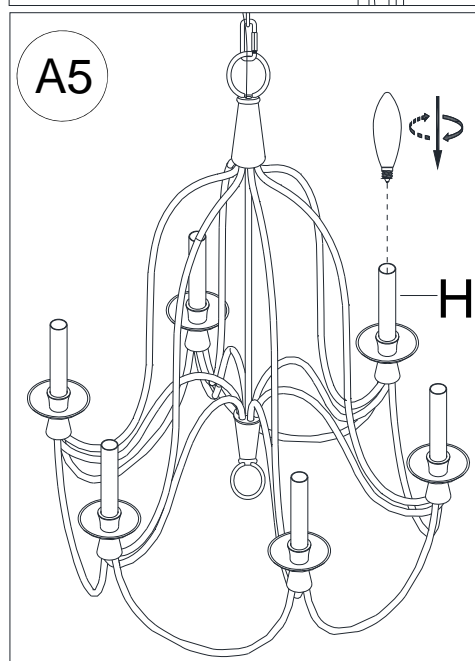


Insert the specified light bulbs into the Sockets (H).
DO NOT EXCEED THE SPECIFIED WATTAGE.

To Make the Wire Connections:

1. Gently pull existing wire down from the ceiling junction box and allow wires to hang. The HOT or LIVE wire is usually black. The NEUTRAL wire is usually white. Check to see if there is a ground wire that is usually green or green with a yellow stripe or exposed copper metal wire. If needed, use a pair of wire strippers to remove about 1/2 inch of insulation from each wire.
2. Carefully inspect the fixtures wires. The NEUTRAL FIXTURE WIRE has FINE LONGITUDINAL RIDGES running along its length. The HOT FIXTURE WIRE is SMOOTH and the BARE COPPER WIRE is the GROUND WIRE. If you have any doubt and cannot identify the power-supply wires with confidence, then we recommend that you ask an electrician and that you not continue with the installation.

3. With the help of another person to hold the weight of the fixture, attach the fixture wires to the junction box wires as shown in the illustrations.

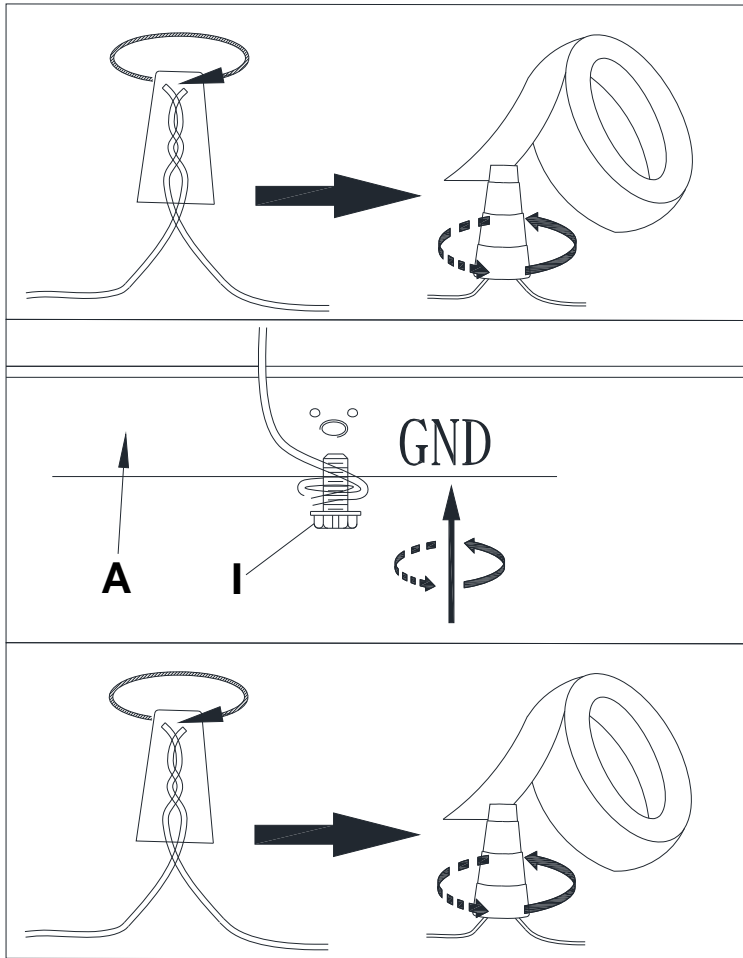

Connect the GROUND FIXTURE WIRE to the GROUND J-BOX WIRE using the Plastic Wire Nut Connector (M) and wrap the connection with electrical tape. Be sure that no wire strands are exposed.

If the junction box DOES NOT have a GROUND WIRE, wrap the fixture's bare ground wire around the Green Ground Screw (I) and insert the screw into the Mounting Strap (A), marked as "GND", and tighten screw to secure the wire.

Connect the NEUTRAL FIXTURE WIRE to the NEUTRAL J-BOX WIRE first and then connect the HOT FIXTURE WIRE to the HOT J-BOX WIRE using the Plastic Wire Nut Connectors (M). Wrap these connections with electrical tape. Be sure that no wire strands are exposed.

NOTE:

IT IS IMPERATIVE THAT THE JUNCTION BOX IN YOUR HOME BE PROPERLY GROUNDED!

DO NOT REVERSE THE HOT AND NEUTRAL CONNECTIONS OR SAFETY WILL BE COMPROMISED.

4. Check the wiring connections and if all looks good, gently tuck the wire connections neatly into the ceiling junction box.

Care instructions:

- Wipe clean with a soft, dry cloth or static duster.
- Always avoid the use of harsh chemicals or abrasive cleaners as they may cause damage to the fixture's finish.

Thank you for your purchase
Stores | catalog | www.potterybarn.com
USA 1.888.779.5176