

P O T T E R Y B A R N

Arched wall Sconce

Important Safety Instructions:

- For safety purposes, this lamp is equipped with a polarized plug (one blade is wider than the other). If the plug does not fit securely into your outlet, do not force it – contact a professional electrician. Use the plug with an extension cord only if it can be fully inserted into the cord's socket. Never alter the plug in any way.
- These instructions are provided for your safety. It is important that they are read carefully and completely before assembling fixture.
- This fixture has been rated for up to (1) **75-watt TYPE A standard bulb** (not included). To avoid the risk of fire, do not exceed the recommended wattage.

Warning:

- To reduce the risk of fire, electrical shock, or personal injury, always turn off and unplug lamp and allow it to cool prior to replacing light bulb.
- Do not touch bulb when fixture is turned on. Do not look directly at lit bulb.
- Keep flammable materials away from lit bulb.

Pre-assembly:

- Remove all parts and hardware from box along with any plastic protective packaging.
- Do not discard any contents until after assembly is complete to avoid accidentally discarding small parts or hardware.

Parts Enclosed:

- Mounting plate (A)
- Back plate (B)
- Adjustable screw (C)
- Upper lamp body (D)
- Saddle (E)
- Harp caps (F)
- Harp (G)
- Harp nipple (H)
- Shade (I)
- Finial (J)

Hardwires Enclosed:

- (2) Mounting screw (a)
- (4) Plate screws (b)


To Assemble:

1. Attach the mounting plate (A) to the outlet box using the 2 mounting screws (a), then attach the back plate (B) to the mounting plate (A) using the 4 plate screws (b).
2. Gently squeeze both sides of the harp (G) and insert the ends into the saddle (E). Lower the two harp caps (F) until they cover the two-pronged saddle on the lamp base .
3. Insert a bulb Max 75 W Type A (not included).
4. Unscrew the finial (J) from the harp nipple (H) and place the shade over the assembled harp, making sure the nipple extends through the hole at the top of the shade.
5. Attach the finial and tighten to secure the shade.
6. Slide upper lamp body (D) to a desired location
7. Turn adjustable screw (C) until tight.
8. Plug fixture into outlet.

Assembly is complete.

Care Instructions:

- Clean with soft, dry cloth or static duster.
- Always avoid the use of harsh chemicals or abrasive cleaners as they may cause damage.

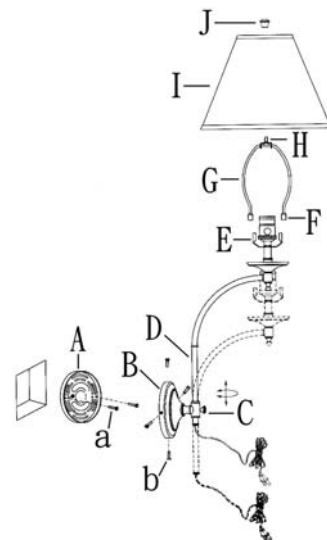

thank you for your purchase