




Turn off water supply lines. Remove existing faucet. Clean area on lavatory sink surface before installing new faucet. Make sure drain is closed or blocked to avoid small parts falling down to the drain.

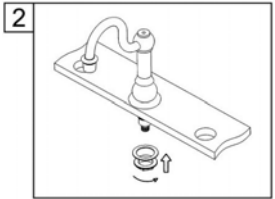


Install new faucet spout assembly into the center hole of the sink. Align spout (G1). Tighten mounting hardware (G3,4&5) from underneath the sink.

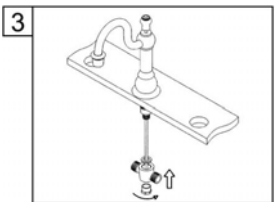


Screw "T" connector (G6,7,8,9&10.) onto the end of the spout (G1) Stop when it seals. Insert pop-up rod (G2) into the hole on top of the spout.

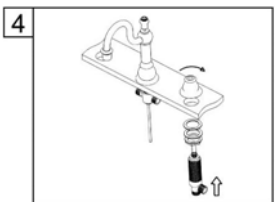


Insert both assemblies (G15,16,17,18,19,20&21) from underneath the sink. Be sure the hot is on the left side and cold is on the right side. The stem on the left side of the spout (hot) is labeled with a red o-ring, cold side with blue. Hold the body in proper position; tighten mounting hardware (included) at the top first. Be sure both sides have the same height of threads exposed. Hand tighten the bottom hardware from underneath the sink.

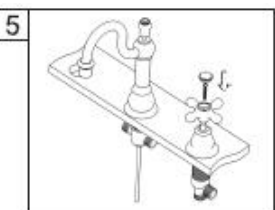


Mount cross-handles (G11,12,13&14) on the stem of handle assemblies. Tighten the set screws on the side of cross-handle.

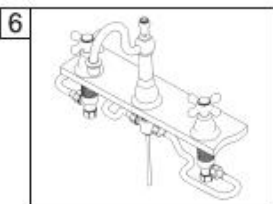


Connect the flexible tubes (G22) from the supply shank side port (G21) to the Spout Tee (G7). Reattach the supply lines, turn on the water supply, and check for leaks.

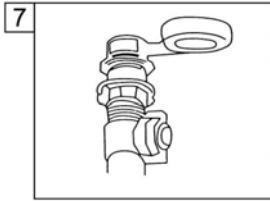


Thread mounting nut and bottom gasket onto drain body (G27). Wrap top threaded end of the drain body with plumbers' tape.

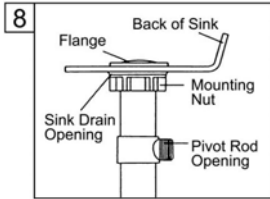


Install drain body (G27) up through the drain opening and reattach the flange (G25&26) onto drain body, holding the drain body in position with pivot rod opening facing the back of sink. Tighten the mounting nut by hand.

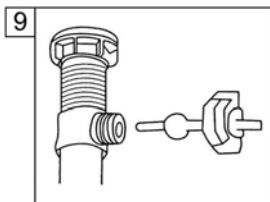


Place pivot rod (G28&29) into pivot rod opening. Slide pivot nut (G30) over pivot rod and thread it on the drain body. Tighten firmly.

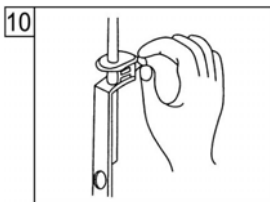

With lift rod in position on the faucet, insert lift rod through lift rod strap (G32) and secure with the clevis screw (G33).

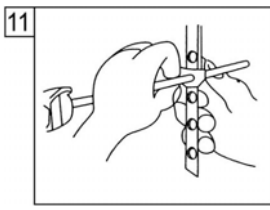

Guide the pivot rod (G29) through one of the holes on the lift rod strap (G32). Secure it with the spring clip (G31). Adjust the height of the lift rod by resetting the clevis screw.

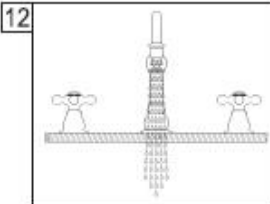

Remove the aerator before turning on your new faucet for the first time. Allow both hot and cold water to run for one minute. Replace aerator. Assembly is complete.

