

POTTERY BARN

Sylvia Accent Table Assembly Instructions

Pre-assembly:

- Please read all instructions before beginning assembly.
- For your safety and convenience, assembly by two people is recommended.
- Use the parts and hardware lists to identify and separate each of the components included.
- Save all packing materials until assembly is complete to avoid the accidental discarding of smaller parts or hardware.

Parts Included:


- (1) Support post (A)
- (1) Rim (B)
- (1) Base with levelers (C)
- (1) Tabletop (D)

Hardware Enclosed:

- (1) Bolt (E)
- (1) Wrench (F)
- (1) Flat washer (G)
- (1) Lock washer (H)

Assembly instructions:

1. Connect and attach the support post (A), rim (B) and the base (C) together. (Fig. 1)
2. Place the lock washer (H) and the flat washer (G) into the bolt (E). Insert bolt with washers into the pre-drilled hole of the base and tighten with the wrench (F) to secure pieces together. (Fig. 1)
3. Secure and attach the tabletop (D) by turning the tabletop clockwise onto the post (A). (Fig. 2)
4. Assembly is complete.

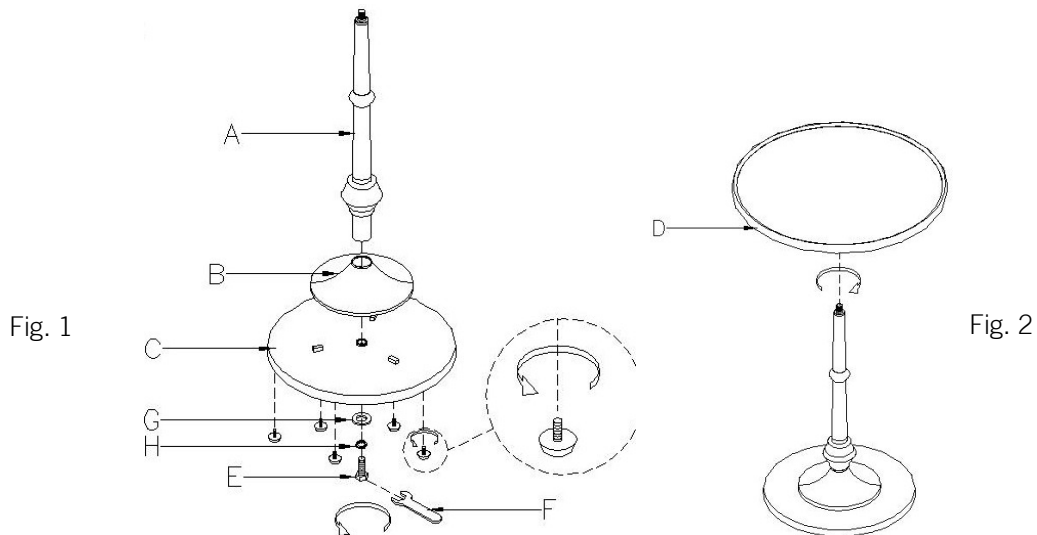

Adjusting Levelers:

Due to an uneven floor the furniture may not sit level causing it to wobble. If the piece wobbles, determine which corner does not touch the ground correctly. With two people follow these steps:

1. Carefully elevate the item slightly to provide access to the levelers attached to the bottom.
2. Turn the levelers until adequate contact will be made with the floor. Gently set down the piece and check stability.
3. Repeat steps until furniture sits firmly on the ground.

Care Instructions:

- Wipe with a soft damp cloth. Wipe dry immediately.
- Avoid the use of all cleaners and abrasives.