

# P O T T E R Y B A R N

## Mercer Picture Hook

Note: For safe mounting, it is essential to use the proper hardware for your wall type. Be sure to consult your local hardware store to determine the hardware needed for your wall type (plaster, drywall, concrete, etc.). Mount to wood studs whenever possible. Note: For stud mounting the anchors are not required, use only the screws.

Note: **MAXIMUM TOTAL WEIGHT CAPACITY IS 25 POUNDS (11.4 KG).**

### Parts and Hardware Included:

- (1) Frame back with hook
- (1) Frame cover
- (1) Face paper
- (2) Dry wall anchors
- (2) Screws

### Mounting Instructions:

1. Hold the frame back with hook at desired location. With a pencil, mark on the wall the screw hole location. These marks will be used to determine the location of your mounting hardware.
2. Remove from wall. Use a carpenter's level or measure up from the floor at each mark to ensure the picture frame will be level.
3. For dry wall mount : use a Phillips screwdriver to insert the wall anchors. Slowly turn the anchors until they are threaded into the wall.
4. Align the frame back with hook on the wall over the anchors, insert the screws with screwdriver until tight (caution do not over tighten the screws).
5. Cut your photo at the same size as face paper.
6. Slide the frame cover onto the frame back.

For stud mount : no need to install anchors simply align the frame back on the wall where the marked locations are and insert the screws.

### Care Instructions:

Wipe with a soft, dry cloth. To protect the finish, do not use household cleaners or abrasives.

