

POTTERY BARN

TORTOISE GLASS TABLE LAMP

Important Safety Instructions

- For safety purposes, this lamp is equipped with a polarized plug (one blade is wider than the other). If the plug does not fit securely into your outlet, do not force it – contact a professional electrician. Use the plug with an extension cord only if it can be fully inserted into the cord's socket. Never alter the plug in any way.
- These instructions are provided for your safety. It is important that they are read carefully and completely before assembling fixture.
- This fixture has been rated for up to (1) **150-watt maximum TYPE A standard bulb** (not included).
- To reduce the risk of fire, electrical shock, or personal injury, always turn off and unplug lamp and allow it to cool prior to replacing light bulb.
- Do not touch bulb when fixture is turned on or look directly at lit bulb.
- Keep flammable materials away from lit bulb.

Parts Included:


- (1) Finial (A)
- (1) Threaded Nipple (B)
- (1) Harp (C)
- (1) Harp Saddle (D)
- (1) Polarized Plug (E)
- (1) Protective Plug Cap (F)

Pre-Assembly:

- Remove all parts from box along with any plastic protective packaging.
- Do not discard any contents until after assembly is complete to avoid accidentally discarding any small parts.

Assembly Instructions:

- (1) Place harp (C) into harp saddle (D) by squeezing harp inward and placing into opening of harp saddle.
- (2) Remove finial (A) from harp (C).
- (3) Slide center ring of shade spider, located inside shade (shade sold separately) down onto threaded nipple (B).
- (4) Thread finial (A) onto threaded nipple (B) to secure shade to lamp.
- (5) Install one (1) Type A, 150-watt maximum bulb into socket.
- (6) Remove protective plug cap (F) from polarized plug (E).
- (7) Plug lamp into wall outlet.

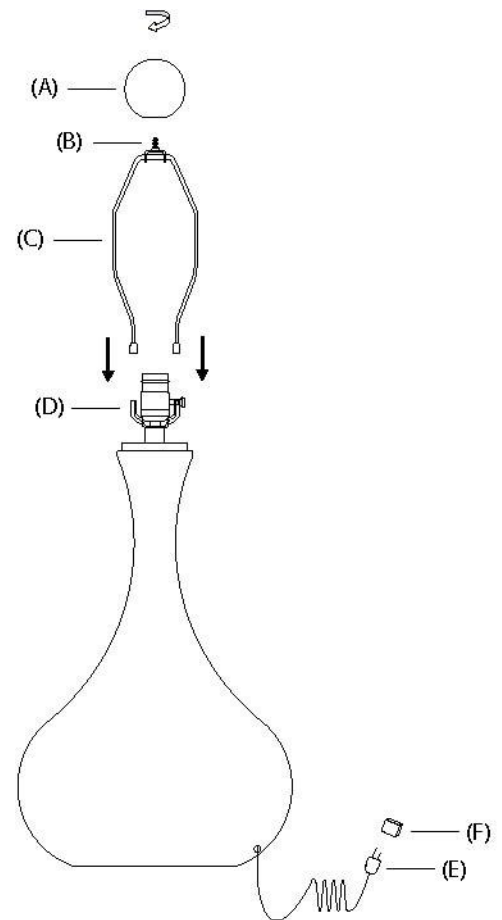

Care Instructions

- Wipe with soft dry cloth only
- Always avoid the use of chemicals or abrasives as they may damage the finish.

thank you for your purchase

stores | catalog | www.potterybarn.com