

P O T T E R Y B A R N

Cafe String Lights

IMPORTANT SAFETY INSTRUCTIONS:

- These instructions are provided for your safety. It is important that the user read carefully and thoroughly before installing fixture.
- These string lights are intended for temporary (90 days maximum) indoor or outdoor use only when conditions are favorable (dry).
- Do not connect together more than sixty (60) lamps total at one time or safety may be compromised.
- The lights may be draped safely over banisters, hooks, nails, tree branches, etc.

PRE-ASSEMBLY:


- Remove all product components from box along with protective packaging.
- Do not discard any contents until after assembly is complete to avoid accidentally discarding small parts or hardware.

PARTS INCLUDED:

- (20) Plastic Caps (A), the plastic cap is already installed on lampholder.
- (20) Metal Shade (D)
- (1) Electric kit including: (20) Lampholders (B), (20) Light bulbs (E), (1) Light String (C), (2) Spare Light bulbs and (1) Spare Fuse.

ASSEMBLY INSTRUCTIONS:

1. Make sure light string (C) is unplugged from power source.
2. Insert lampholder (B) only into center hole of metal shade (D).
3. Insert plastic cap (A) on the top of lampholder (B), and ensure each lampholder on the entire string light (C) is securely assembled into the hollow of each plastic cap (A).
4. Push 1/2 pillar of plastic cap (A) into metal shade (D).
5. Turn over metal shade (D) over. Put metal shade (D) onto firm surface, then, push lampholder (B) into the top of plastic cap (A) for assembly.
6. Push metal shade (D) all the way into the lampholder (B) and plastic cap (A) and make sure it is firmly secured.
7. Install light bulb (E) into lampholder (B) by turning clockwise, do not over tighten.
8. Follow above steps for each lampholder (B).

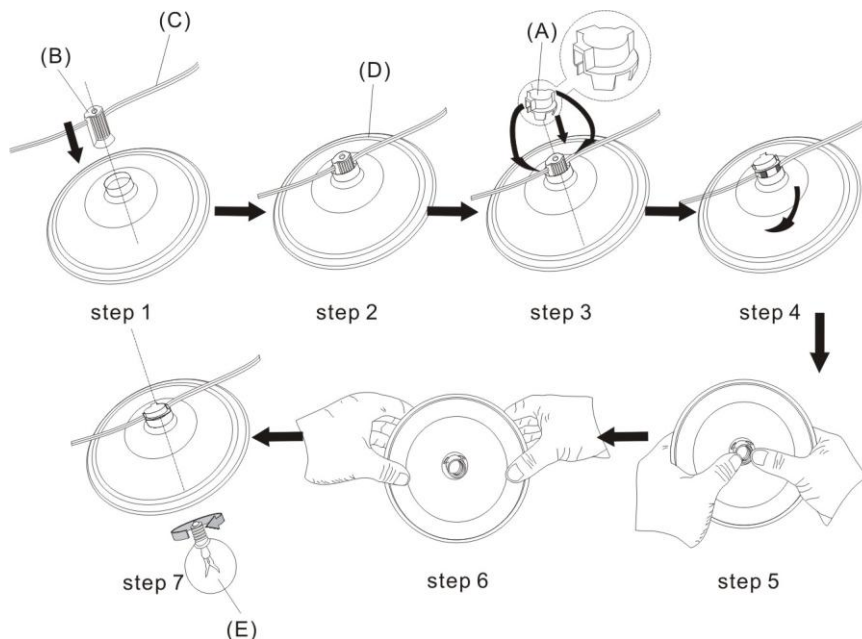

Thank you for your purchase

Stores | Catalog | www.potterybarn.com