

P O T T E R Y B A R N

Gillian floor lamp base

Important Safety Instructions:

- For safety purposes, this lamp is equipped with a polarized plug (one blade is wider than the other). If the plug does not fit securely into your outlet, do not force it – contact a professional electrician. Use the plug with an extension cord only if it can be fully inserted into the cord's socket. Never alter the plug in any way.
- These instructions are provided for your safety. It is important that they are read carefully and completely before assembling fixture.
- This fixture has been rated for up to (1) 3-WAY **150-watt maximum TYPE A standard bulb** (not included). To avoid the risk of fire, do not exceed the recommended wattage.
- For your safety, use only shades with an open top with a measurement of at least 4.5" in diameter.

Warning:

- To reduce the risk of fire, electrical shock, or personal injury, always turn off and unplug lamp and allow it to cool prior to replacing light bulb.
- Do not touch bulb when fixture is turned on or look directly at lit bulb.
- Keep flammable materials away from lit bulb.

Pre-assembly:

- Remove all parts and hardware from box along with any plastic protective packaging.
- Do not discard any contents until after assembly is complete to avoid accidentally discarding small parts or hardware.

Parts enclosed:


- Finial (A)
- (1) Harp (C) including pre-assembled:
 - (2) Harp caps (D)
 - (1) Harp nipple (B)
- Socket (E)
- Saddle (F)
- Upper Pole (G)
- Lower Pole (H)
- Lamp base (I)

To Assemble:

1. Attach the Upper Pole (G) onto the Lower Pole (H) by turning in a clockwise direction.
2. Attach the lamp base (I) to the Lower Pole (H) by turning in a clockwise direction
3. Gently squeeze both sides of the harp (C) and insert the ends into the saddle (F). Lower the two harp caps (D) until they cover the two-pronged saddle on the Upper Pole (G).
4. Insert bulb (not included) into threaded socket (E).
5. Unscrew the finial (A) from the harp nipple (B) and place the desired shade (sold separately) over the assembled harp, making sure the nipple extends through the hole at the top of the shade.
6. Attach the finial. Tighten to secure the shade.
7. Plug into proper electrical outlet and test fixture.
8. Assembly is complete.

Care Instructions:

 - Wipe with soft dry cloth only.
- Always avoid the use of harsh chemicals or abrasives as they may damage the finish.

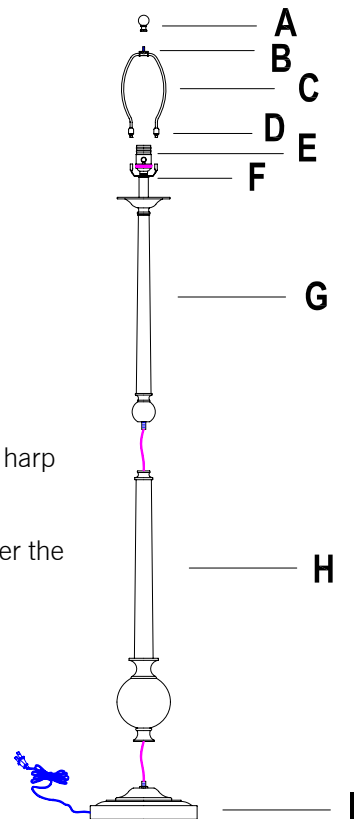

thank you for your purchase

stores | catalog | www.potterybarn.com