

# P O T T E R Y B A R N

## ALISSA TASK LMP PN

Assembly Instructions

### **IMPORTANT SAFETY INSTRUCTIONS:**

- For safety purposes, this lamp is equipped with a polarized plug (one blade is wider than the other). If the plug does not fit securely into your outlet, do not force it – contact a professional electrician. Use the plug with an extension cord only if it can be fully inserted into the cord's socket. Never alter the plug in any way.
- These instructions are provided for your safety. It is important that they are read carefully and Completely before assembling fixture.
- This fixture has been rated for up to (1) 40-WATT MAXIMUM TYPE B STANDARD bulb (not included). To avoid the risk of fire; do not exceed the recommended wattage.
- Save these instructions.

### **Installation Instruction:**

- With help of knob, (A) & (B) the lamp can be adjusted.
- Remove plug cover from plug.
- Plug into proper electrical outlet. Installation is complete.

### **Warning:**

- To reduce the risk of fire, electrical shock, or personal injury, always turn off and unplug lamp and allow it to cool prior to replacing light bulb.
- Do not touch bulb when fixture is turned on or look directly at lit bulb.
- Keep flammable materials away from lit bulb.

### **Care Instructions:**

- Wipe with soft dry cloth only.
- Always avoid the use of harsh chemicals or abrasives as they may damage the finish.



thank you for your purchase  
stores | catalog | [www.potterybarn.com](http://www.potterybarn.com)