

# P O T T E R Y B A R N

## Acrylic Panel Clock

### Operating Instructions

#### TO INSTALL BATTERY:

1. Pull out the metal cover on back of the clock.
2. Insert a new 1.5 volt "AA" battery. (Battery not included.) Match the battery direction to the polarity markings displayed inside the compartment. Movement should start immediately. Should clock fail to function properly replace with a new battery and ensure that it is correctly positioned in the battery compartment.
3. Replace metal cover.

#### TO SET TIME:

- The TIME SET dial is located inside the metal cover on back of the clock.
- Pull the TIME SET dial and turn counter clockwise as indicated by the arrow until correct time is reached. Do not touch or move hands of clock manually.

#### TO SET ALARM TIME:

- Push TIME SET dial and turn clockwise until correct alarm time is reached.
- Make sure the alarm stopper is positioned to "ON".

#### CARE INSTRUCTIONS:

- Clean clock with a soft, dry cloth.
- Do not use solvents or abrasive cleaners on the clock as they may damage the finish.
- Avoid sharp items as they may scratch the acrylic surface.

#### BATTERY CARE:

- Batteries should be handled under adult supervision.
- To avoid explosion or leakage, do not dispose of batteries in a fire or attempt to recharge standard or alkaline batteries.
- Please dispose of batteries safely according to the battery manufacturer's instructions or recycle battery per state and local codes.
- If battery leakage occurs and comes in contact with the skin or eyes, wash immediately with plenty of water.
- If the clock is not to be used for a long period of time, remove the battery to prevent damage or injury from possible battery leakage.

