

Williams-Sonoma Inc.

Pottery Barn – Pottery Barn Teen – Pottery Barn Kids –Williams Sonoma Home –West Elm –Rejuvenation –Mark and Graham - GreenRow

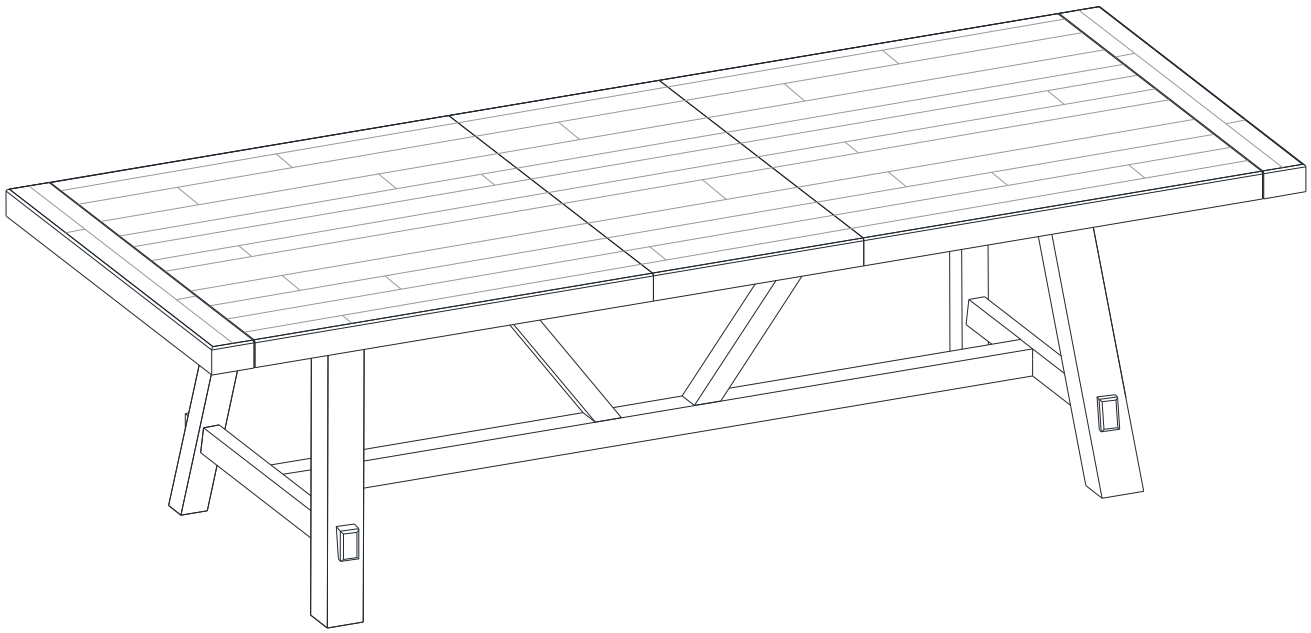

FARMHOUSE

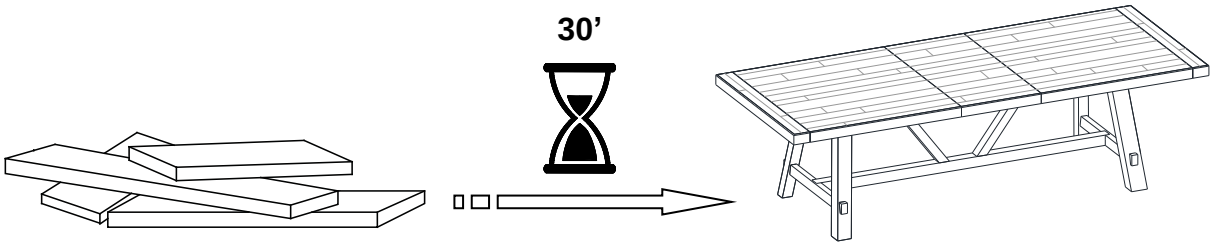

ENGLISH

- Do not dispose of any packaging or contents of the shipping carton until assembly is completed to avoid accidentally discarding small parts or hardware.

⚠**FRANÇAIS**

- Ne jetez rien des produits d'emballage et du contenu de la boîte jusqu'à ce que l'assemblage soit terminé, afin d'éviter de jeter par mégarde de petites pièces ou des morceaux.

⚠**ESPAÑOL**

- Para evitar desechar accidentalmente las partes pequeñas o las piezas de ferretería, no tirar el embalaje o contenido de la caja hasta que el ensamblaje esté completo.

Care Instructions:


- Dust often using a clean, soft, dry and lint-free cloth.
- When blot spills, wipe with a clean, damp cloth immediately.
- We do not recommend the use of chemical cleansers, abrasives or furniture polish on our lacquered finish.
- Hardware may loosen over time. Periodically check to make sure all connections are tight. Re-tighten if necessary.


Instructions d'entretien :


- Épousseter régulièrement avec un chiffon propre, doux et non pelucheux.
- Éponger immédiatement les liquides renversés et essuyer à l'aide d'un chiffon propre et humide.
- L'utilisation de produits nettoyants chimiques, d'abrasifs ou d'encaustiques sur nos finitions laquées n'est pas recommandée.
- Le matériel de fixation peut se desserrer avec le temps. Vérifiez régulièrement afin de vous assurer que tous les raccords sont bien serrés. Resserrez-les au besoin.

Instrucciones de cuidado:


- Limpiar el polvo con un trapo limpio, suave, seco y libre de pelusas.
- Secar los derrames de inmediato y limpiar con un trapo limpio y húmedo.
- Recomendamos no usar limpiadores químicos, abrasivos o lustramuebles sobre el acabado barnizado.
- Las piezas de ferretería pueden aflojarse con el tiempo. Controlar periódicamente que estén bien ajustadas.Si es necesario, volver a ajustarlas.

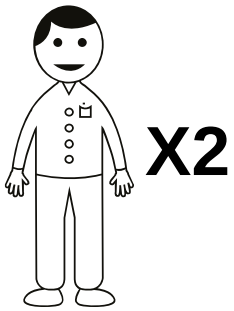


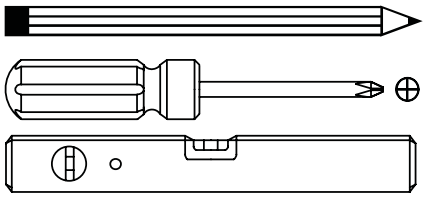


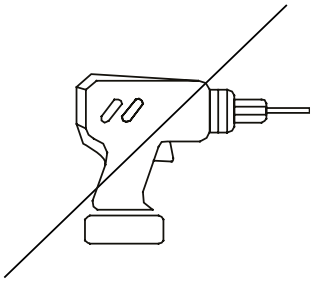



NOT INCLUDED / NON INCLUS / NO INCLUIDAS

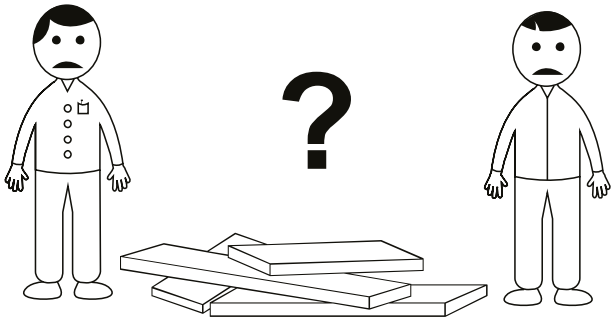


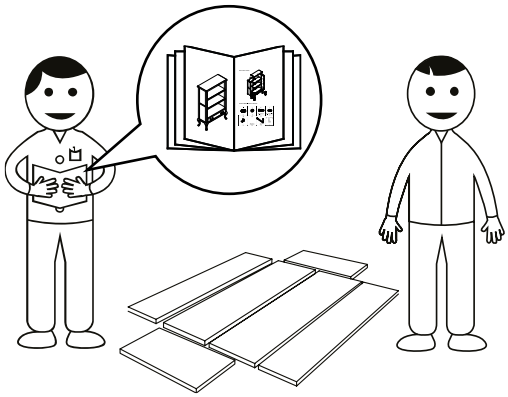

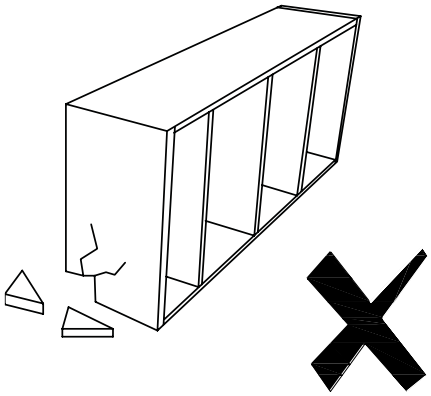

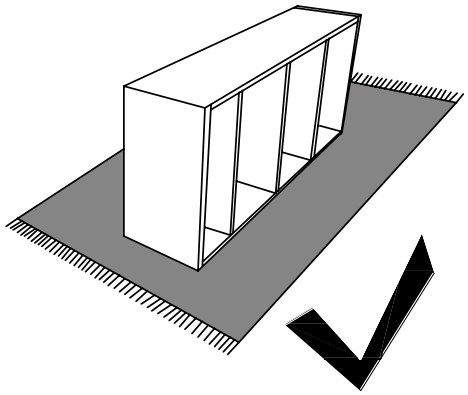

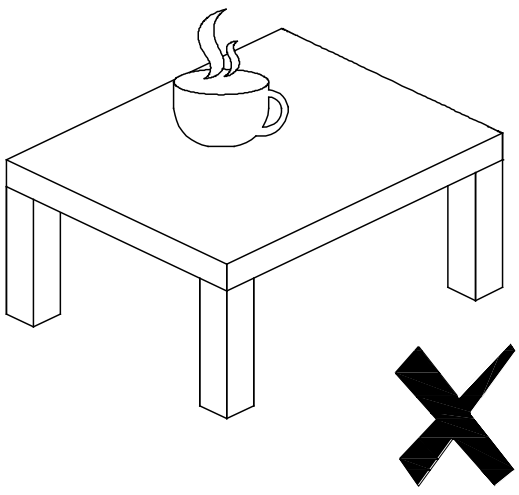


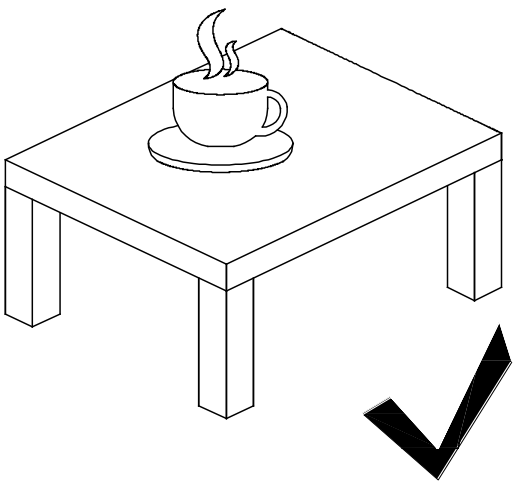








Williams-Sonoma Inc.

Assembly Instructions
Instructions d'assemblage
Instrucciones de Ensamblaje


Pottery Barn – Pottery Barn Teen – Pottery Barn Kids –Williams Sonoma Home –West Elm –Rejuvenation –Mark and Graham - GreenRow

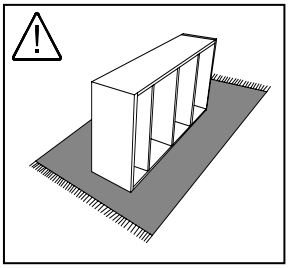


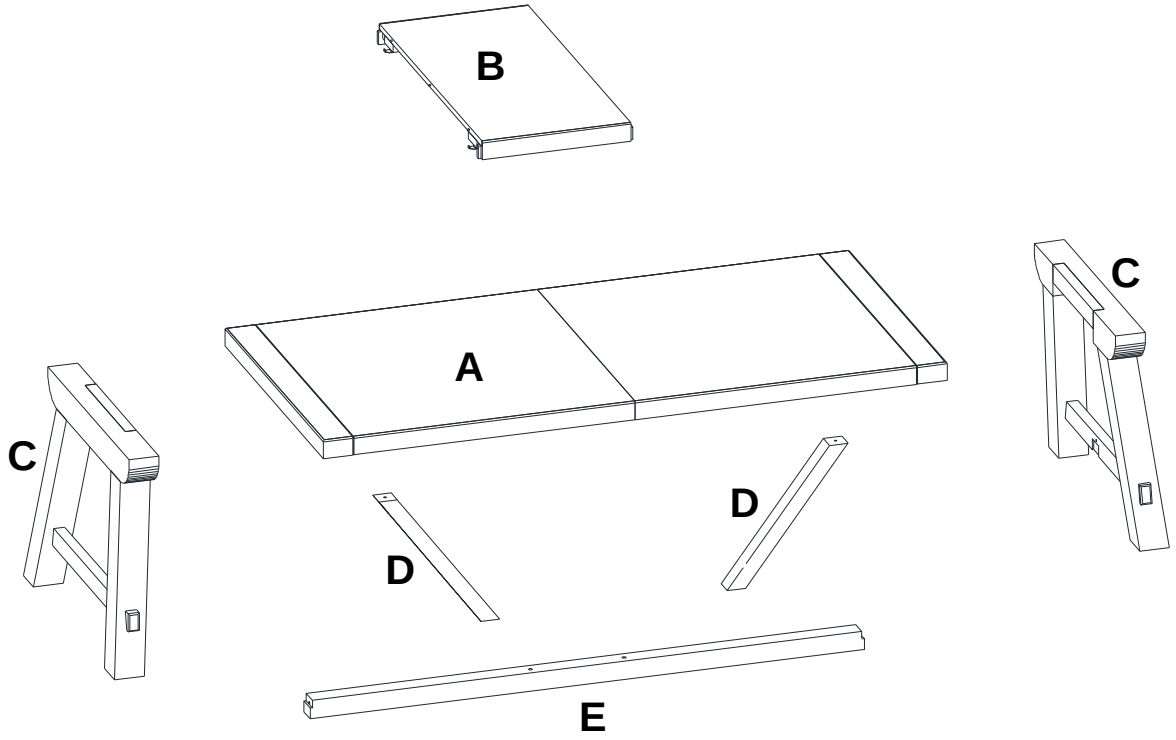

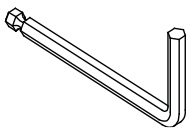F	G	H	I	J	K
					
Ø20mm x Ø8mm, 16x	**Ø12mm x Ø8mm, 16x**	**M8x50mm, 10x**	**M8x80mm, 2x**	**M8x60mm, 4x**	**Ø5mmx 125mm, 1x**

1

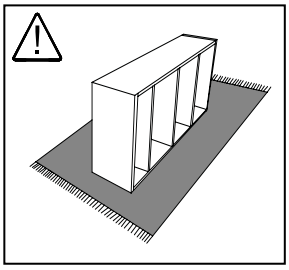


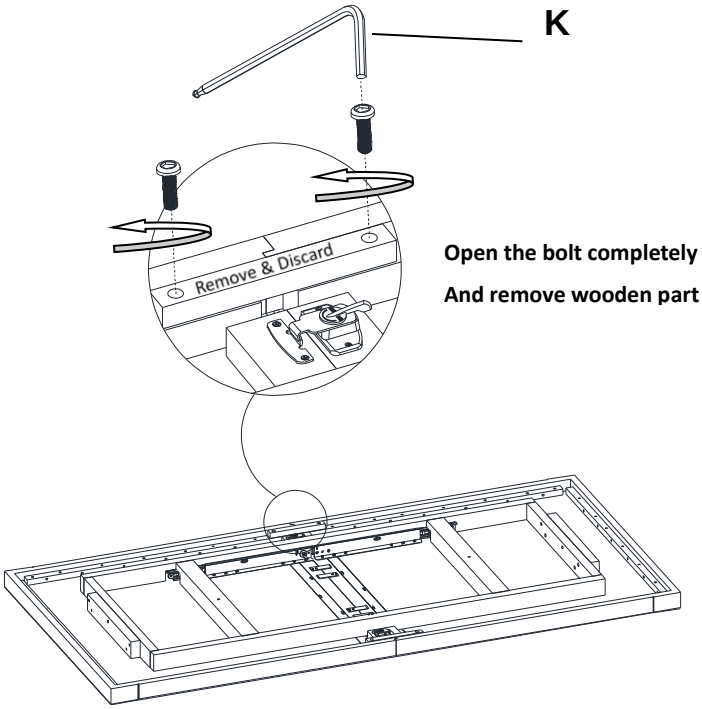


Open the bolt completely


And remove wooden part


2

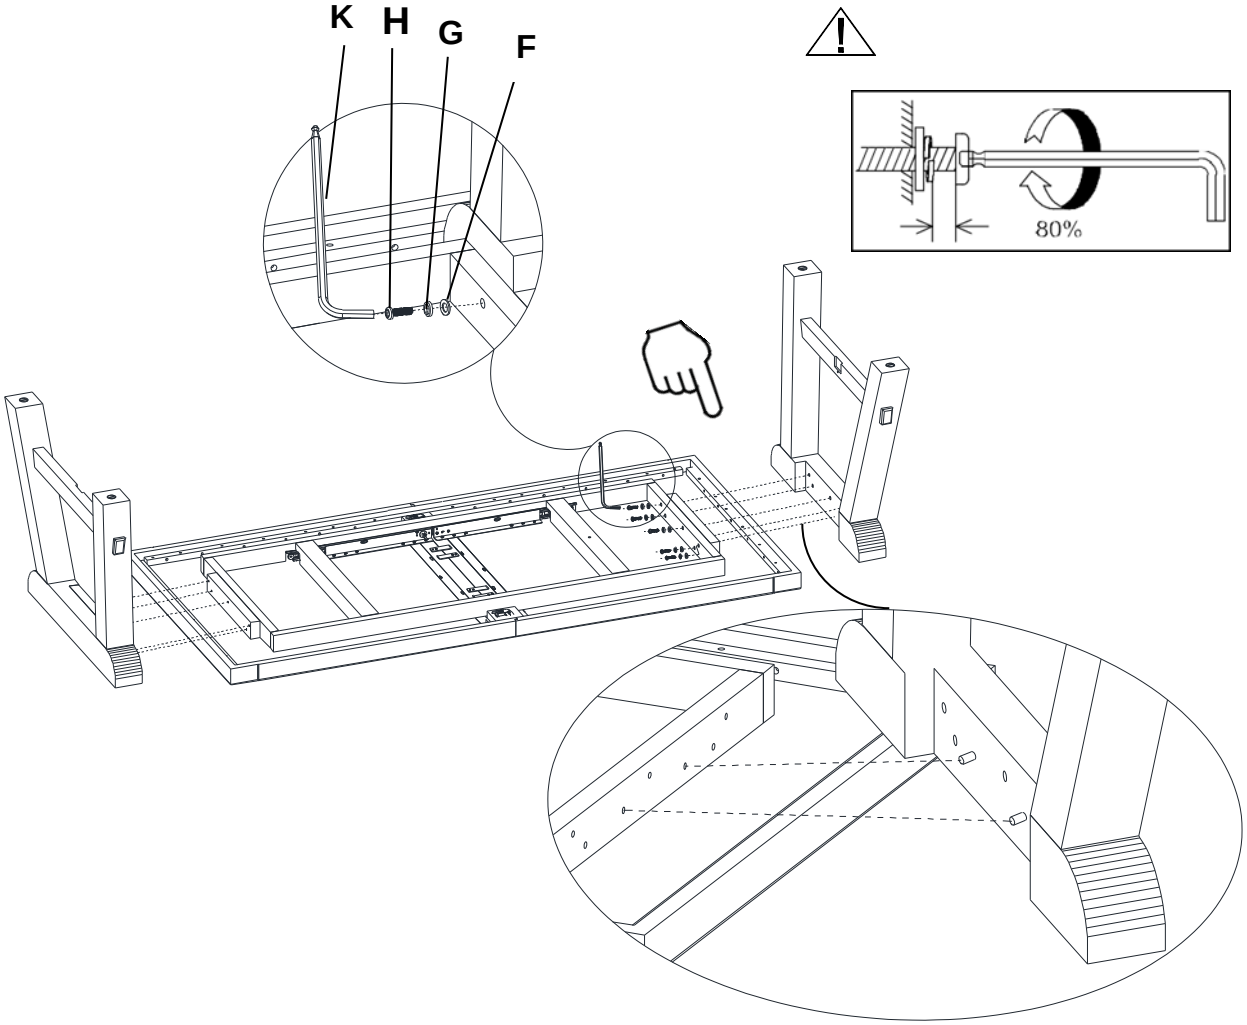


3

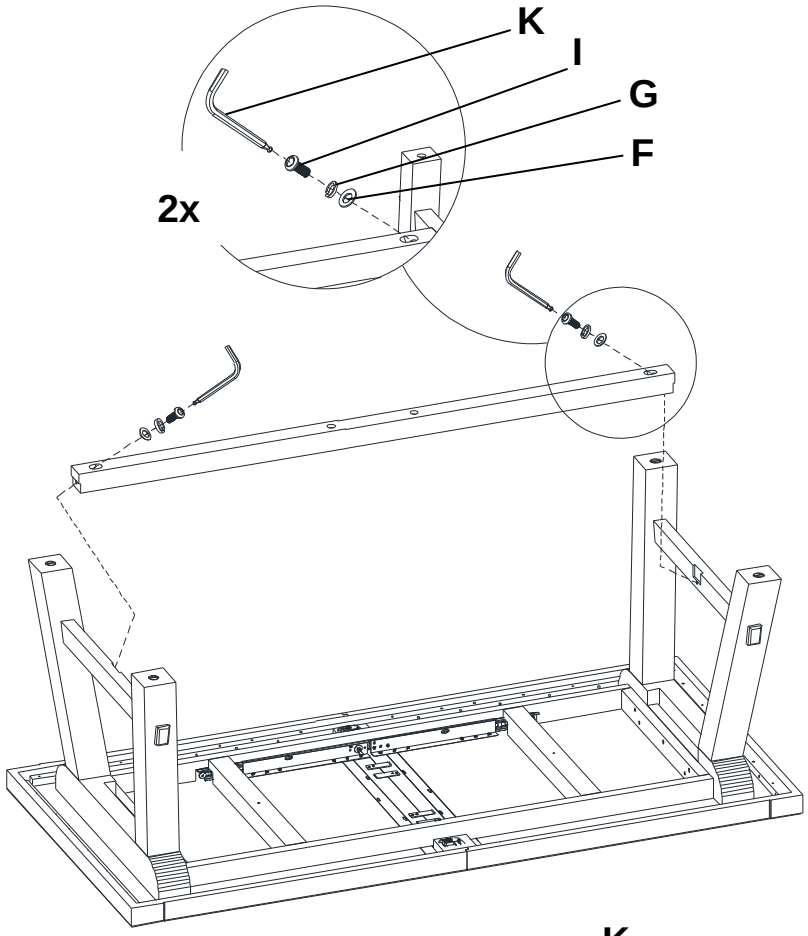


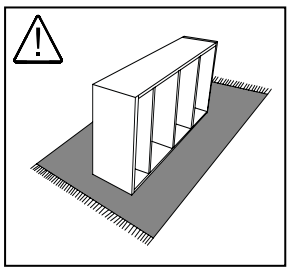

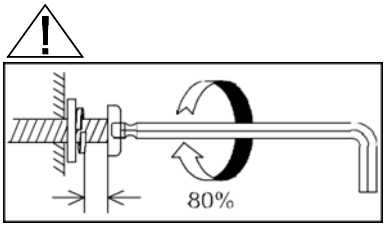



4

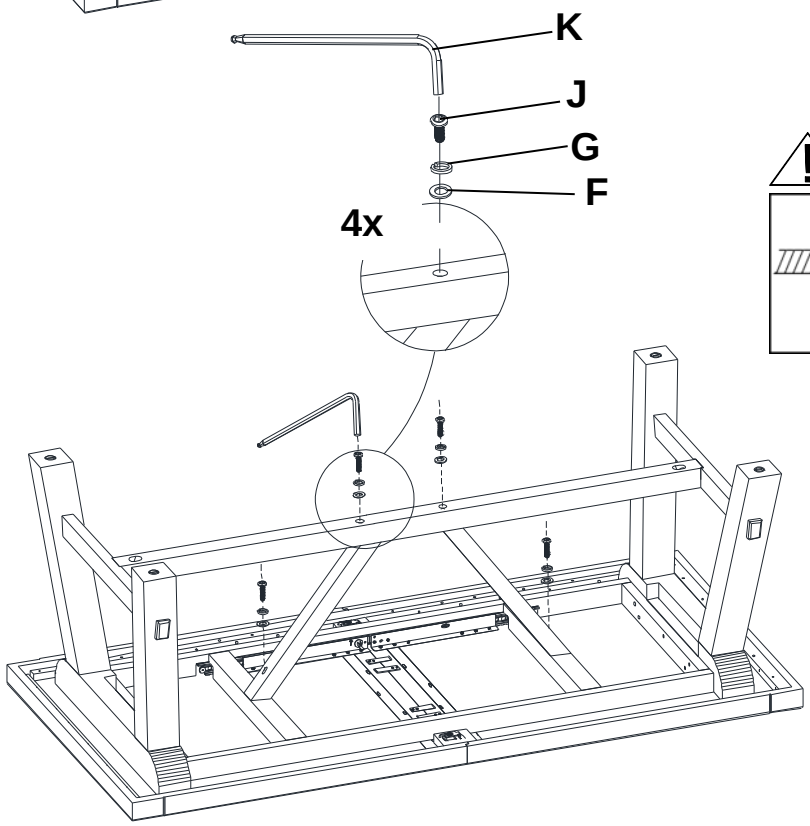


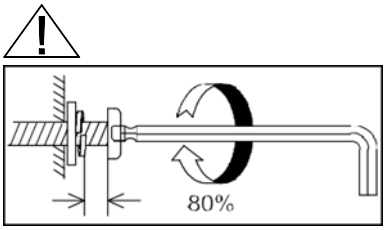


5

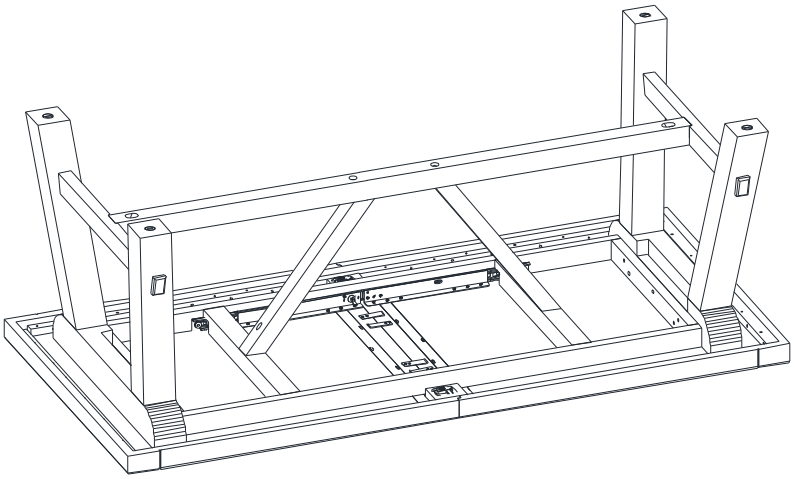

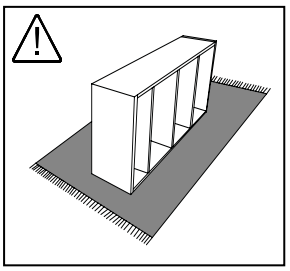


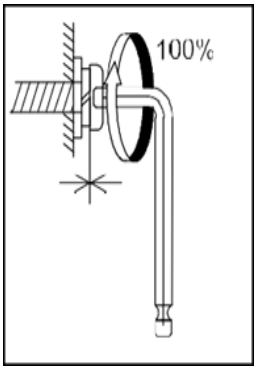

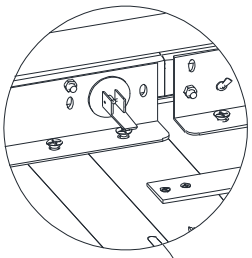


Always Keep lock open.


6

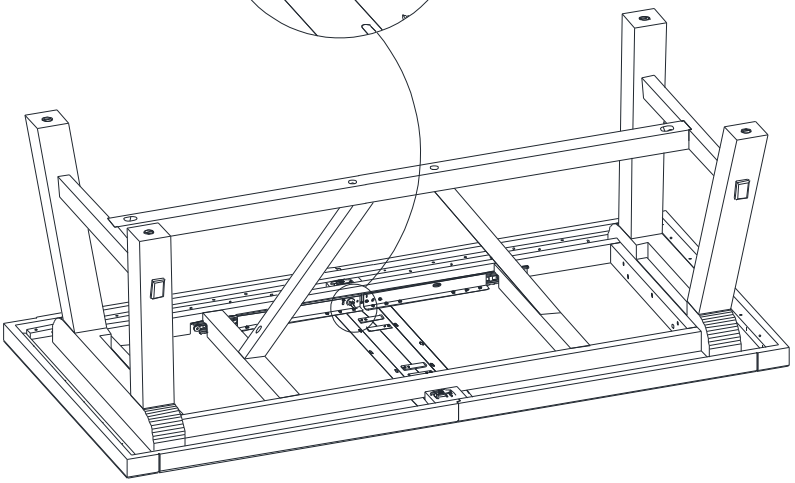


7

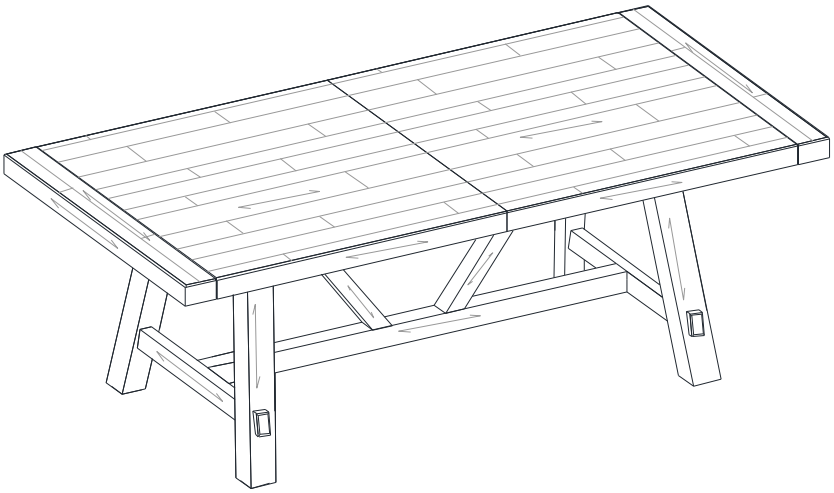


8

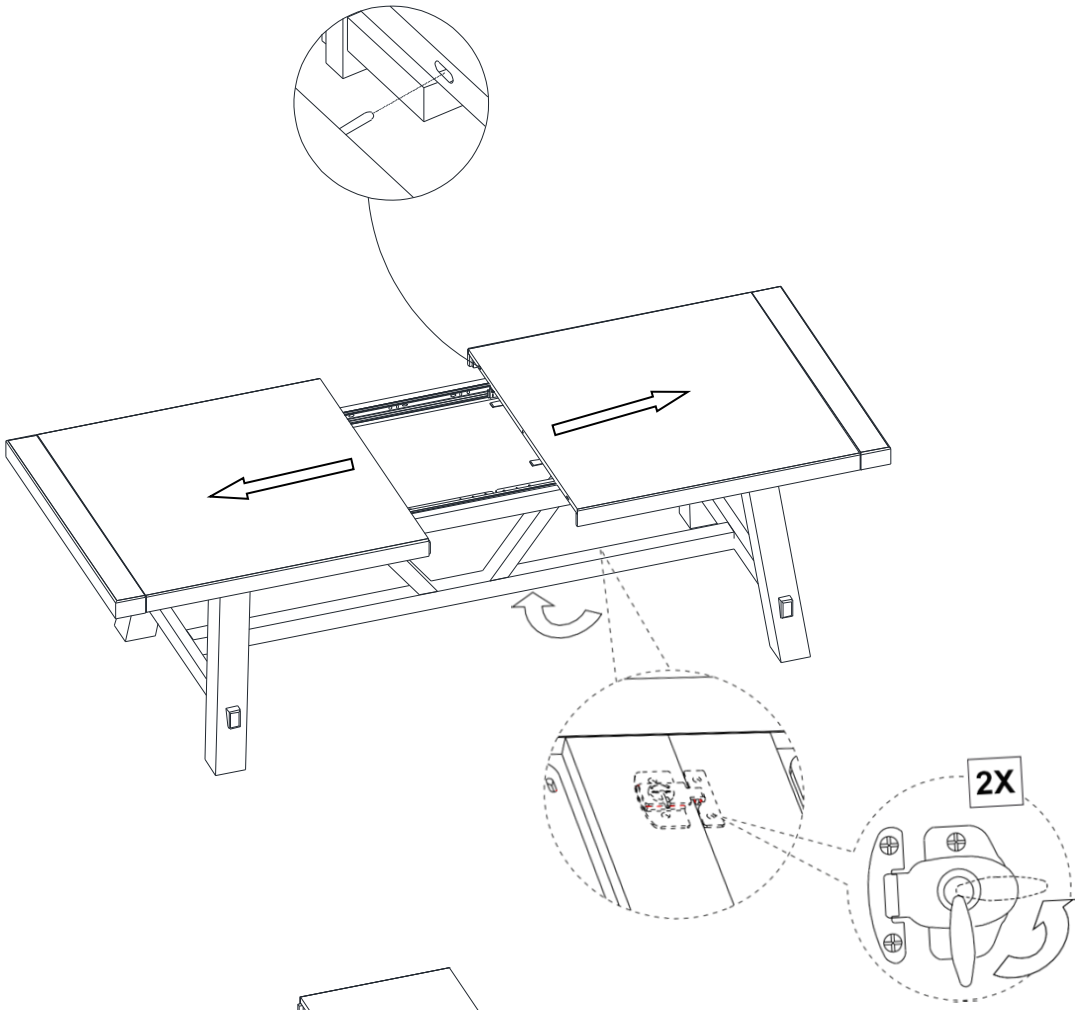


9

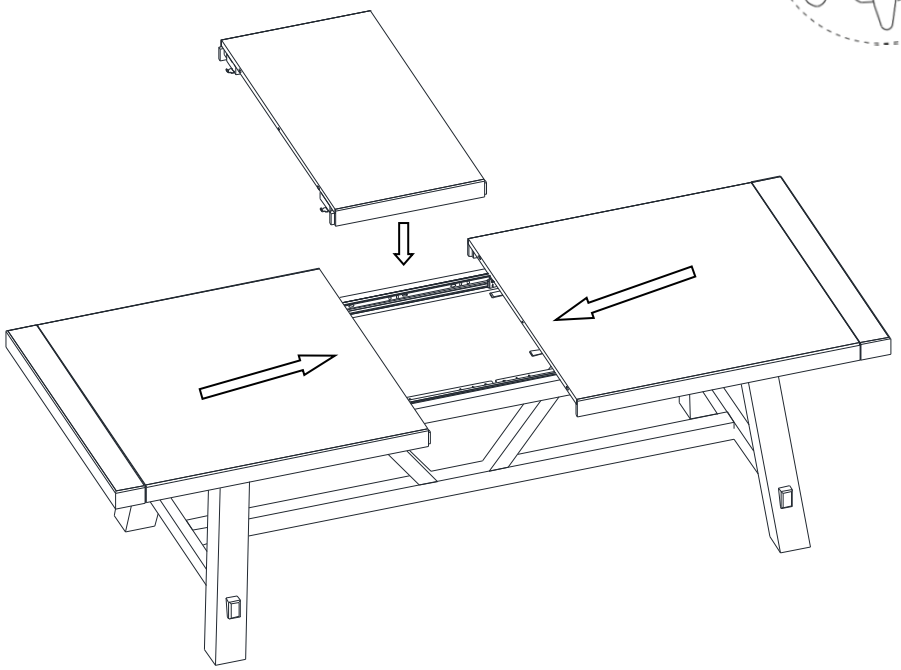

10

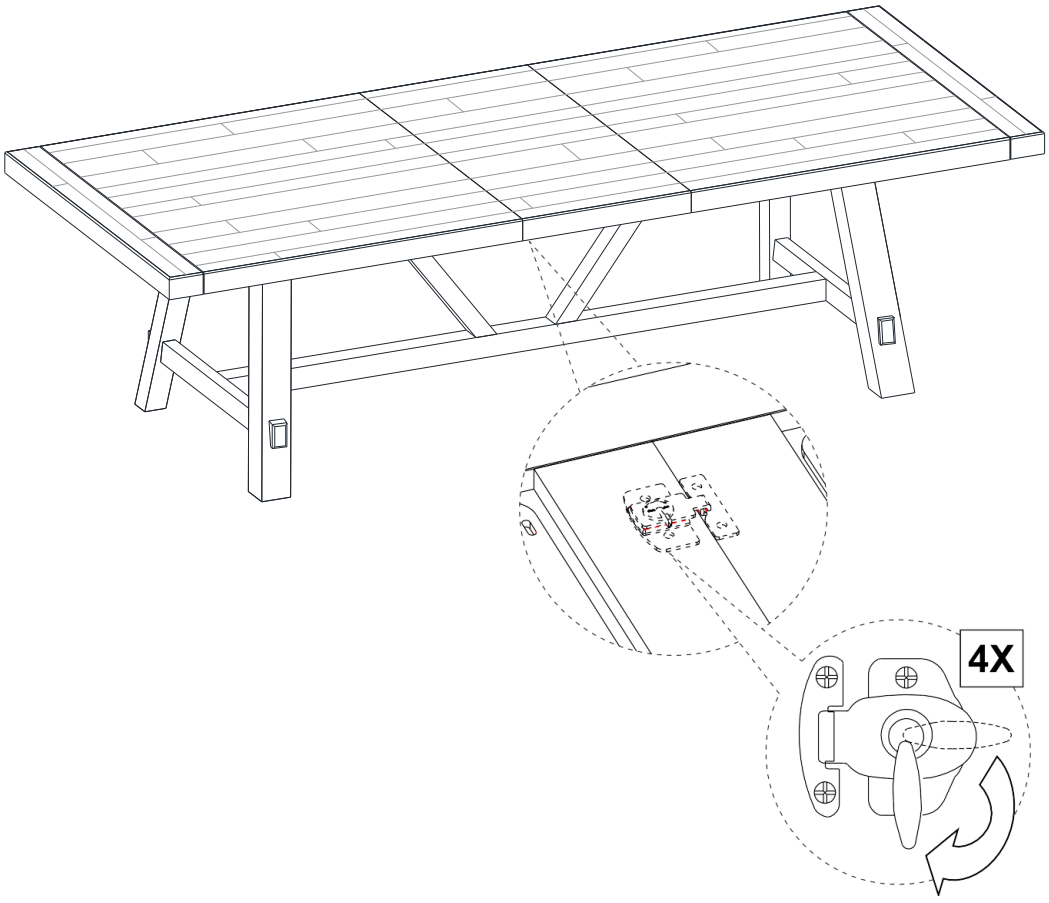

11

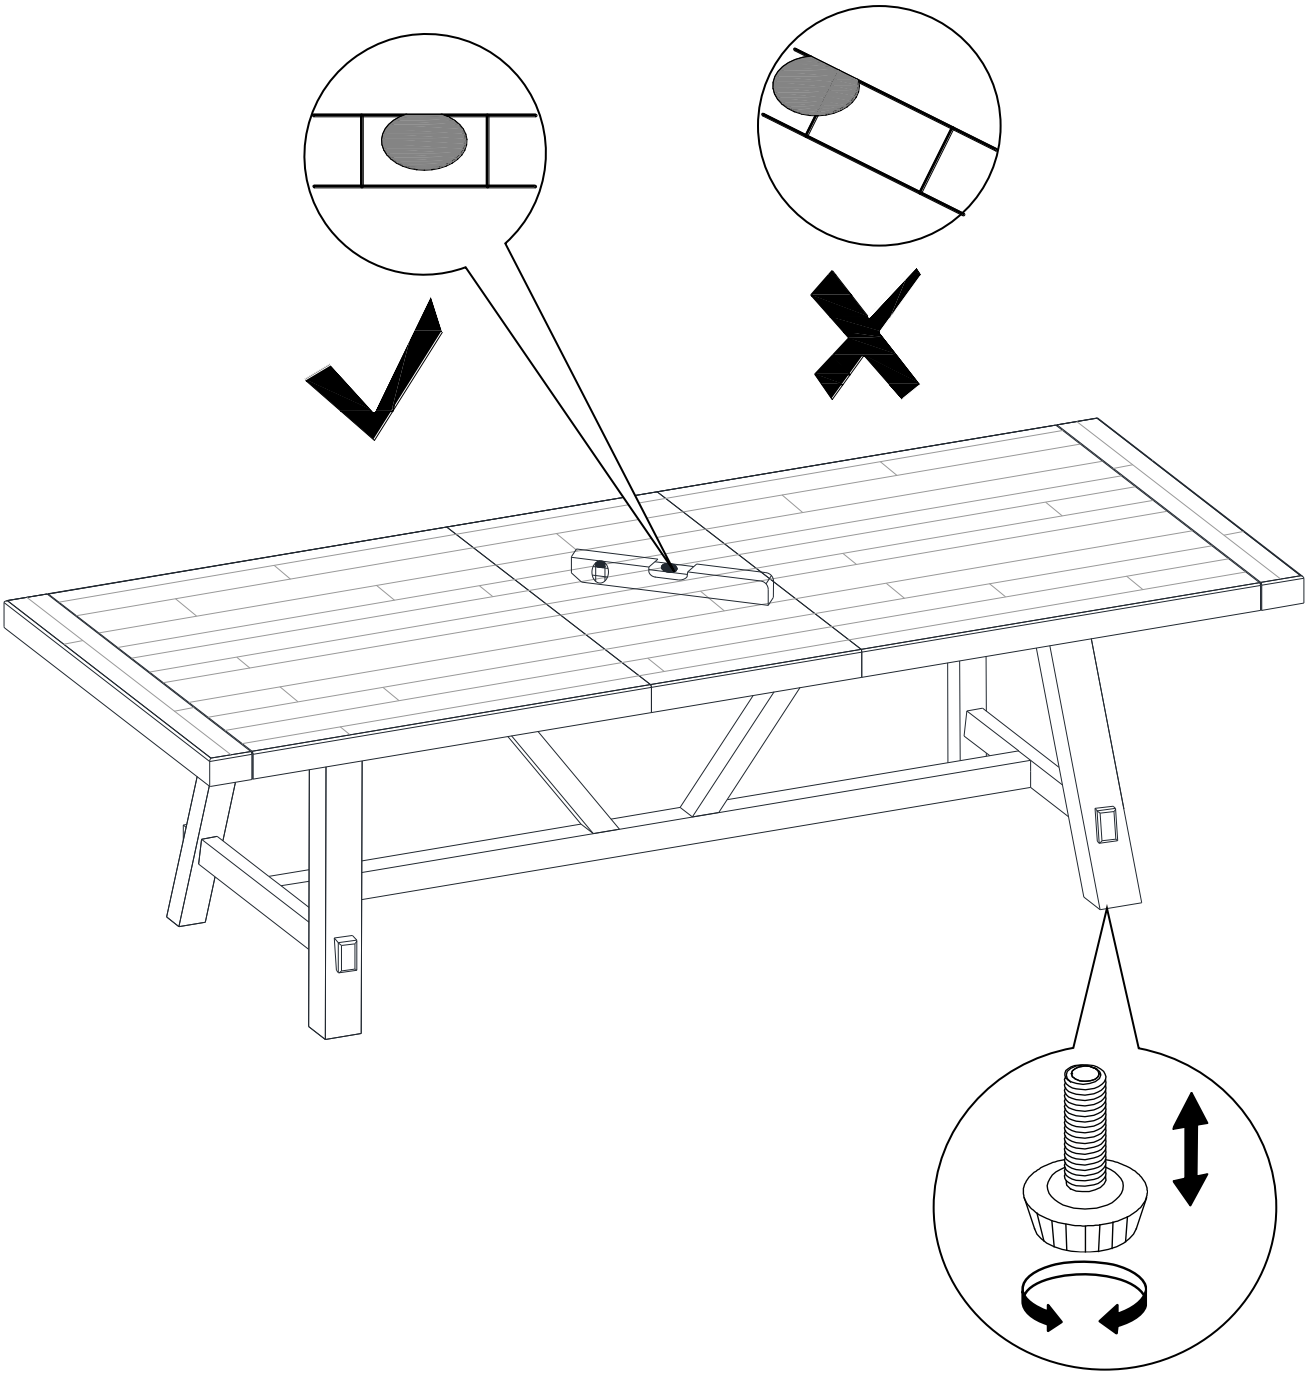

© 2025 Williams-Sonoma, Inc.