


POTTERY BARN

MADERA DAYBED WITH CANOPY

ASSEMBLY INSTRUCTIONS

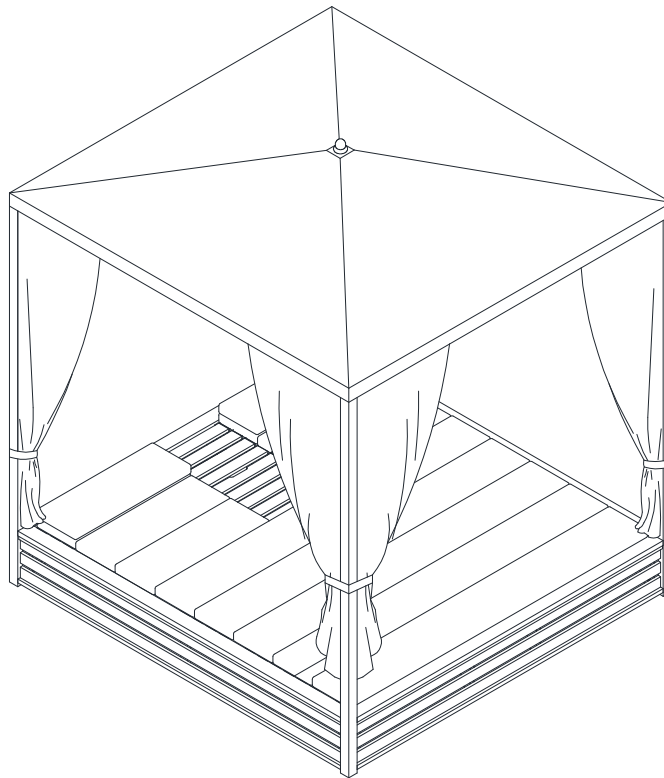

Date: 2013-Dec.-03

Rev: -

www.potterybarn.com

Important Safety Instructions:


- Please read all instructions carefully before assembling.
- For your safety, assembly by two or more adults is strongly recommended.
- Keep instructions for future use.
- Use only vendor supplied hardware to assemble. Using unauthorized hardware could jeopardize the structural integrity of the item.

Pre-assembly:



- Remove all parts and hardware from the box and lay out on a clear carpeted or scratch-free work surface, as this will avoid damaging parts during assembly. The shipping box provides an ideal work surface.
- Do not dispose of any packaging or contents of the shipping carton until assembly is completed to avoid accidentally discarding small parts or hardware.
- Use the parts and hardware lists below to identify and separate each of the pieces included.
- The illustrations provided allow for easier assembly when used in conjunction with the assembly instructions.
- The use of power tools to aid in assembly is not recommended. Power tools can damage hardware and split wood.

Parts Included:

(A)	Top Cover Frame	1 pc
(B)	Top Frame	1 pc
(C)	Post	4 pcs
(D)	Front & Back Frame	2 pcs
(E)	Left & Right Side Frame	2 pcs
(F)	Center Support	1 pc
(G)	Main Frame	1 pc
(H)	Finial	1 pc
(I)	Canopy	1 pc
(J)	Curtain	8 pcs
(K)	Cushion	1 pc

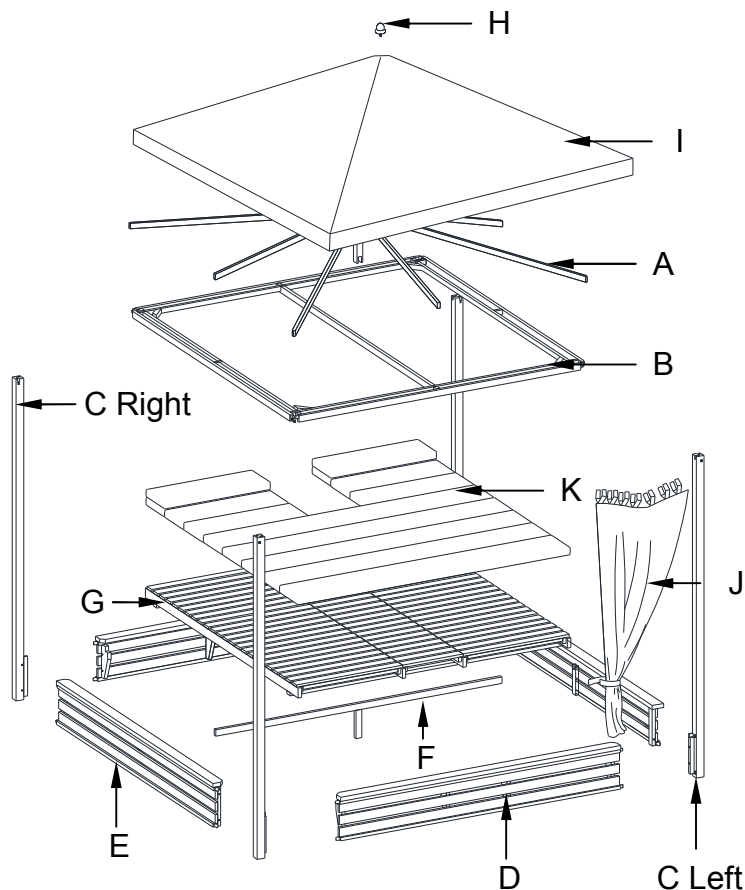

Hardware Included:

(L)	(M)
Short Allen Bolt	Long Allen Bolt
	
M6 x 40 mm 8x	M6 x 60 mm 23x

Tools Required :



Allen Key 1x (included)

Assembly Instruction Steps:

1. Assemble 2 pcs of Post (C) to the Right Side Frame (E) and 2 pcs of Post (C) to the Left Side Frame (E). (See **Fig. 1**).
Insert 4 pcs Long Allen Bolts (M) on each side frames, and tighten with the supplied Allen Key. (See Fig.1), Detail 1.

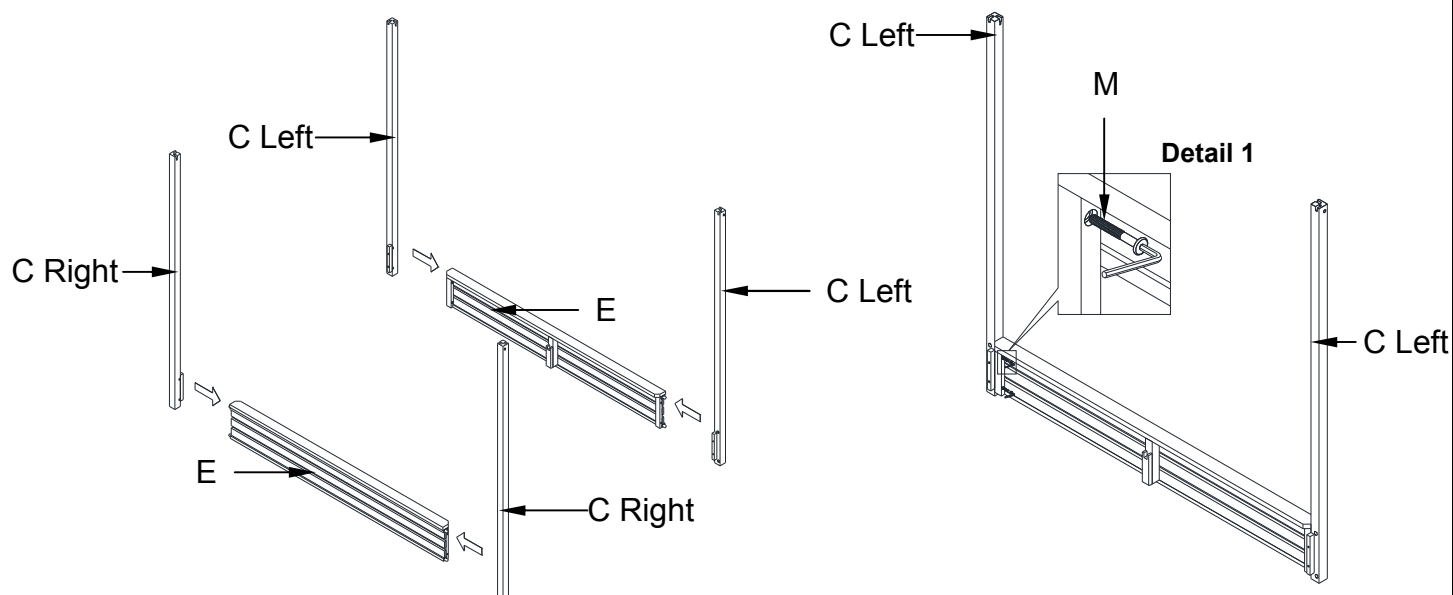


Fig. 1

2. Assemble Left & Right Side Frames (E) to the Front & Back Frame (D). (See **Fig. 2**).

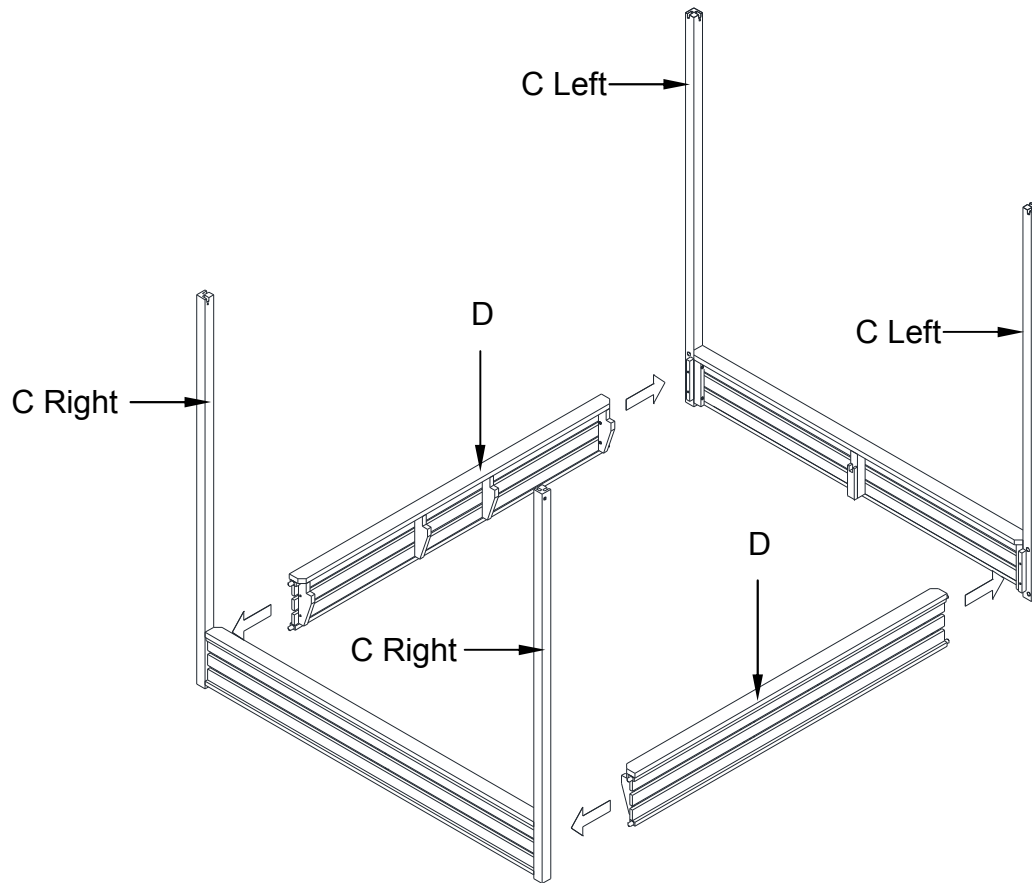


Fig. 2

3. Insert 4 pcs Long Allen Bolts (M) to assemble the Front Frame (D) & 4 pcs Allen Bolts (M) to assemble the Back Frame (D). Tighten with the supplied Allen Key (See **Fig. 3**) Detail 1.

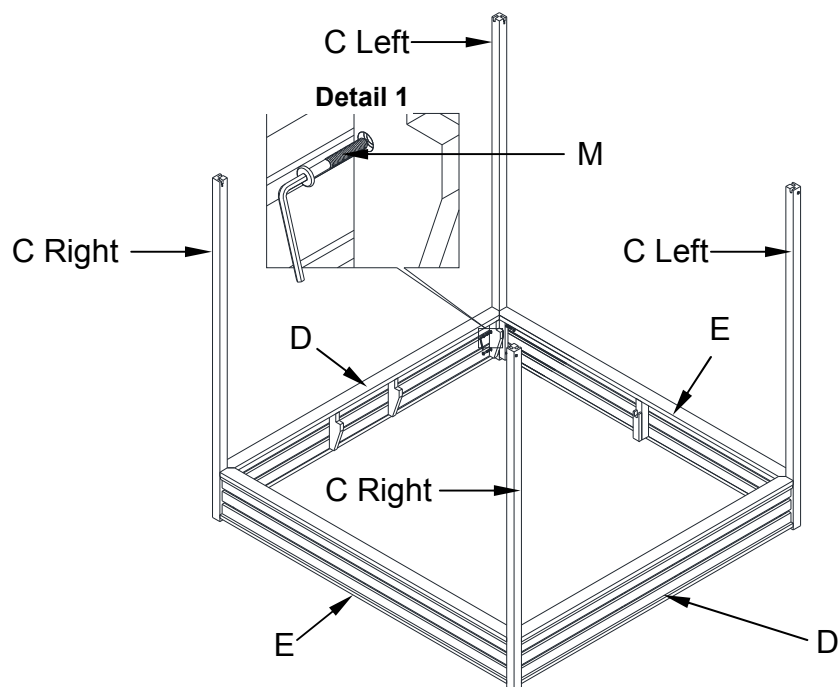


Fig. 3

4. Assemble the Center Support (F) to the Left & Right Side Frames (E) as shown on **Fig. 4**.

Insert 2 pcs of Long Allen Bolts (M) and tighten with the supplied Allen Key. See **Fig.4**, detail 1.

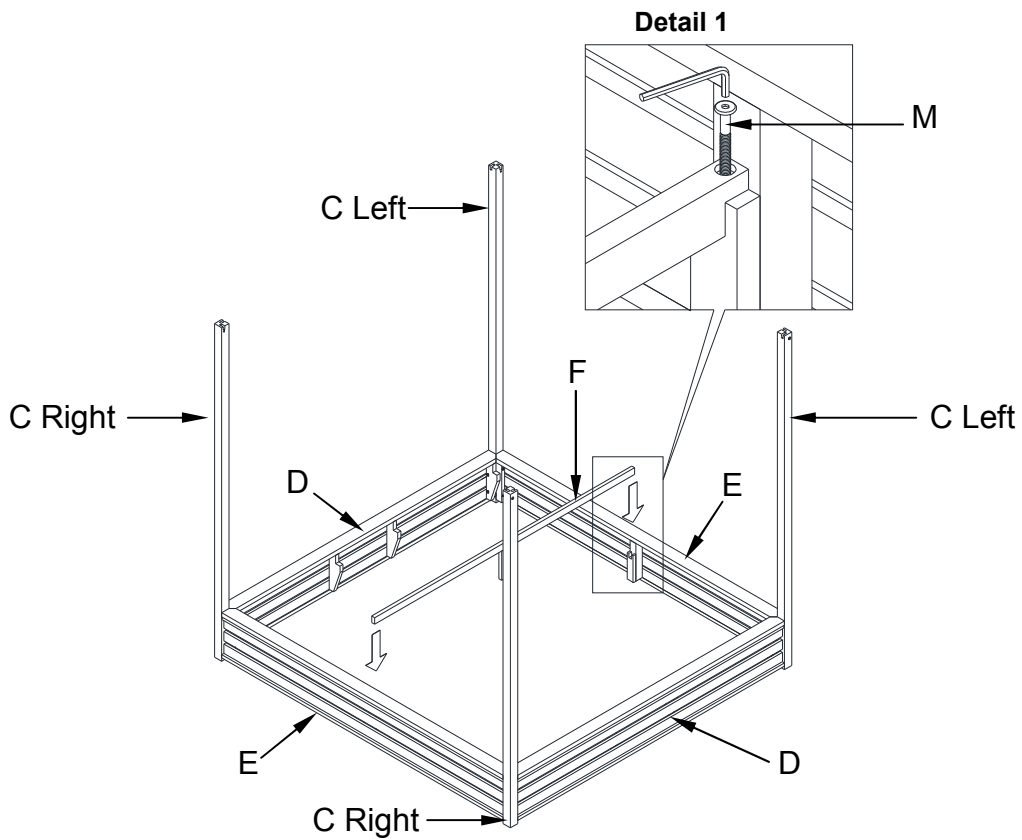


Fig.4

5. Lay the Cushion (K) on the Main Frame (G) (See **Fig. 5**).

From under the Main Frame (G) secure the Velcro through the slats of the Main Frame (G). (See **Fig. 5**) Detail 1 & 2

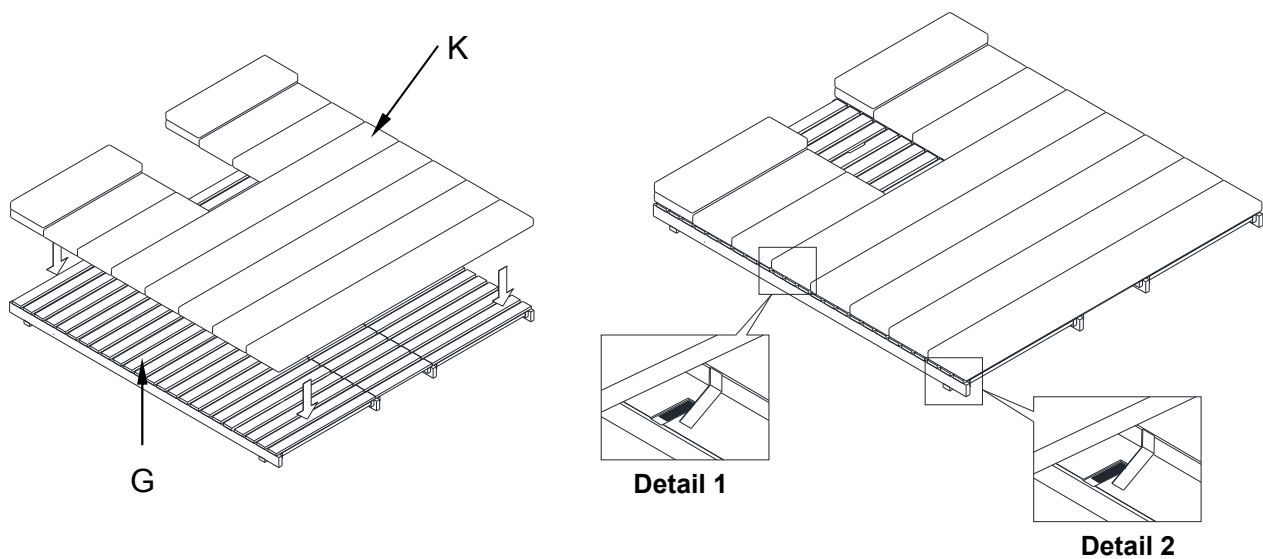


Fig. 5

6. Lay the Main Frame (G) and the Cushion (K) as shown on Fig. 6

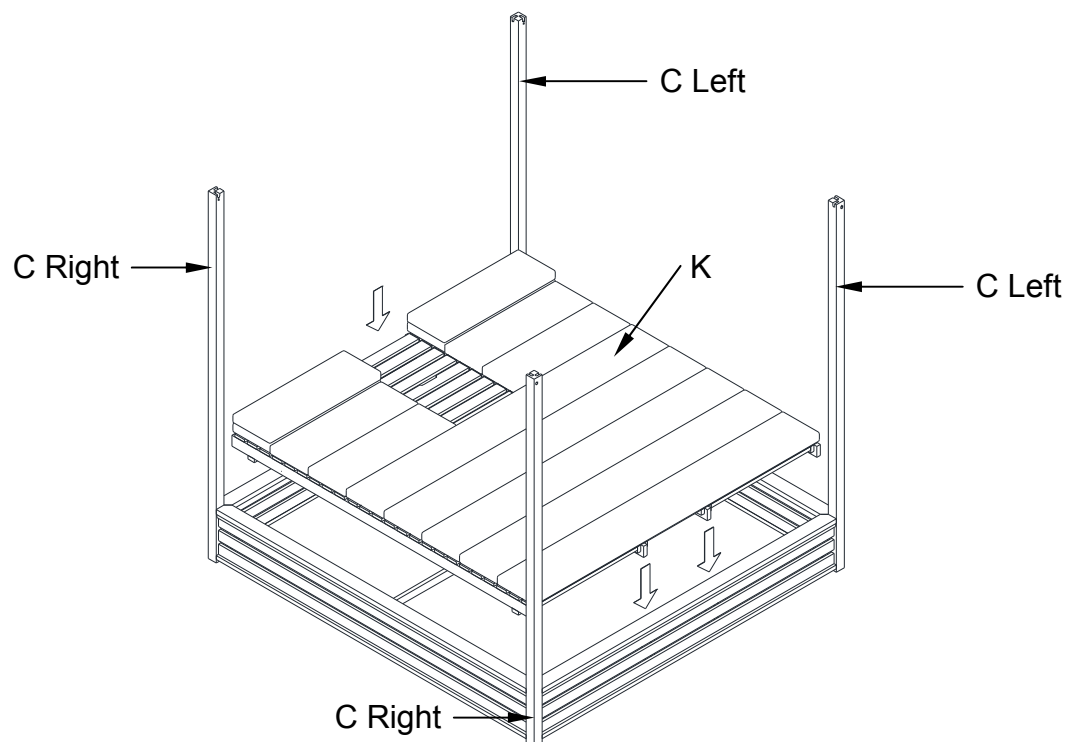


Fig. 6

7. Assemble the Top Cover Frame (A) to the Top Frame (B) as shown on Fig. 7.

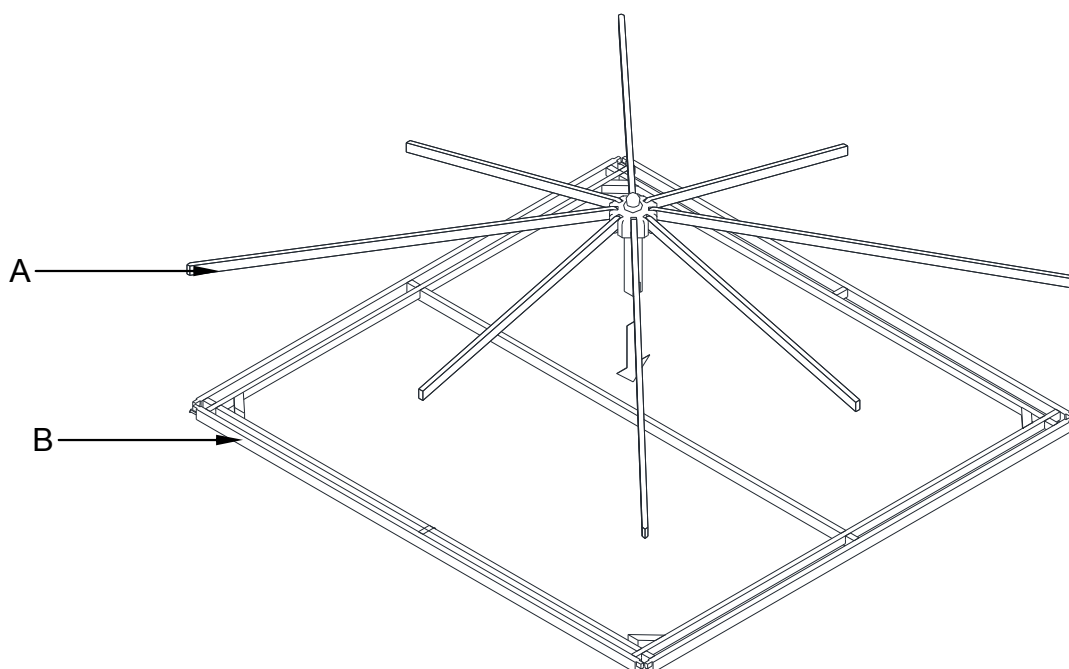


Fig. 7

8. From underneath, insert 8 pcs Short Allen Bolts (L). Tighten with the supplied Allen Key. (See **Fig.8**) Detail 1

Assemble the center pole using 1 pc Long Allen Bolt (M). Tighten with the supplied Allen Key. (See **Fig.8**) Detail 2

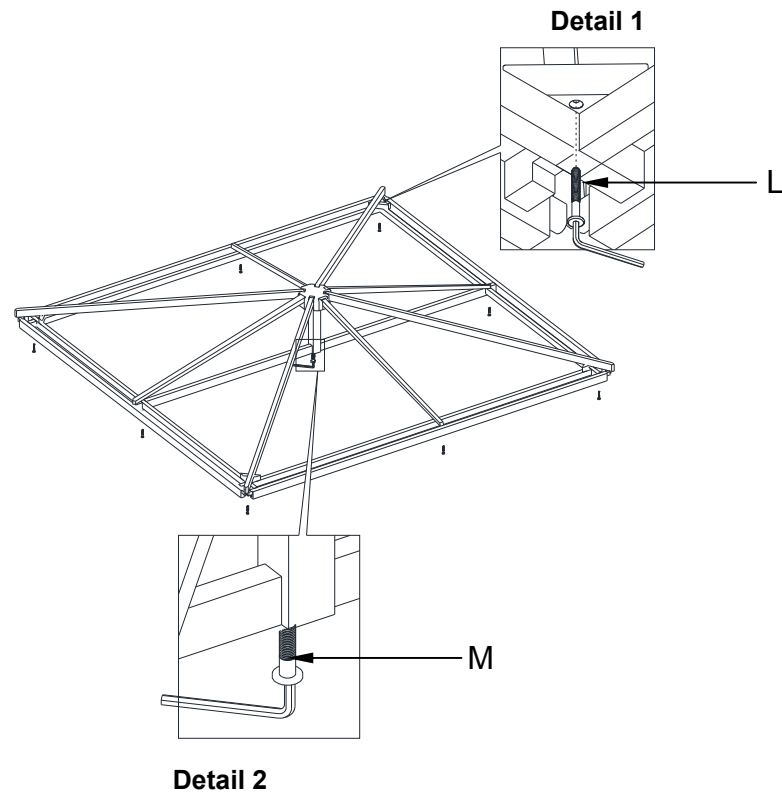


Fig. 8

9. Wrap the Canopy (I) to the Top Frame assembly. Pull the straps located under the canopy on all edges and secure the Velcro through the frames. (See **Fig. 9**) Detail 1 & 2.

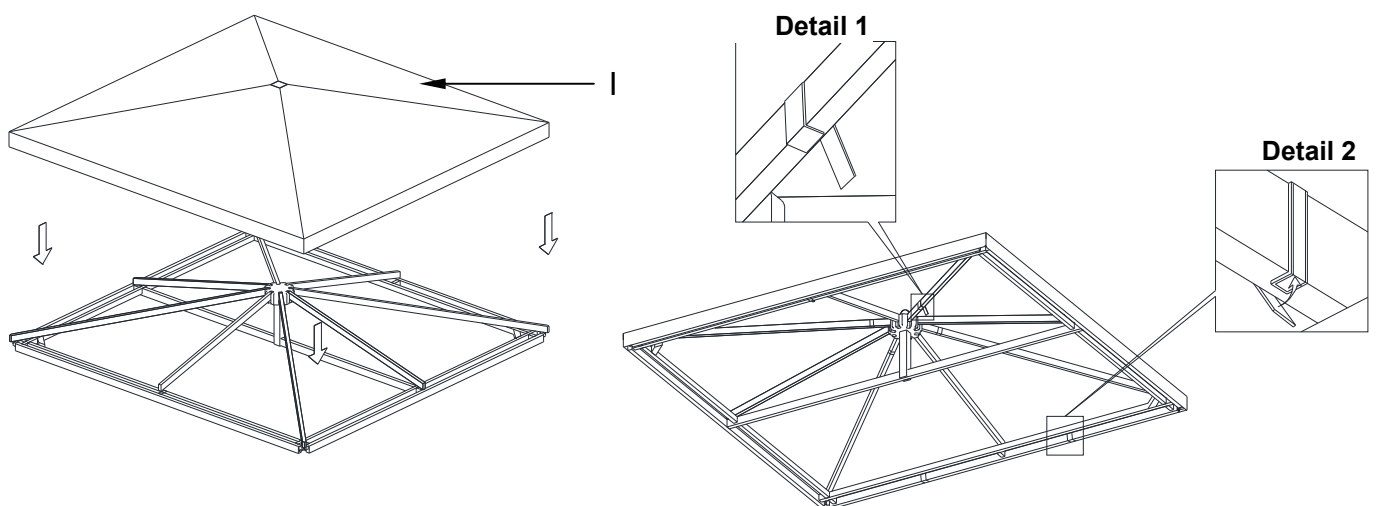


Fig. 9

10. Assemble the Finial (H) by turning to the center pole of the top frame. (See **Fig. 10**) Detail 1.

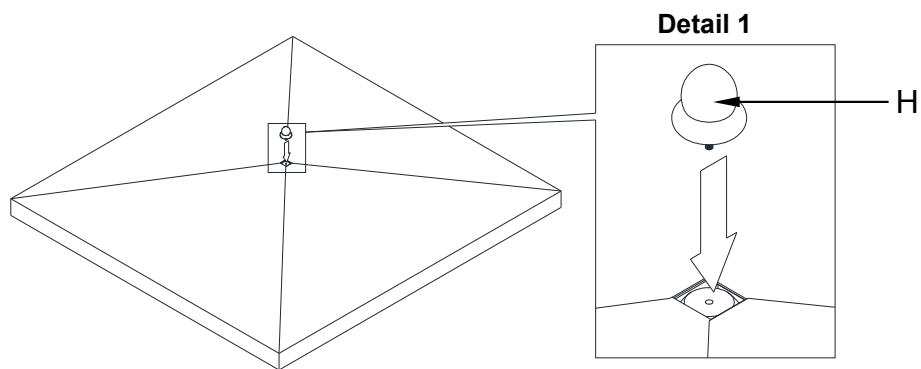


Fig. 10

11. Assemble the top frame with canopy to the post. (See **Fig. 11**). Insert 4 pcs Long Allen Bolts (M) into the holes on the corners, and tighten with the supplied Allen Key. (See **Fig 11**) Detail 1.

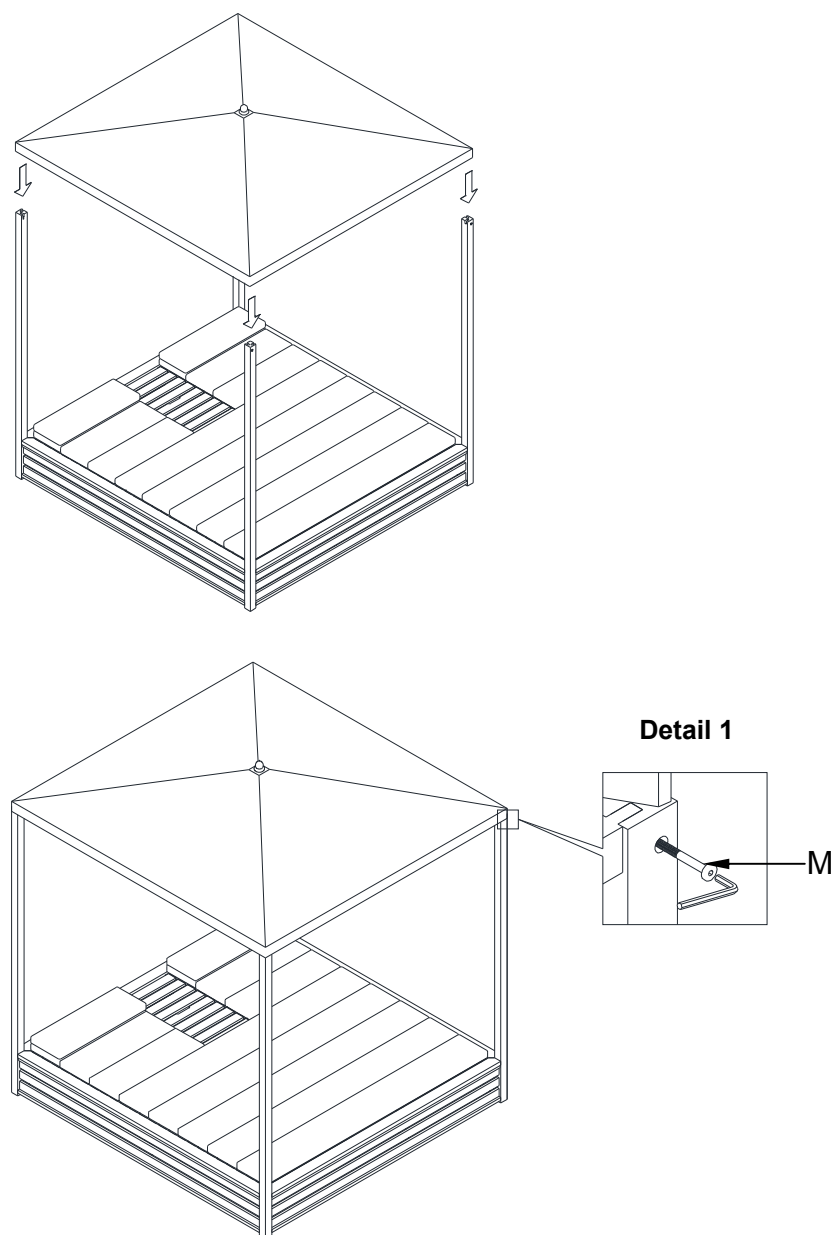


Fig.11

12. Attach 8 pcs Curtains (J) to each sides of Daybed as shown on Fig.12.

Secure the Velcro to the rail of the Top Frame (B). See Fig. 12 Detail 1

Secure the Curtain (J) to the Post (C). See Fig. 12 Detail 2.

Assembly is complete !.

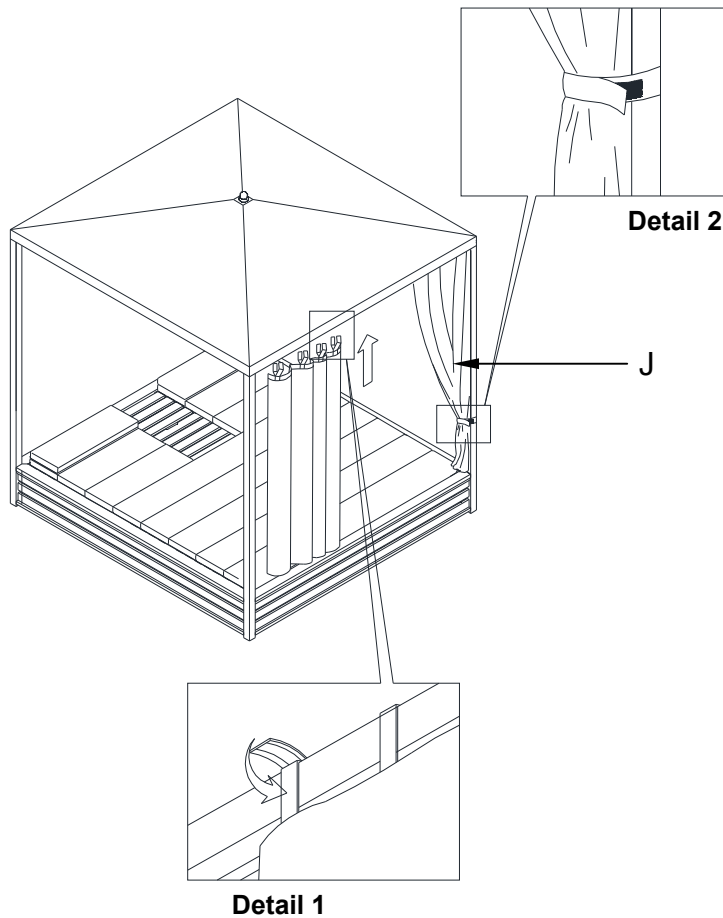


Fig. 12

Care Instructions:

- Dust often using a clean, soft, dry and lint-free cloth.
- Blot spills immediately and wipe with a clean, damp, cloth.
- To protect the furniture from spills, always use coasters.
- We do not recommend the use of chemical cleansers, abrasives or furniture polish on our lacquered finish.
- Hardware may loosen over time. Periodically check to make sure all connections are tight.
- Re-tighten if necessary.