

POTTERY BARN

Farmhouse Bed - Full Assembly Instructions

Pre-Assembly:

- ◆ Please read all instructions carefully before beginning assembly.
- ◆ For your safety and convenience, assembly by two people is required.
- ◆ Remove all parts and hardware from packaging and identify by comparing to lists below. Do not discard any contents until assembly is complete to avoid accidentally discarding any parts or hardware.

Parts Enclosed:

BOX 1


- ◆ (1) Headboard with Crown

BOX 2

- ◆ (1) Footboard with Crown attached

BOX 3

- ◆ (2) Siderails
- ◆ (1) Slat roll
- ◆ (1) Hardware packet containing

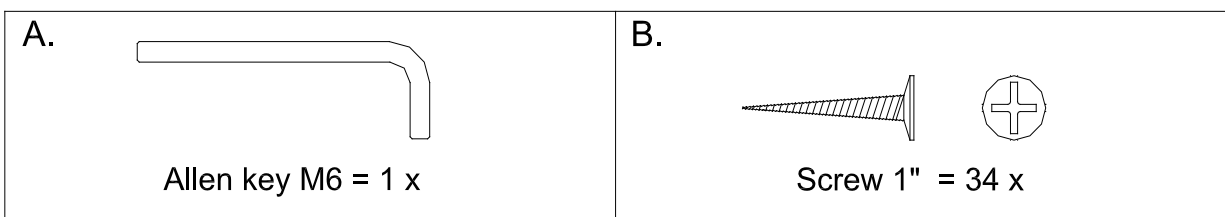


Required for Assembly:

- ◆ Phillips Screwdriver (Not Included)





Assembly Instructions:

1. Determine the desired height of the siderail lips. The lips have been pre-attached to the lower position (boxspring level) on each side rail. Lips may be adjusted to the higher position (platform level - makes boxspring optional) by removing the Allen bolts with the enclose Allen Key (A) and re-attaching lips to the higher set of pre-drilled holes. Re-tighten bolts. Caution: The lips on both siderails must be affixed at the same height.

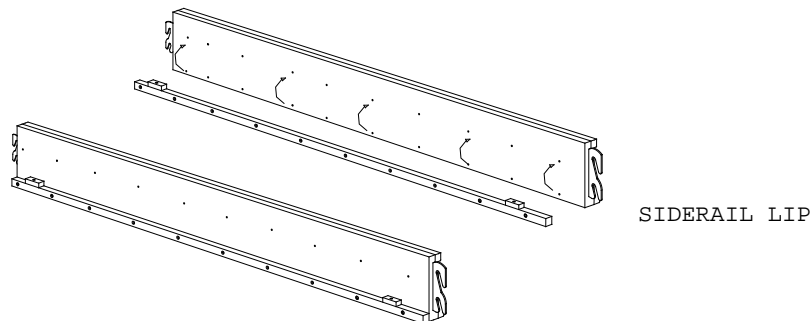


Step 1. Determine siderail

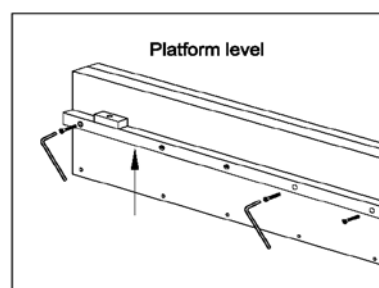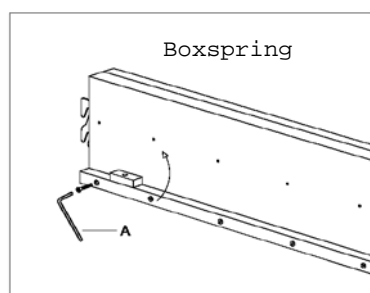


2. Determine if canopy is being used for bed.
If canopy IS being used: Stop here and revert to separate assembly instructions packaged with Canopy. (Separate Box)
If canopy is NOT being used: Continue to Step 3.


3.

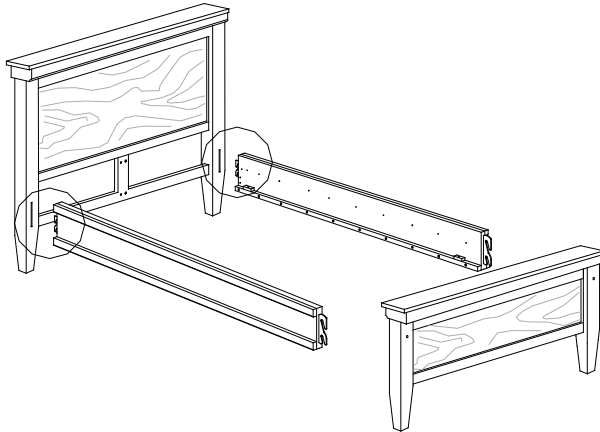


Step 3. Attach

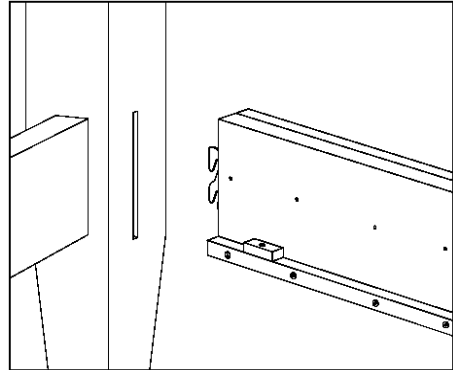

4.

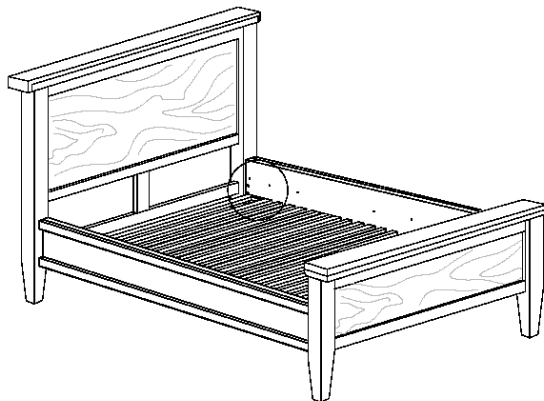

Step4. Install

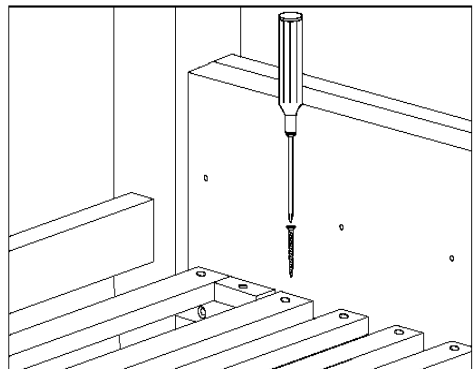

5. Periodically tighten all connections.
6. Assembly is complete.

Care Instructions:

- ◆ Wipe with a clean, soft cloth.
- ◆ Avoid all chemicals and harsh cleaners.

thank you for your purchase
stores | catalog | www.potterybarn.com

POTTERY BARN

Farmhouse Bed – Queen, King, California King Assembly Instructions

Pre-Assembly:

- Please read all instructions carefully before beginning assembly.
- For your safety and convenience, assembly by two people is required.
- Remove all parts and hardware from packaging and identify by comparing to lists below. Do not discard any contents until assembly is complete to avoid accidentally discarding any parts or hardware.

Parts Enclosed:

BOX 1

- (1) Headboard with Crown pre-attached


BOX 2

- (1) Footboard with Crown pre-attached

BOX 3

- (2) Siderails
- (2) Slat rolls
- Hardware packet containing the following:

- (1) Center rail
- (6) Support legs

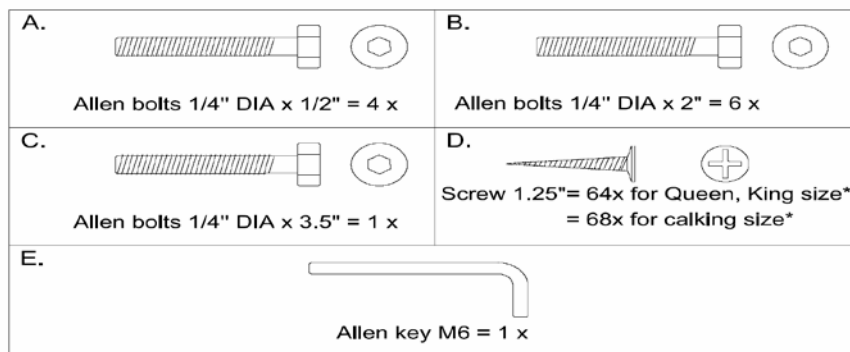


Required for Assembly:

- Phillips Screwdriver (Not Included)





Assembly Instructions:

1. Determine the desired height of the siderail lips. The lips have been pre-attached to the lower position (boxspring level) on each side rail. Lips may be adjusted to the higher position (platform level – makes boxspring optional) by removing the Allen bolts with the enclosed Allen key (E) and re-attaching lips to the higher set of pre-drilled holes. Re-tighten bolts with Allen key. Caution: The lips on both siderails and the center rail (Step 4) must all be affixed at the same height.

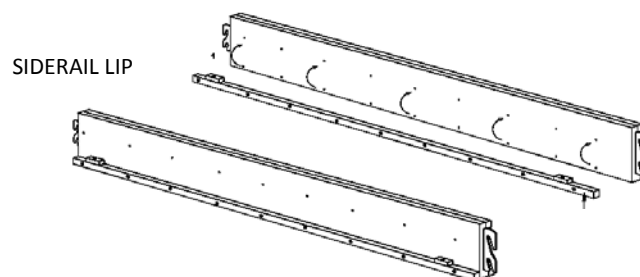

Step 1. Determine siderail lip height.

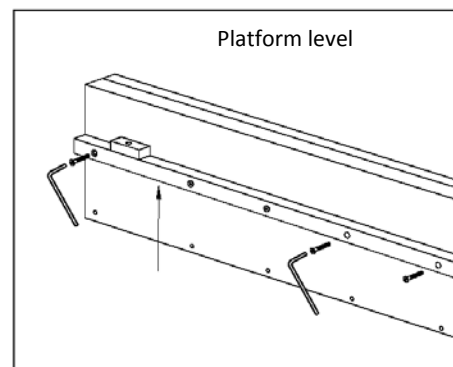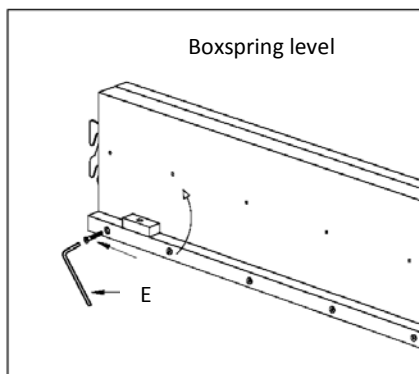


2. Determine if canopy is being used for bed.

If canopy IS being used: Stop here and revert to separate assembly instructions packaged with Canopy. (Separate Box)

If canopy is NOT being used: Continue to Step 3.

3. Attach side rails to headboard and footboard by inserting hooked ends into the corresponding slots. Apply downward pressure and ensure connections are secure.



Step 3. Attach side rails

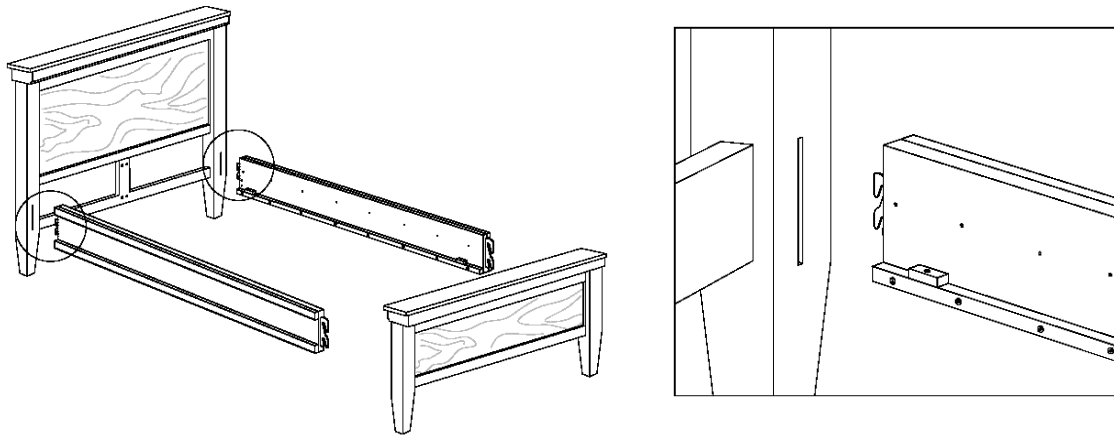

4. Determine the correct center rail height by reviewing the selected side rail heights. (Step 1) For lower position (boxspring level) attach the (3) shorter support legs to the center rail. Insert the $\frac{1}{4}$ " x 2" Allen bolts through the pre-drilled holes on the top side of center rail and into the shorter legs. Tighten with Allen key (E). For higher position (platform level) attach the (3) longer legs. The unused set of legs can be attached to the bottom side of the center rail for storage. Align them horizontally and attach with the single $\frac{1}{4}$ " x 3.5" Allen bolt. (C)
5. Attach center rail to headboard and footboard by aligning end plates with corresponding pre-drilled holes. Insert the $\frac{1}{4}$ " x $\frac{1}{2}$ " Allen bolts (A) and tighten with Allen key (E). Levelers on bottom of support legs can be adjusted for uneven floors by turning until contact is made with floor.



Step 4. Determine center rail height

Step 5. Attach center rail to headboard & footboard. Adjust levelers if needed.

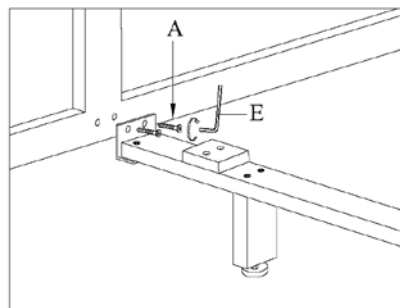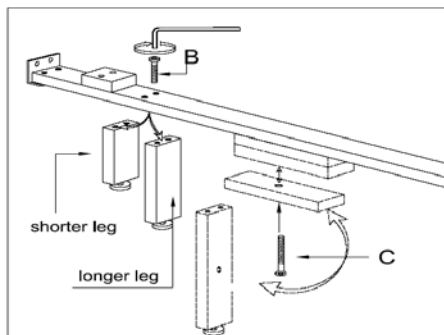

6. Lay slat rolls in place over center rail and siderail lips. Attach by inserting the Phillips screws (D) through pre-drilled holes and tightening with Phillips screwdriver (not included).

Step 6. Install slat rolls

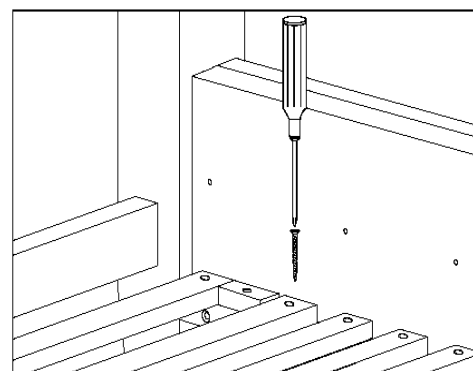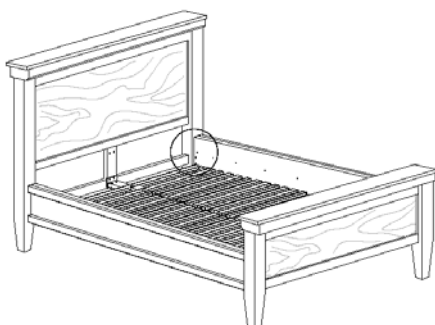

7. Periodically tighten all connections.
8. Assembly is complete.

Care Instructions:

- Wipe with a clean, soft cloth.
- Avoid all chemicals and harsh cleaners.

thank you for your purchase
stores | catalog | www.potterybarn.com