

# P O T T E R Y B A R N


## Printers Corner Desk Assemble Instructions

### Pre-Assembly:

- Please read all instructions carefully before beginning assembly.
- Save all packing materials until the item is fully assembled to avoid accidentally discarding any small parts or hardware.
- Use the parts and hardware lists to identify and separate each of the components included.
- Find a carpet or use the foam in shipping box for assembly.
- Assembly by 2 adults is recommended.



### Parts Included:

- A - Top panel (1x)
- B - Left side leg (1x)
- C - Right side leg (1x)
- D - Center leg (1x)
- E - Top support rail (2x)
- F - Bottom support rail (2x)

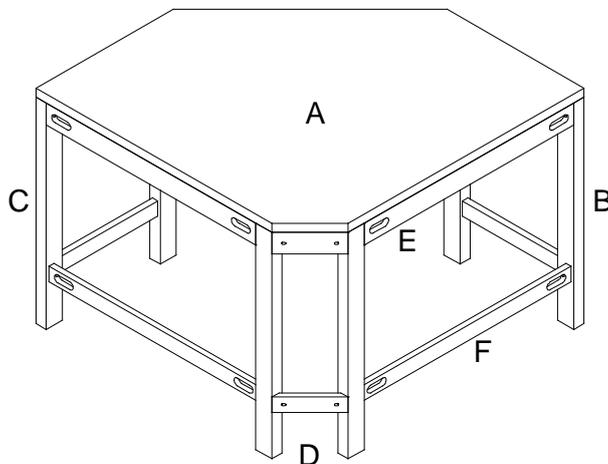


Assembled product. View from back

### Hardware Enclosed:


G - Short Allen bolt - M6x30mm (7x)	H - Allen key (1x)	I - Half-moon bracket (8x)	J - Long Allen bolt - M6x45mm (8x)
			

### Assembly Instructions:


1. Attach the right side leg (C) onto the top (A) by aligning the exposed dowels on leg with pre-drilled holes on top. Secure the leg by (2) short Allen bolt (G) using Allen key (H).

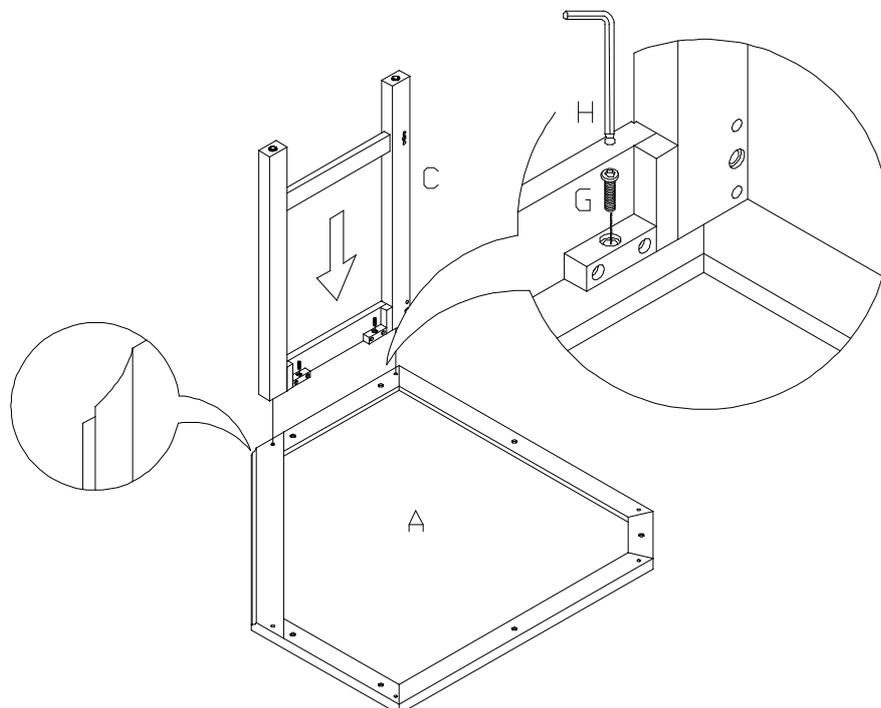


2. Attach one top support rail (E) which has a wood block at center, to the right side leg (C) by aligning the exposed dowels on the rail with pre-drilled holes on the leg.

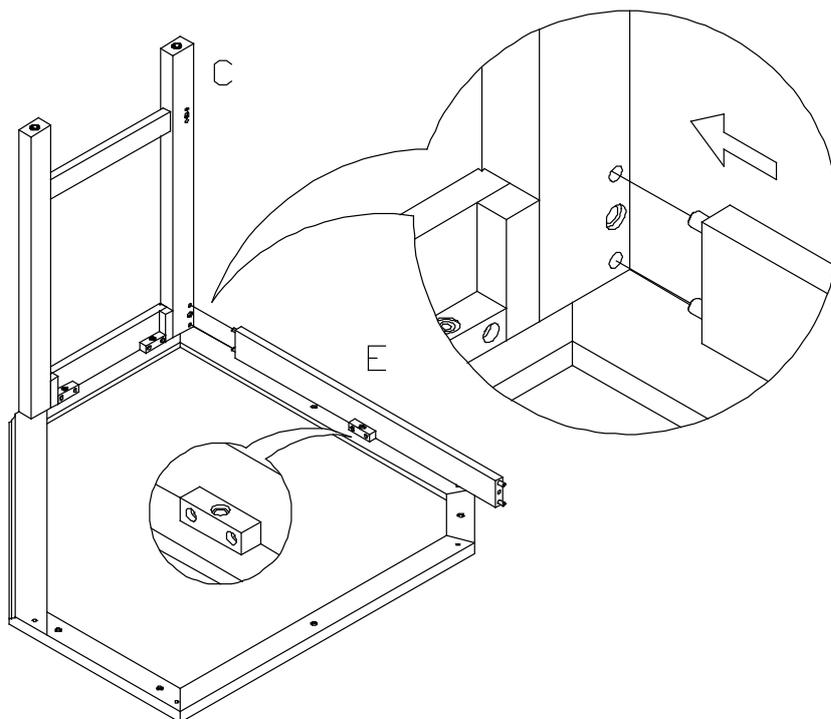


3. Attach one bottom support rail (F) to the right side leg (C) by aligning exposed dowels on the rail with pre-drilled holes on the leg. Hold the rail for next assembly.

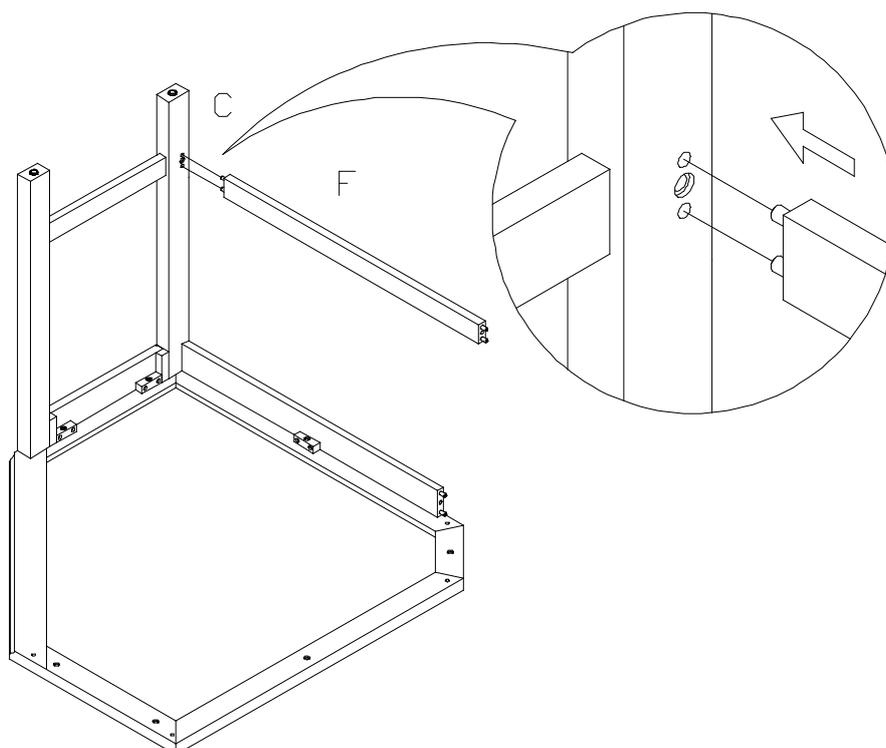


4. Attach the center leg (D) to support rails (E&F) and onto top (A) by aligning the exposed dowels on the rail with pre-drilled holes on leg and dowels on the leg with pre-drilled holes on top. Secure the leg by (1) short Allen bolt (G) using Allen key (H).

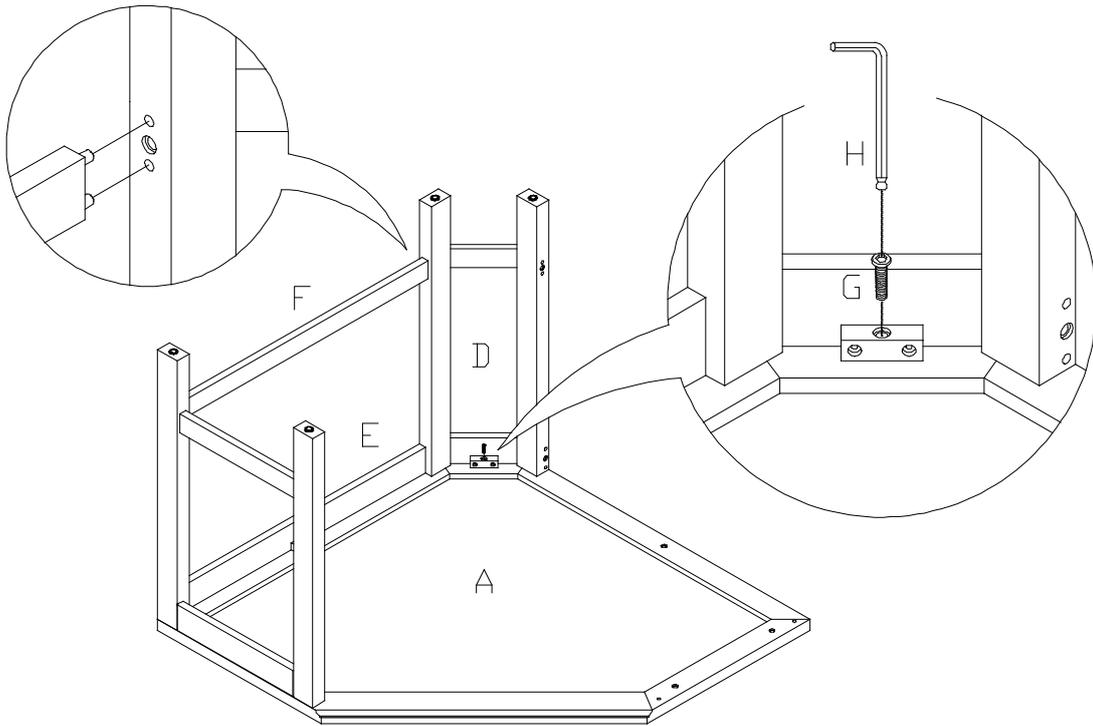


5. Attach the remaining top support rail (E) to the center leg (D) by aligning exposed dowels on the rail with pre-drilled holes on the leg.

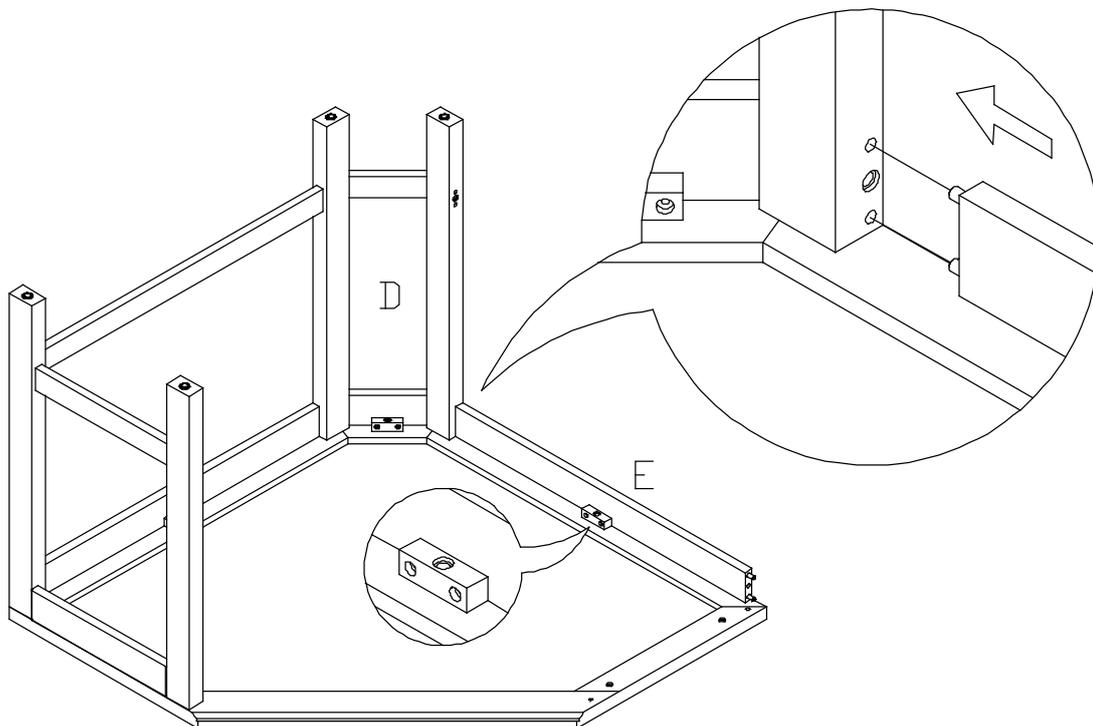


6. Attach the remaining bottom support rail (F) to the center leg (D) by aligning the exposed dowels on the rail with pre-drilled holes on leg. Hold the rail for next assembly.

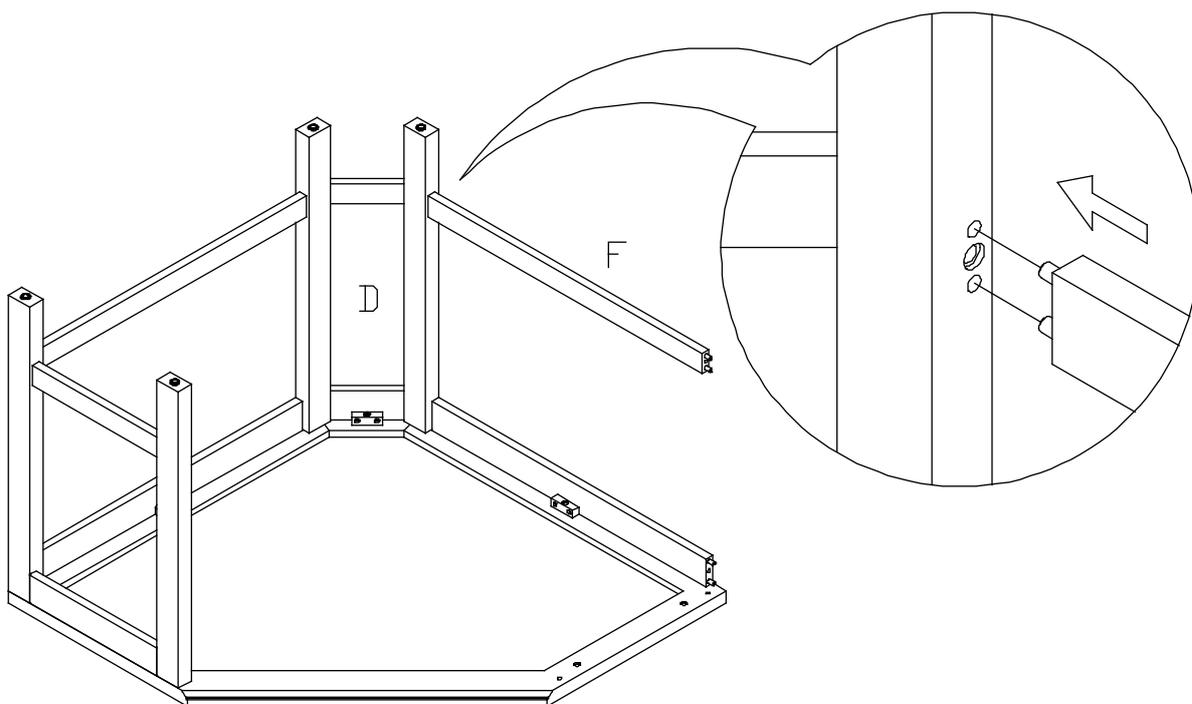


7. Attach left side leg (B) to support rails (E&F) and onto top (A) by aligning the exposed dowels on the rail with pre-drilled holes on the leg and exposed dowels on the leg with pre-drilled holes on the top. Secure by (2) short Allen bolt (G) using Allen key (H).

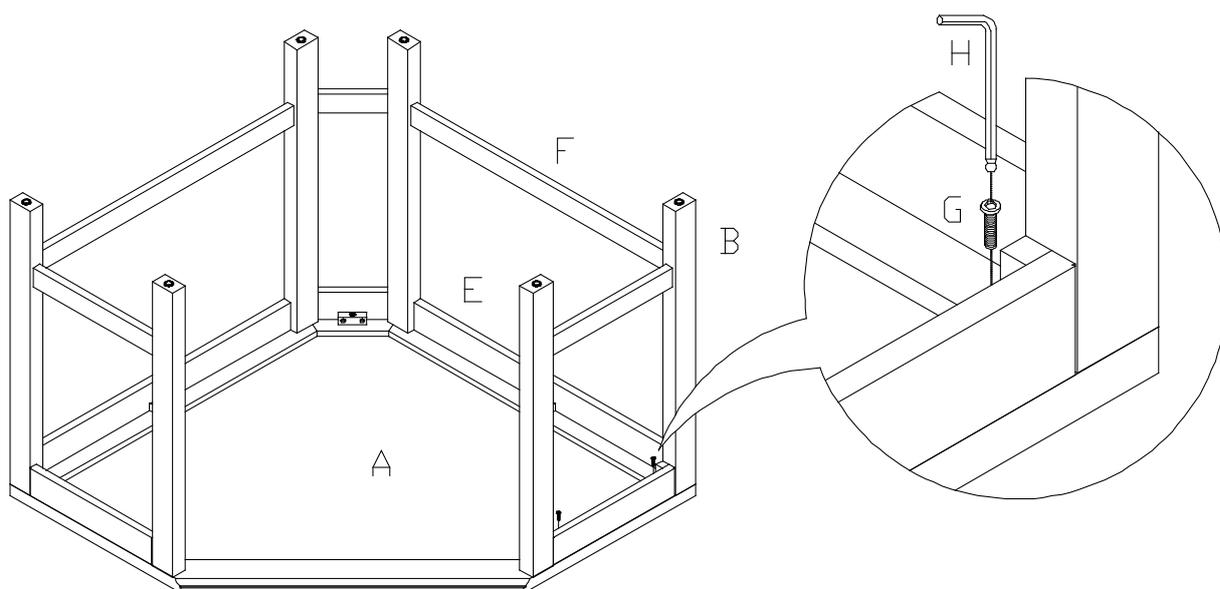

8. Secure top support rail (E) to top (A) by short Allen bolt (G) using Allen key (H) at center of the rail where has wood block.

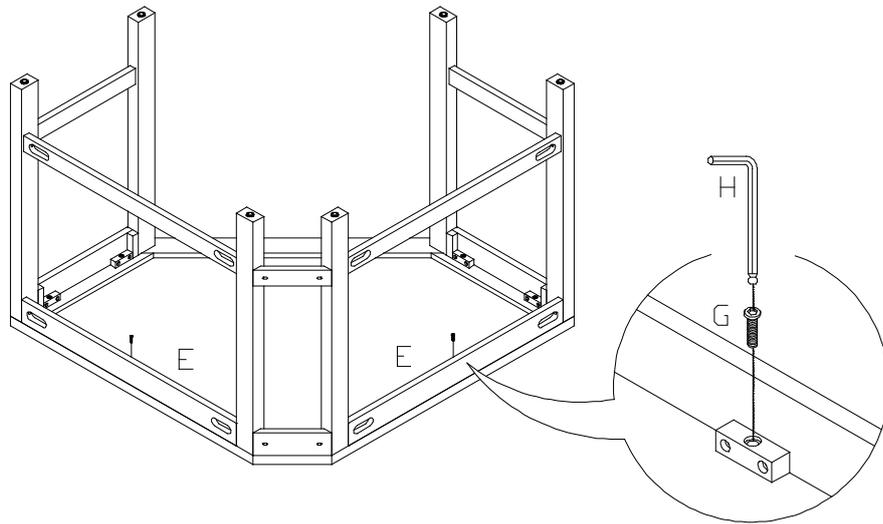


9. Secure two ends of each support rail (E,F) with the legs (B,C,D) by half-moon bracket (I), long Allen bolt (J) using Allen key (H).

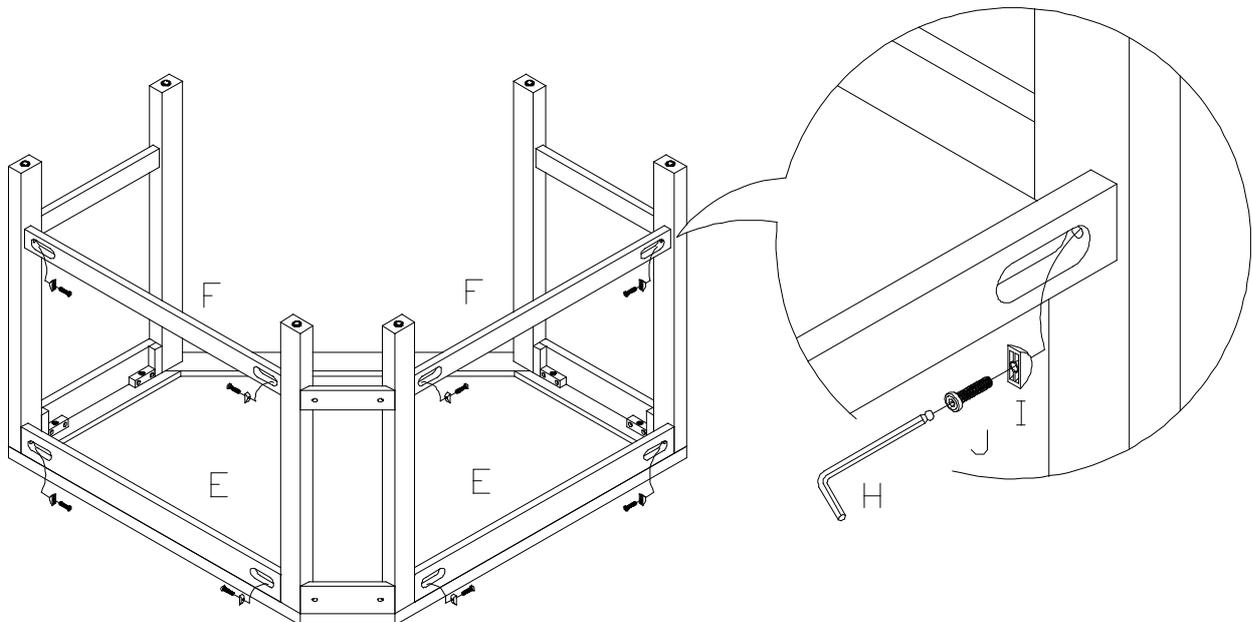

10. Slowly turn the desk up right. Adjust the leveler under legs if it doesn't sit level. Assembly is completed.

Care Instructions:

- For daily cleaning, wipe with a soft damp cloth; Wipe dry immediately.
- To protect the finish, avoid the use of chemicals and harsh cleaning agents.
- Periodically tighten the bolts

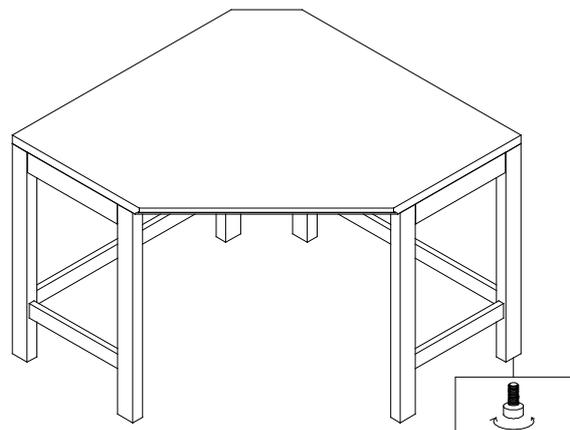

thank you for your purchase  
stores | catalog | [www.potterybarn.com](http://www.potterybarn.com)