
POTTERYBARN

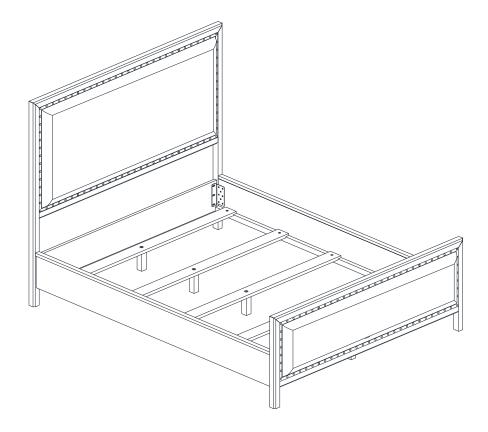

TOULOUSE BED QUEEN & KING


Date: 9-May-16

Rev:-

Important Safety Instructions:

- Please read all instructions carefully before assembling.
- For your safety, assembly by two or more adults is strongly recommended.
- Keep instructions for future use.
- Use only vendor supplied hardware to assemble. Using unauthorized hardware could jeopardize the structural integrity of the item.
- This bed must be used with a box spring foundation

Parts Enclosed Box 1:

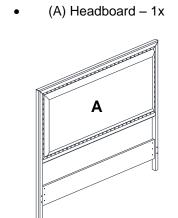


Parts Enclosed Box 2:


(B) Footboard - 1x
(C) Side Rails - 2x

• (D) Leg Supports – 5x


• (E) Slats – 5x






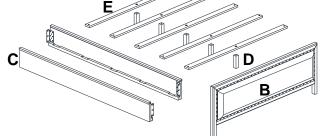


Hardware Enclosed Box.2:

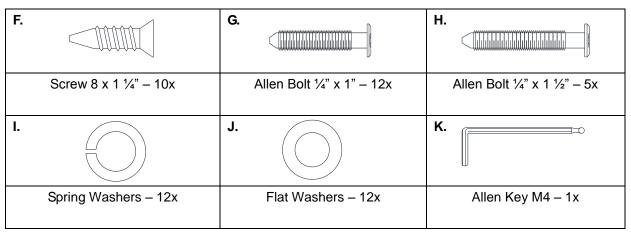


- 1. Attach the Side Rails (C) to Headboard (A) and Footboard (B) by attaching the metal bracket on the side rails to the Headboard (A) and Footboard (B) as shown in **fig. 1**.
- 2. Place Spring Washers (I), Flat washers (J) onto the Allen Bolts (G) through the holes on the metal bracket into the inserts on the headboard and footboard, tighten with the Allen Key (K) as shown in the **illustration. 1**.

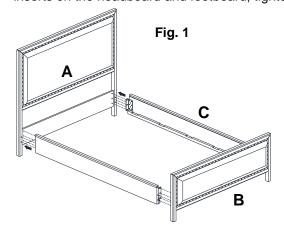




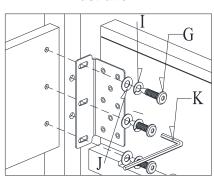


3. Attach Leg Supports (D) to the Slats (E) by inserting the Allen Bolt (H) through the hole on the slats into the insert on the leg supports as shown in **fig. 2**.

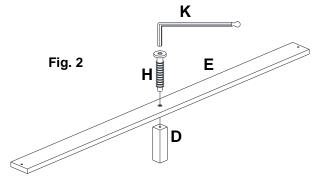

4. Lay the Slats (E) in place over the slat support on the side rails and insert the Screws (F) into the holes at the end of the Slats (E). Tighten with a screwdriver (Not Included) as shown in **fig. 3**, **illustration. 2**.

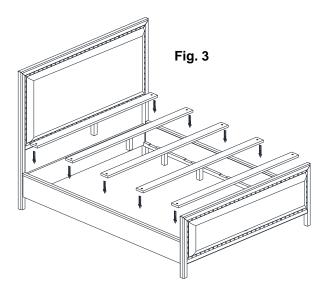

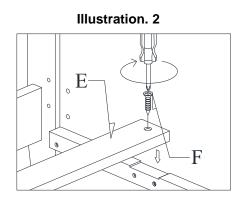

Care Instructions:

- Dust often using a clean, soft, dry and lint-free cloth.
- Blot spills immediately and wipe with a clean, damp, cloth.
- We do not recommend the use of chemical cleansers, abrasives or furniture polish on our lacquered finish.