

Prepare the wall

The wall surface should be clean, dry, structurally sound and free of mildew, grease, or other stains, and free of irregularities in order to achieve the best hanging performance and complete removal when redecorating.


To apply on drywall. Wall needs to be sealed and smooth. The wall surface should be clean, dry and free of debris. Priming is always recommended for best results at all times and especially with old, damaged, or flaking paint, and on a wall with uneven surfaces. Apply a good quality wall primer such as Zinser Bulls Eye® 1-2-3 or equivalent. This will aid in adhesion and make removal easier.

To apply over paint. Painted walls should be primed, smooth, and free from debris. Check the wall surface to determine the condition of the paint adhesion. If the paint is old, damaged, or flaking, priming is highly recommended.

To apply to a wall previously covered with wall paper. Any old wall paper remaining should be removed as well as the old adhesive (remove by sanding or using adhesive remover). Primer should be applied to the wall surface that is clean, smooth, and free of the old adhesive.

Apply the wallpaper

- **IMPORTANT:** Your paper will arrive with the panel number labeled at the bottom of each panel. The panels may not be stacked in the order they should be installed, so be sure to look for the number before getting started. This is not important if your wallpaper has a single panel repeat. If your design is a two panel repeat, install alternately from left to right (PANEL1, PANEL2, PANEL1, PANEL2, etc). If it is a mural, you will install the paper left to right, in order starting with panel one. Murals should be laid out ahead of installation to check for panel accuracy, and to ensure proper order before application begins. The paper will overlap 3/4 inch to match. This can be left as-is, or double cut to create a flush seam.
- Spray the wall with a standard spray bottle filled with tap water. Turn nozzle to coarse spray function to allow high water flow. Check that the surface is visibly saturated with water. If not, apply more water using the spray bottle.
- Apply wallpaper to the wall straight from the roll. Allow a few extra inches at the top to accommodate any ceiling height variations, This will be trimmed after installation
- If material does not move easily during repositioning, lift material and spray wall again. Allow surface to dry to the touch and wipe off any excess adhesive using a damp cloth or sponge. Wait for mural to dry completely before trimming
- Using your hand or a paperhanger's brush smooth the length onto the wall to remove any bubbles or wrinkles.
- Move around the room from left to right. Pick up your second panel of wallpaper and apply it so that its left side matches the right side of the previous panel, carefully matching the repeat.
- Use a clean cloth or sponge for cleaning any excess paste from the wall.
- Trim paper at top and bottom and side to fit wall after install is complete. Use a straight knife with a fresh blade tip.

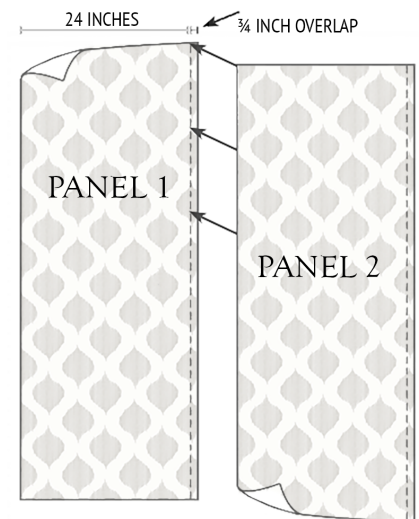

Removal: When it's time for a change, product can be easily removed from the wall in one piece when mounted to surfaces as defined above.

In case your wall was not well prepared, you may not achieve one piece removal. Use a bucket of water and a sponge, thoroughly wet the wall mural, starting from the top. Keeping the mural wet, you will be able to slowly peel it from the wall and recover a clean wall. Make sure you constantly keep the mural wet.