


P O T T E R Y B A R N

NEW BASIC HOLDBACK Assembly Instructions

Note: For safe mounting, it is essential to use the proper hardware for your wall type. Be sure to consult your local hardware store to determine the hardware needed for your wall type (plaster, drywall, concrete, etc.). Mount to wood studs whenever possible.

Parts Included:
(2) Holdbacks



Hardware Included:

(4) 1.25" Medium screws

(4) 1.25" Dry wall anchors



Assembly Instructions:

1. Determine your desired location on the wall to mount the holdback. Hold the holdbacks to the wall and mark the location of the pre-drilled screw holes using a pencil.
2. Mount holdback onto the wall following instructions for your wall type:

Dry Wall Mounting:

- Remove the finials from the holdback for easy mount.
- Use a Phillips screwdriver to insert the wall anchors. Do not "push" or drive the anchors into the wall, it is designed to bore into the wall like a drill bit. Slowly turn anchors clockwise while applying pressure until the flange just touches the wall.
- Insert the metal screws through the pre-drilled holes in the holdback into the wall anchor turning clockwise to tighten holdback snugly against the wall.


Stud Mounting:

- Remove the finials from the holdback for easy mount.
- With a Phillips screwdriver (or drill), insert metal screws through the pre drilled holes in the holdback into the stud clockwise to tighten holdback snugly against the wall.

3. Attach finial to end of holdback

Care Instructions:

Wipe with a soft, dry or slightly damp cloth. To protect the finish, do not apply household cleaners of abrasives.

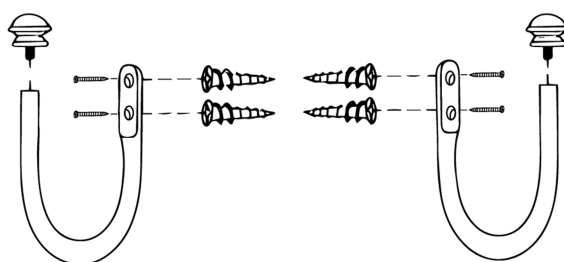

thank you for your purchase
stores | catalog | www.potterybarn.com