


POTTERY BARN

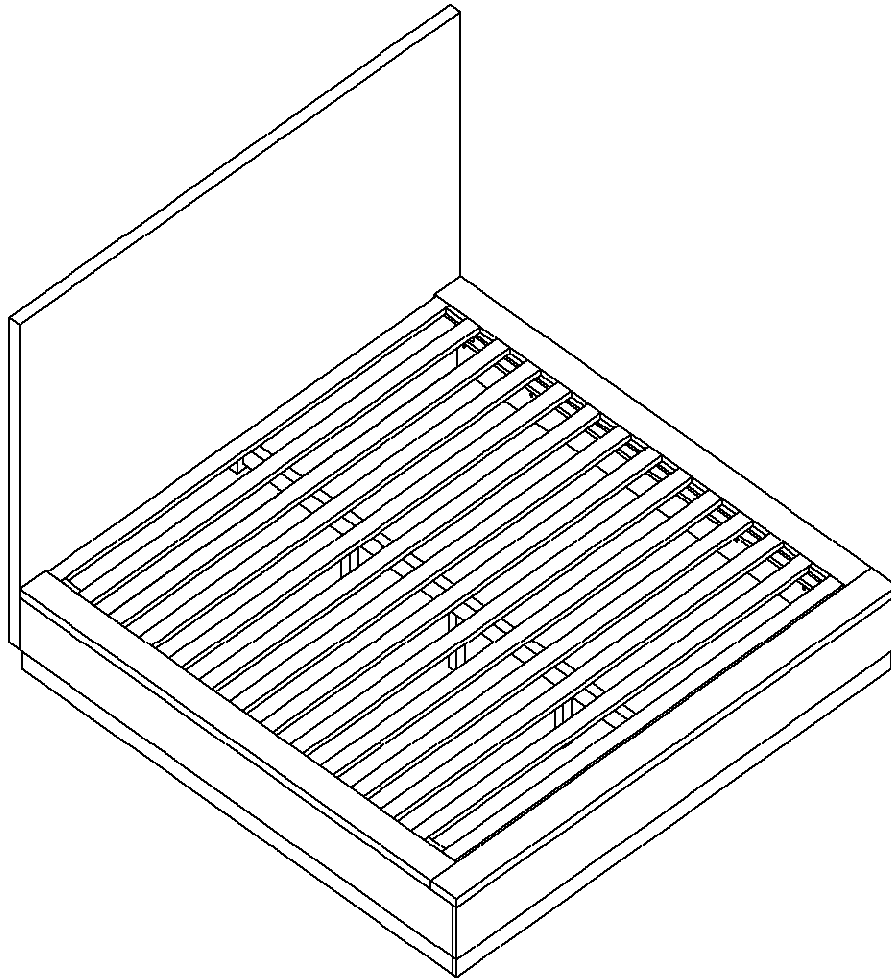

PB - RECLAIMED BED

Important Safety Instructions:


- Please read all instructions carefully before assembling.
- For your safety, assembly by two or more adults is strongly recommended.
- Keep instructions for future use.
- Use only vendor supplied hardware to assemble. Using unauthorized hardware could jeopardize the structural integrity of the item.

Pre-assembly:






- Remove all parts and hardware from the box and lay out on a clear carpeted or scratch-free work surface, as this will avoid damaging parts during assembly. The shipping box provides an ideal work surface.
- Do not dispose of any packaging or contents of the shipping carton until assembly is completed to avoid accidentally discarding small parts or hardware.
- Use the parts and hardware lists below to identify and separate each of the pieces included.
- The illustrations provided allow for easier assembly when used in conjunction with the assembly instructions.
- The use of power tools to aid in assembly is not recommended. Power tools can damage hardware and split wood.

Parts Included:

(C1)	Headboard	1x
(C2)	Left Side Rail	1x
(C3)	Right side rail	1x
(C4)	Center support	1x
(C5)	Footboard	1x
(C6)	Slat roll	1x

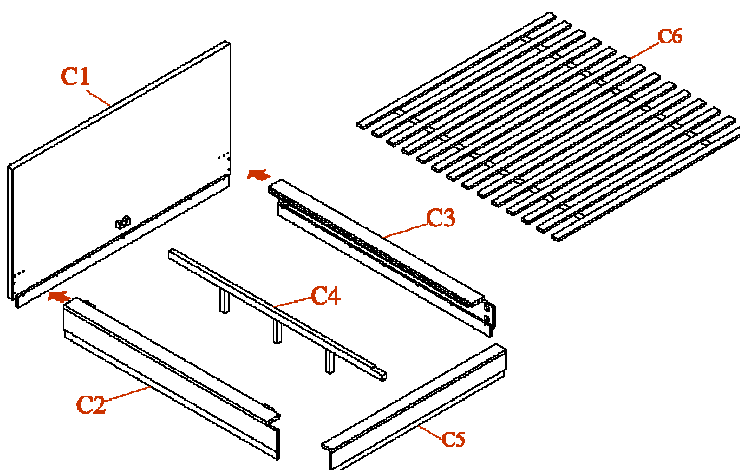


Hardware Included:

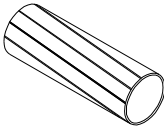
<p>(A) Half moon washer</p>  <p>M8mm 12 x</p>	<p>(B) Thread stud bolts</p>  <p>M8x 80 mm 12x</p>	<p>(C) Hexagon Nut</p>  <p>M8mm 12x</p>
<p>(D) Wooden Dowel</p>  <p>∅10X 30mm 8 x</p>	<p>(E) Spanner</p> 	

Assembly Instruction Steps:


1. Align the side rails perpendicularly (C2/C3) to the headboard (C1). Insert and tighten Thread stud bolts (B) in the insert nut on the headboard (C1) . Insert wooden dowel (D) in the pre- holes on side rail (C2/C3)

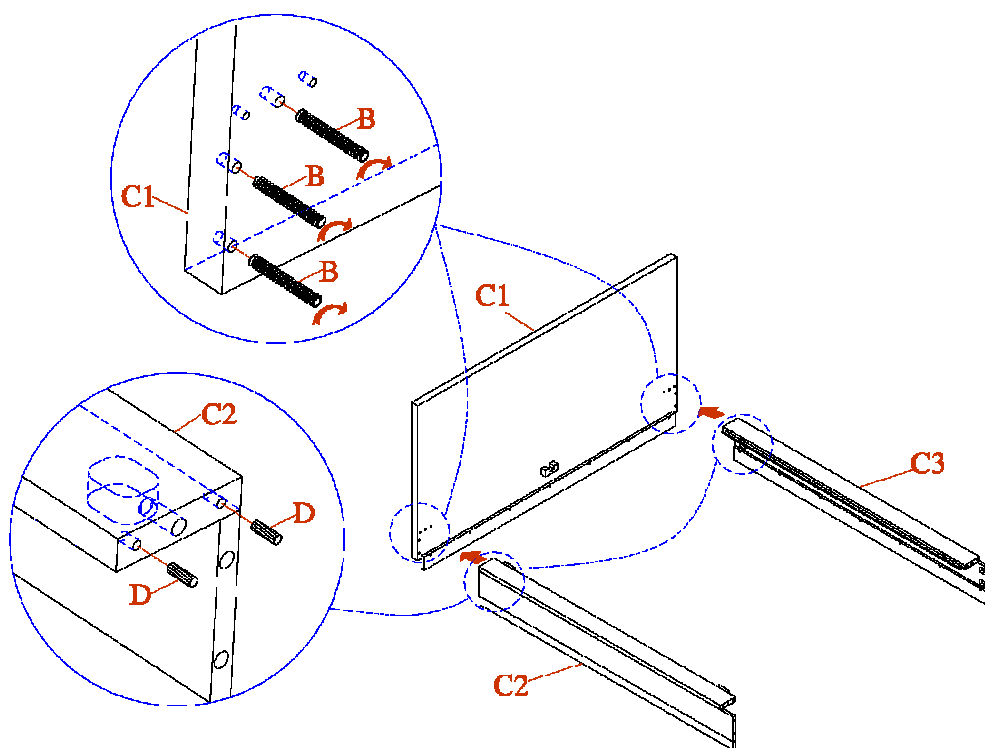


2. Insert half moon washer (A) and nut (C) Tighten with spanner (E)

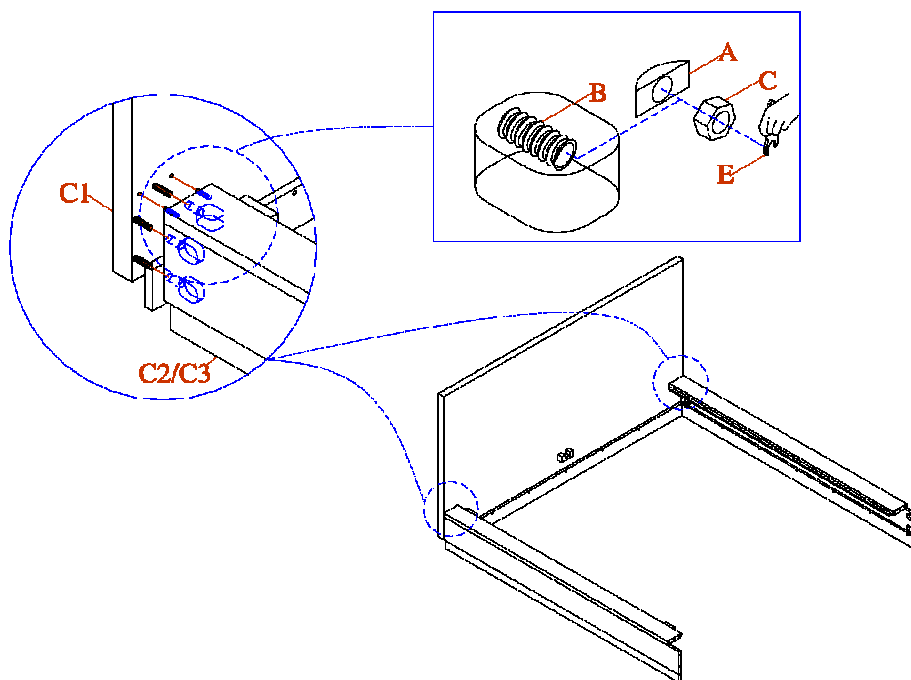


3. Position the central leg (C4B) under the central rail (C4 A) then attach the center support rail (C4) to Headboard .The adjustable leveler underneath the central leg can accommodate uneven flooring

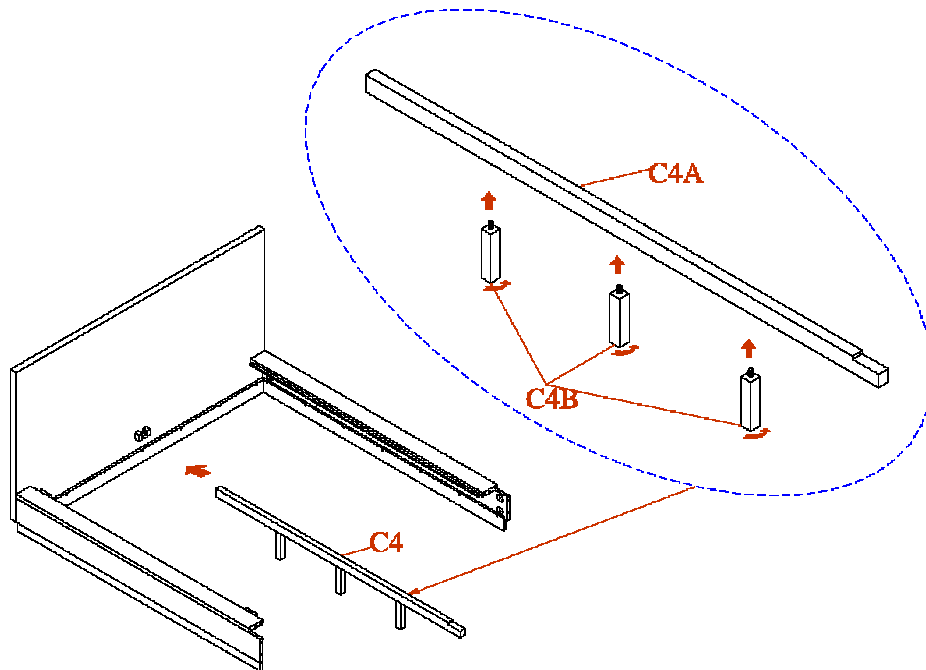


4. Align the Footboard perpendicularly (C5) to the side rails (C2/C3). Insert and tighten Thread stud bolts (B) in the insert nut on the Footboard (C5) . Insert wooden dowel (D) in the pre- holes on side rail (C2/C3)

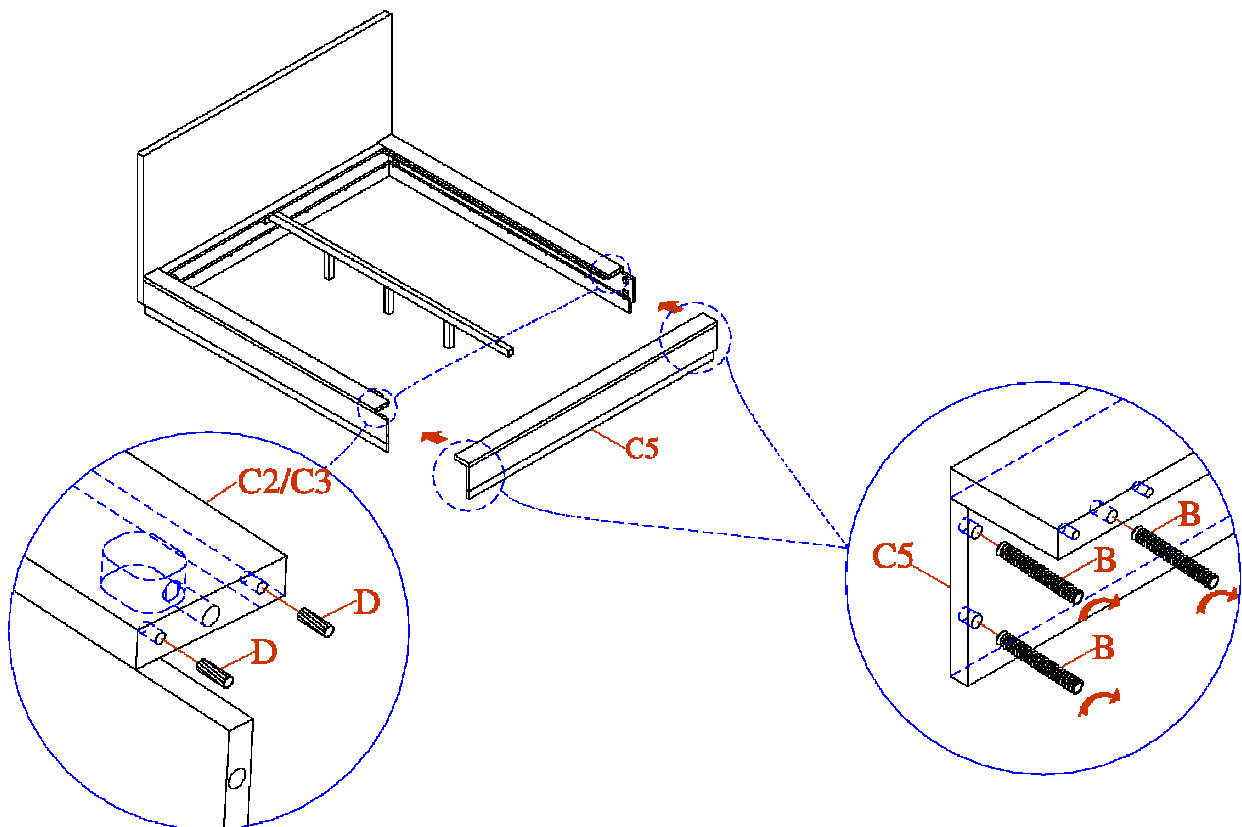

5. Insert half moon washer (A) and nut (C) Tighten with spanner (E)

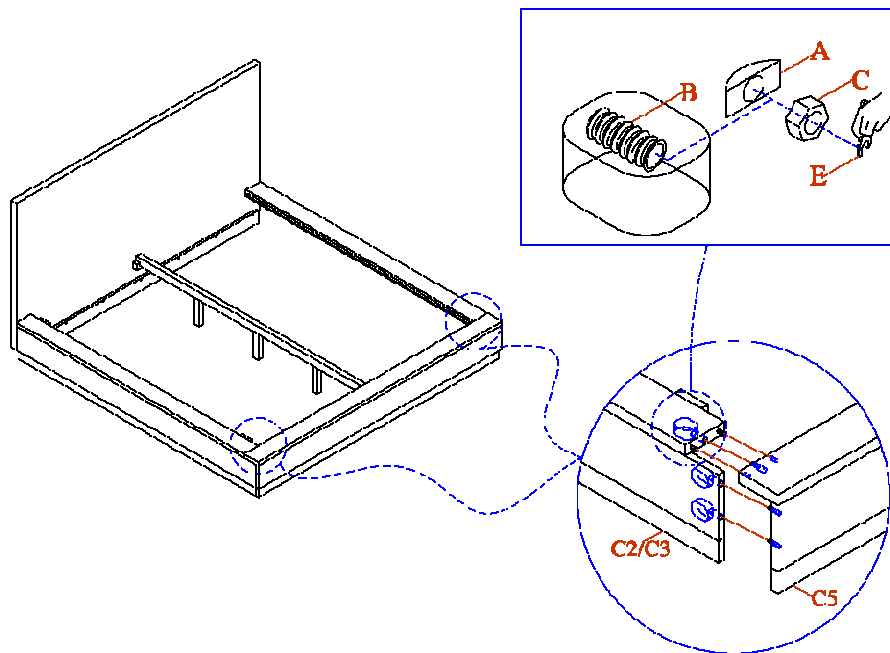

6. Put slat roll (C6) between side rails (C2/C3).

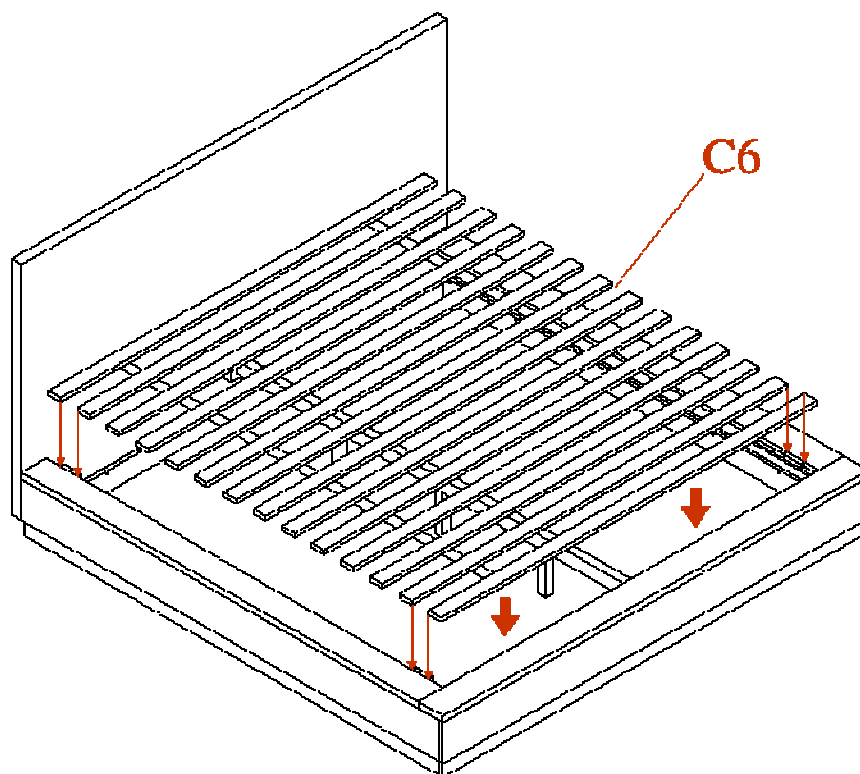

Care Instructions:

Date: 21-October-15
Rev:

- Dust often using a clean, soft, dry and lint-free cloth.
- Blot spills immediately and wipe with a clean, damp, cloth.
- We do not recommend the use of chemical cleansers, abrasives or furniture polish on our lacquered finish.
- Hardware may loosen over time. Periodically check to make sure all connections are tight.
Re-tighten if necessary.

Thank you for your purchase
Stores | catalog