


Williams-Sonoma Inc.

Assembly Instructions
Instructions d'assemblage
Instrucciones de Ensamblaje

~~pottery barn kids - PBteen - Pottery Barn - west elm - Williams Sonoma - Williams Sonoma Home -~~

22-September-2020

1/7

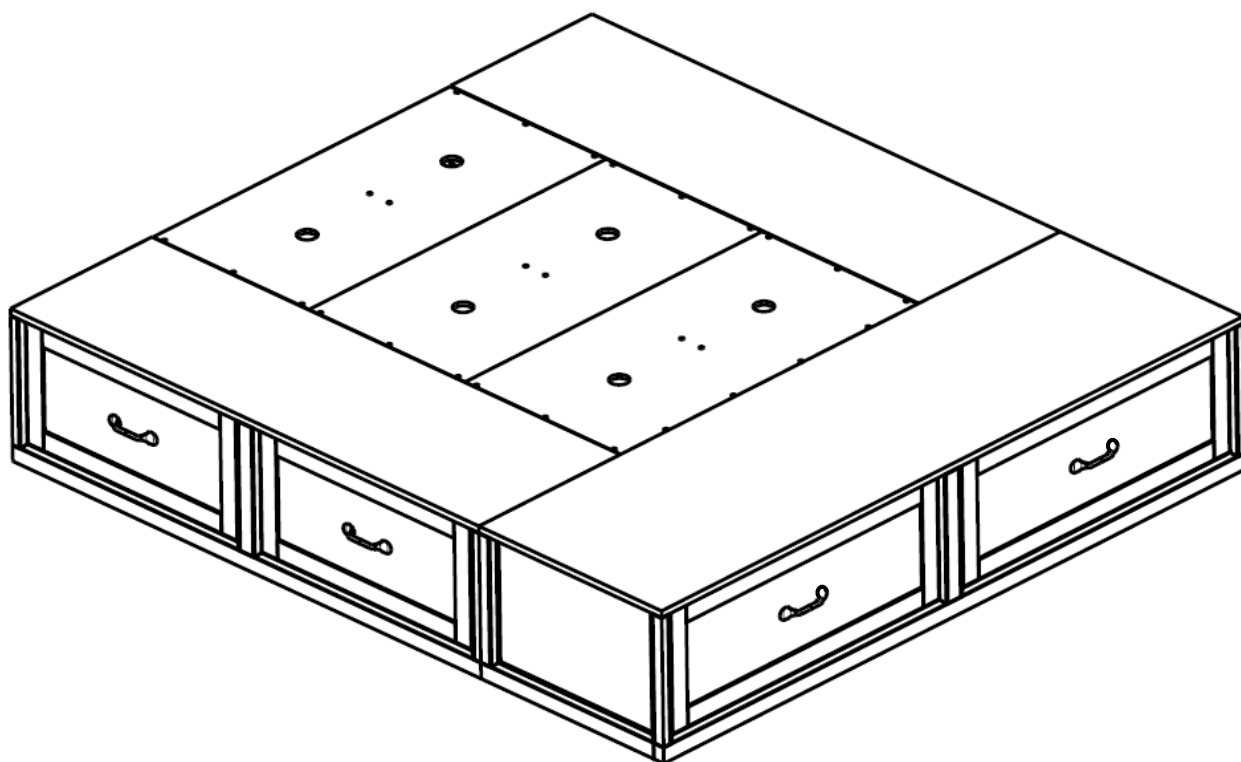

STRATTON

P4-STRATH-BK DRWR


Williams-Sonoma Inc.

Assembly Instructions
Instructions d'assemblage
Instrucciones de Ensamblaje

pottery barn kids - PBteen - Pottery Barn - west elm - Williams Sonoma - Williams Sonoma Home -

22-September-2020

2/7

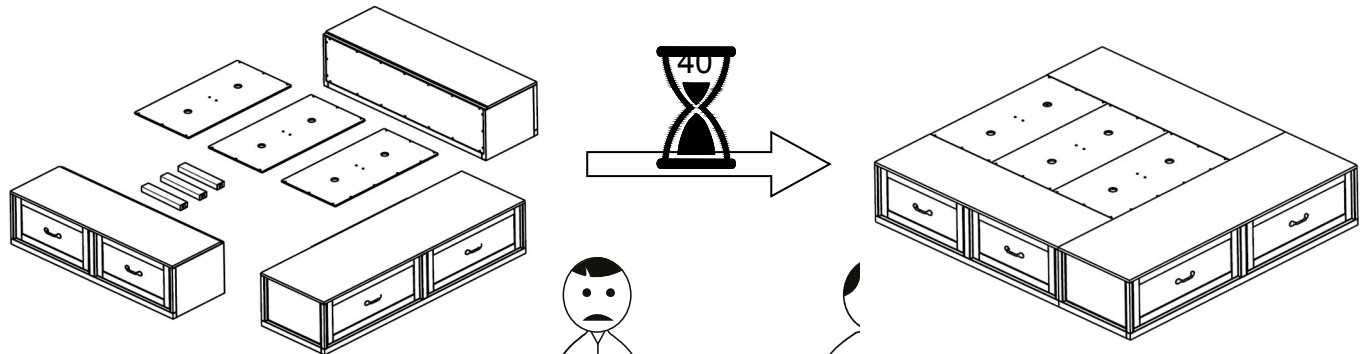

- Do not dispose of any packaging or contents of the shipping carton until assembly is completed to avoid accidentally discarding small parts of hardware.

△ FRANÇAIS

- Ne jetez rien des produits d'emballage et du contenu de la boîte jusqu'à ce que l'assemblage soit terminé, afin d'éviter de jeter par mégarde de petites pièces ou des morceaux.

△ ESPAÑOL

- Para evitar desechar accidentalmente las partes pequeñas o las piezas de ferretería, el embalaje o contenido de la caja hasta que el ensamblaje esté completo.

CARE INSTRUCTIONS:


- Dust often using a clean, soft, dry and lint-free cloth.
- Blot spills immediately and wipe with a clean, damp cloth.
- We do not recommend the use of chemical cleansers, abrasives or furniture polish on our lacquered finish.
- Hardware may loosen over time. Periodically check to make sure all connections are tight. Re-tighten if necessary.

INSTRUCTIONS D'ENTRETIEN:



- Épousseter régulièrement avec un chiffon propre, doux et non pelucheux.
- Éponger immédiatement les liquides renversés et essuyer à l'aide d'un chiffon propre et humide.
- L'utilisation de produits nettoyants chimiques, d'abrasifs ou d'encaustiques sur nos finitions laquées n'est pas recommandée.
- Le matériel de fixation peut se desserrer avec le temps. Vérifiez régulièrement afin de vous assurer que tous les raccords sont bien serrés. Resserrer-les au besoin

INSTRUCCIONES DE CUIDADO:




- Limpiar el polvo con un trapo limpio, suave, seco y libre de pelusas.
- Secar los derrames de inmediato y limpiar con un trapo limpio y húmedo.
- Recomendamos no usar limpiadores químicos, abrasivos o lustramuebles sobre el acabado barnizado.
- Las piezas de ferretería pueden aflojarse con el tiempo. Controlar periódicamente que estén bien ajustadas. Si es necesario, volver a apretarlas.

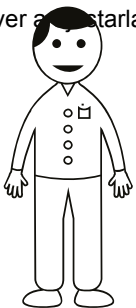


NOT INCLUDED / NON INCLUS / NO INCLUIDAS

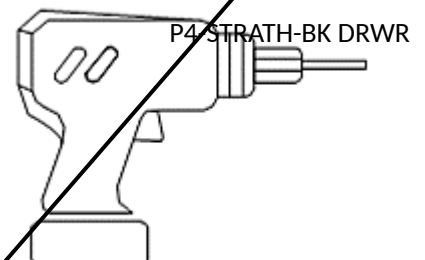



X4

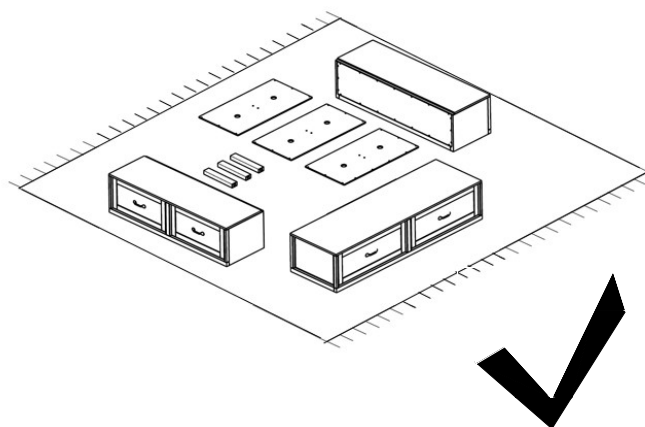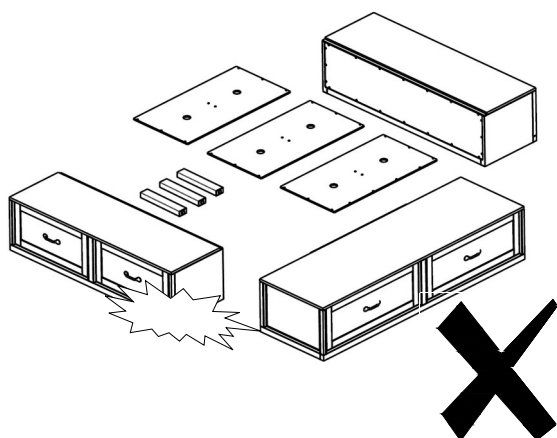



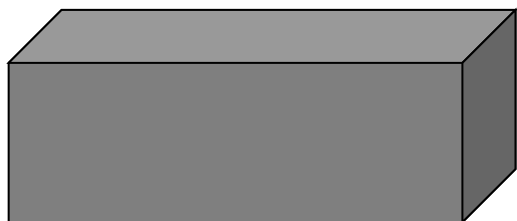


BOX 1 OF 2 (2 PCS)

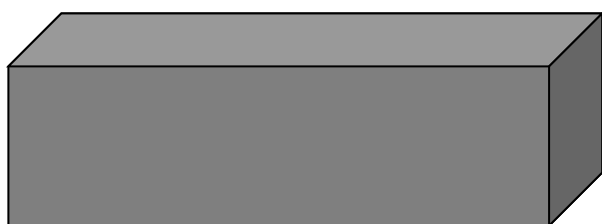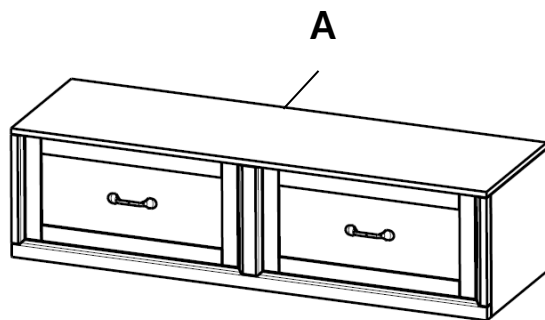


BOX 2 OF 2 (1 PCS)

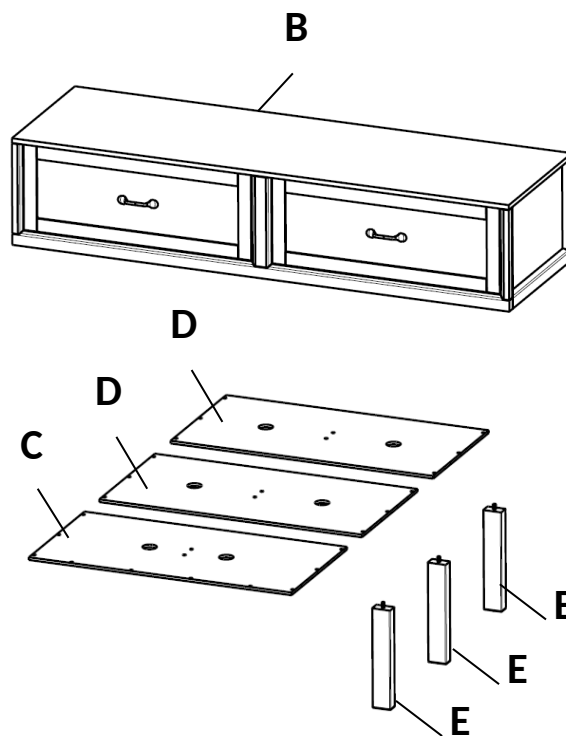

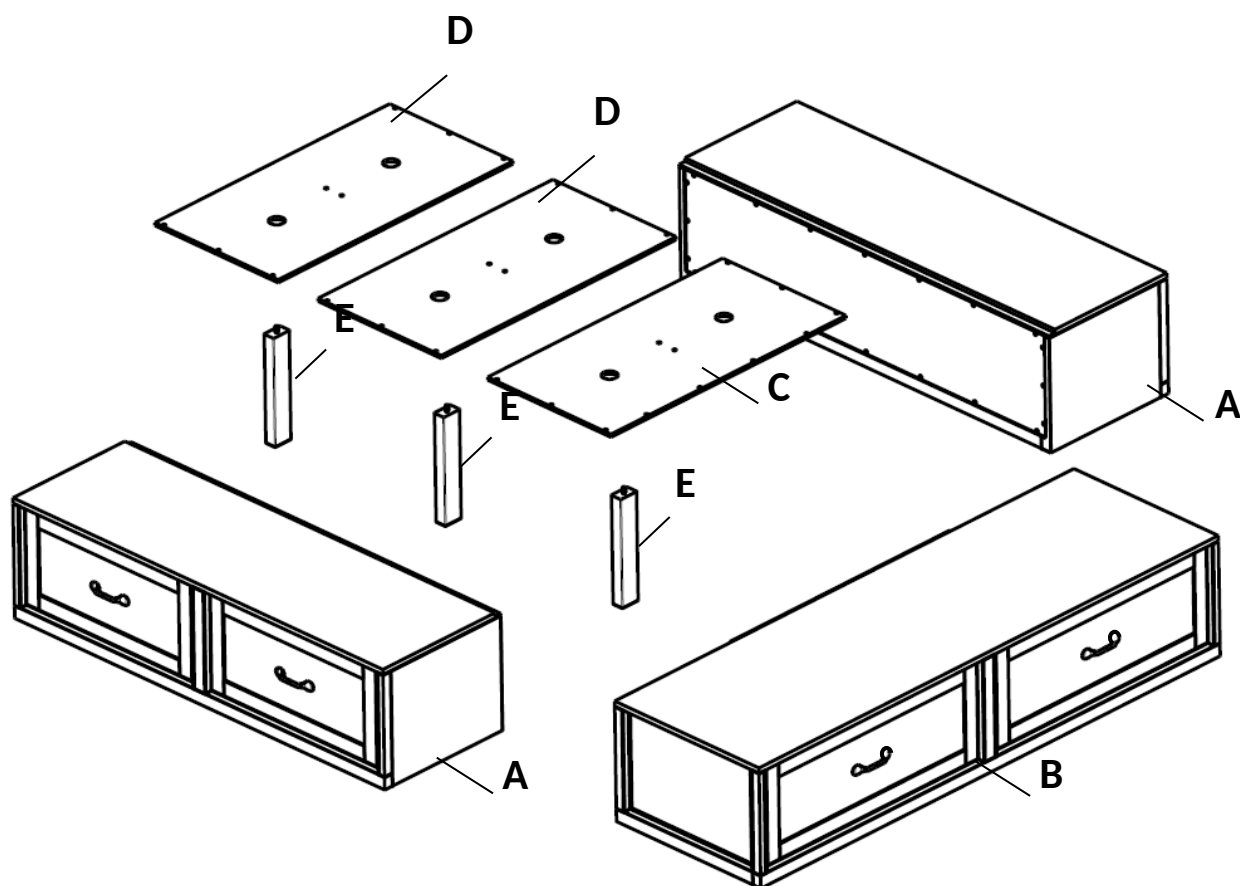



Ø8x25mm
22x

1

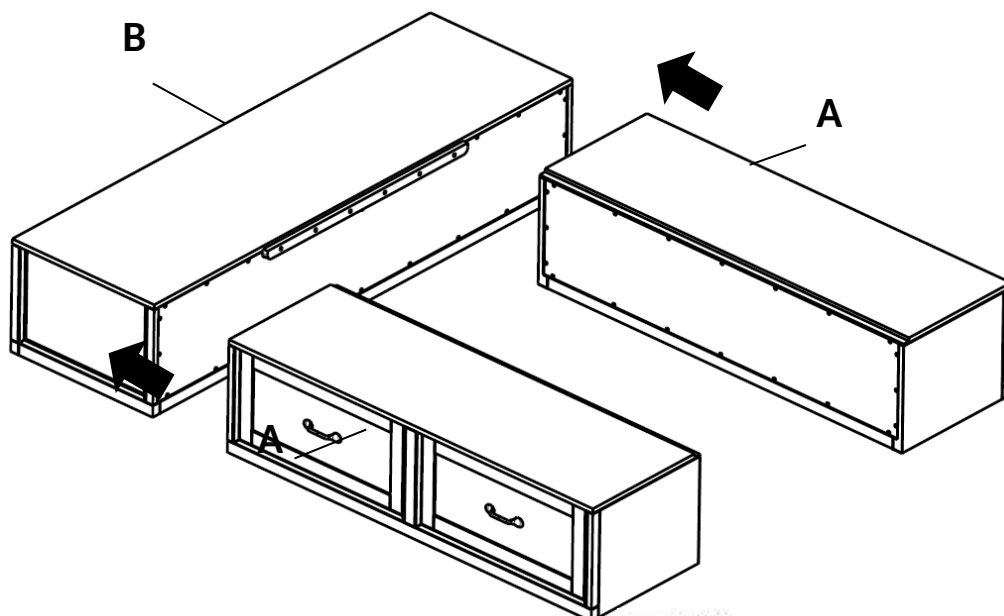

2

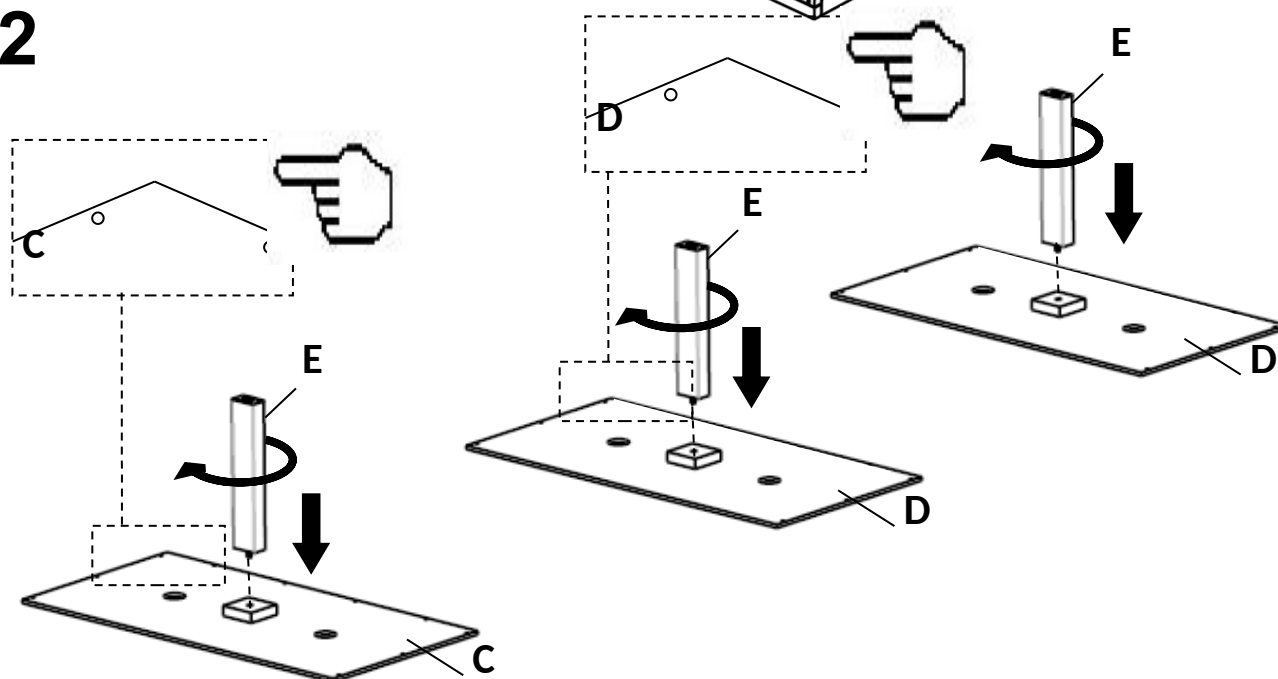

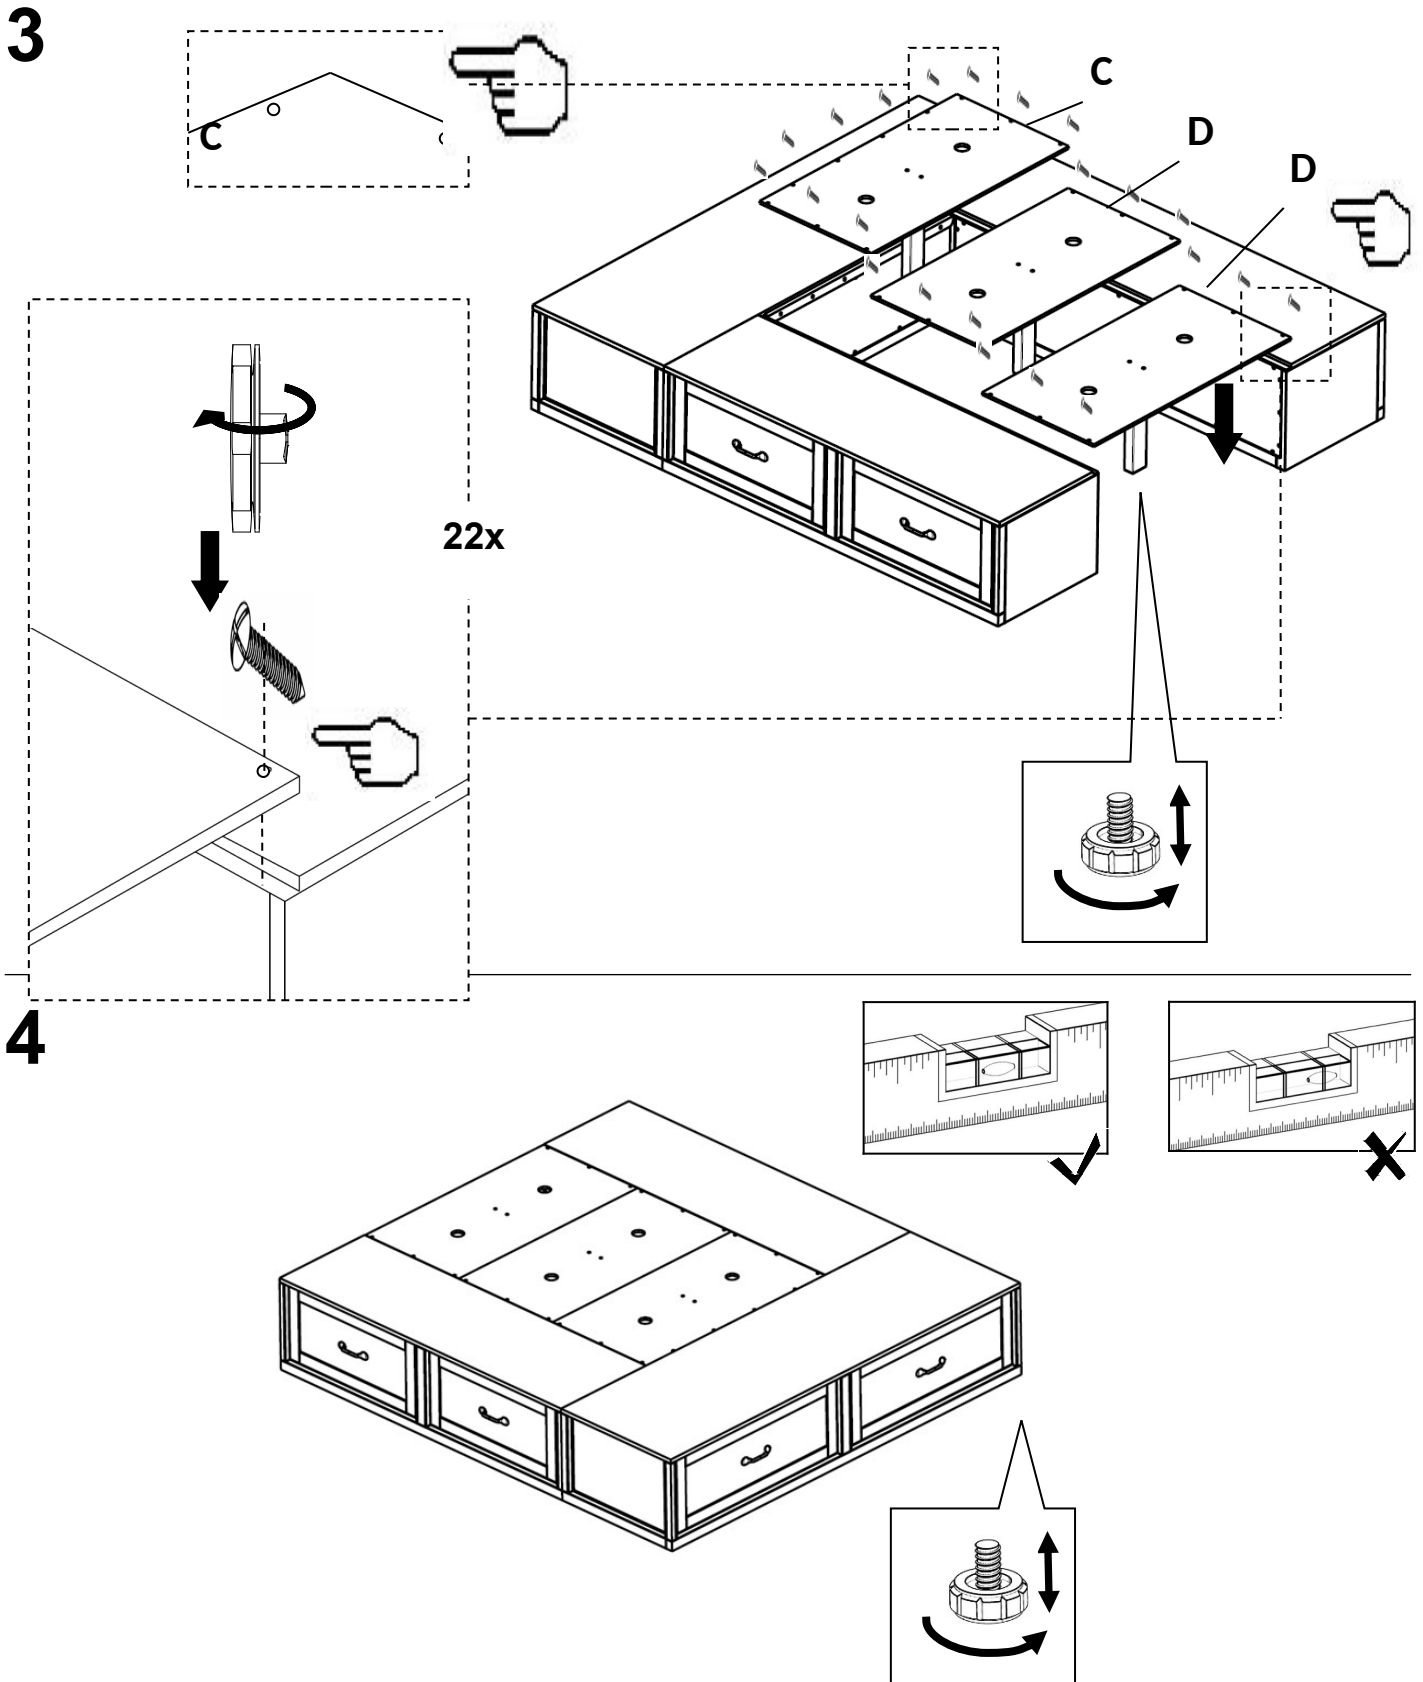

POTTERY BARN

Montgomery Headboard Only Assembly Instructions

Pre-Assembly:

- Please read all instructions carefully before assembling.
- For your safety, assembly by two people is recommended.
- Save all packing materials until fully assembled to avoid accidentally discarding any hardware.

Parts Enclosed:


- (1) Headboard with 3 pre-drilled holes in each side. (A)

Hardware Enclosed:

- (6) M6 Allen bolt (B) 
- (6) M6 Allen nut (C) 
- (6) M6 Spring Washer (D) 
- (6) M6 Flat Washer (E) 
- (2) M4 Allen key (F) 

Required for Assembly:

- (1) Pre-assembled bed frame (not included) (G)

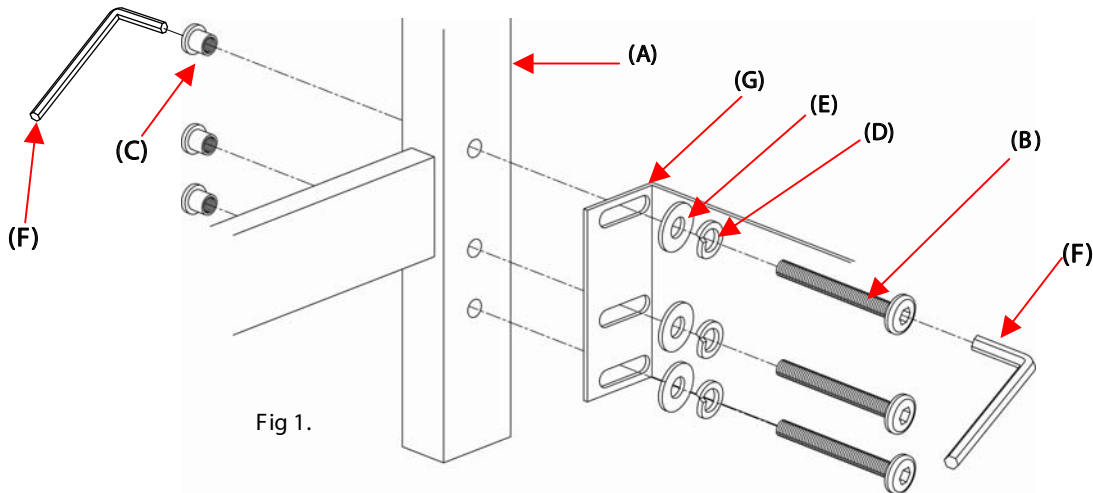

Assembly Instructions:

1. Align the holes of the bed frame faceplates (G) with the holes found in the sides of the headboard (A). (Fig 1)
2. Insert the bolts (B) through the spring washers (D), flat washers (E), the slots of the bed frame's faceplates (G), the pre-drilled holes in the sides of headboard (A) and into the Allen nut (C) at back of headboard (A). Tighten with Allen key (F).
3. Assembly is complete. Periodically tighten all connections.

Care Instructions:

- Vacuum regularly.
- Over the counter cleaning products are not recommended.
- Avoid exposure from sun, direct light and heat sources.
- Spot clean only.

thank you for your purchase
stores | catalog | [_www.potterybarn.com](http://www.potterybarn.com)

Replacing Headboard Fabric



1. Lay headboard face down on a carpeted or scratch-free surface.
2. Remove hardware from back frame with Allen Key as shown in Figure 1.
3. Stand headboard in vertical position and remove panel from headboard frame as shown in Figure 2.
4. Carefully remove fabric from panel as shown in Figure 2.
5. Replace with new fabric.
6. Re-insert panel into headboard frame as shown in Figure 3.
7. Replace hardware as shown in Figure 4.

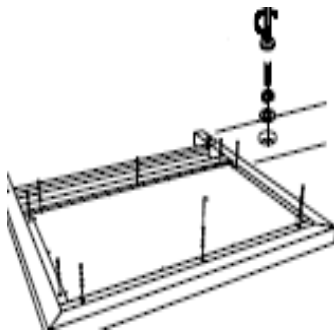


Figure 1

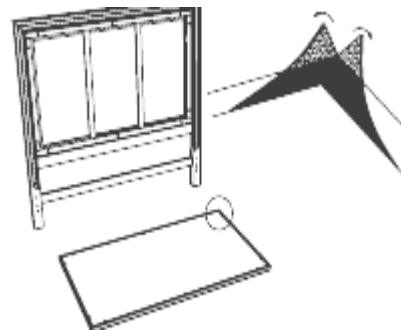


Figure 2

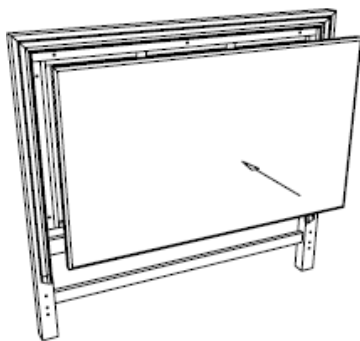


Figure 3

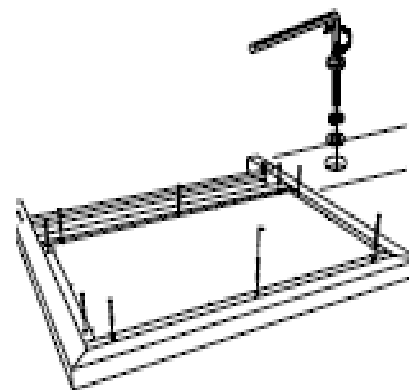


Figure 4