


# POTTERY BARN

## TORREY DAYBED ASSEMBLY INSTRUCTIONS

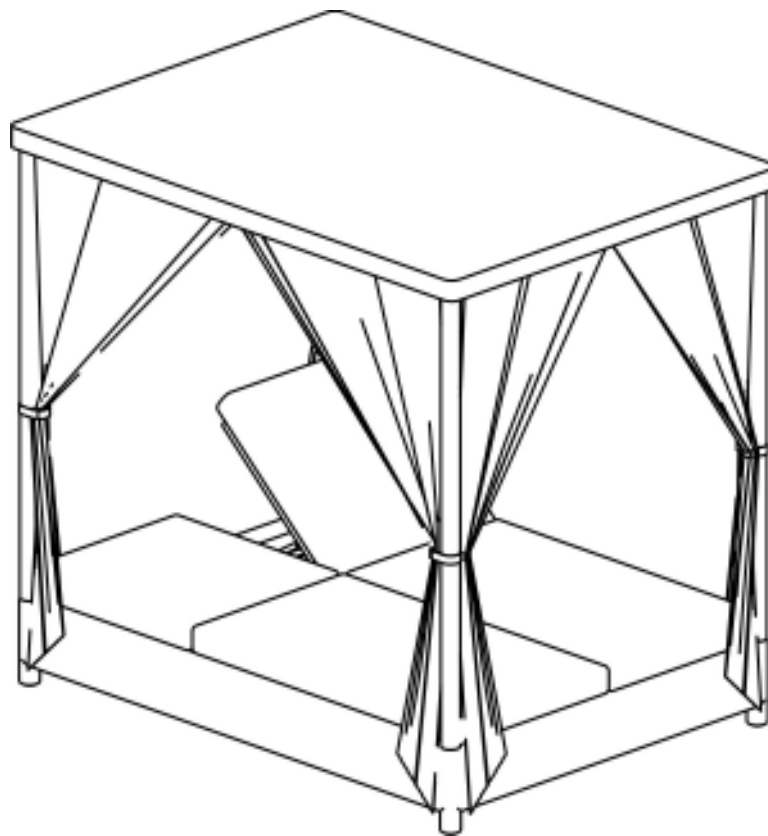

Date: 2013-Nov.-21

[www.potterybarn.com](http://www.potterybarn.com)

### Important Safety Instructions:

- Please read all instructions carefully before assembling.
- For your safety, assembly by two or more adults is strongly recommended.
- Keep instructions for future use.
- Use only vendor supplied hardware to assemble. Using unauthorized hardware could jeopardize the structural integrity of the item.


### Pre-assembly:

- Remove all parts and hardware from the box and lay out on a clear carpeted or scratch-free work surface, as this will avoid damaging parts during assembly. The shipping box provides an ideal work surface.
- Do not dispose of any packaging or contents of the shipping carton until assembly is completed to avoid accidentally discarding small parts or hardware.
- Use the parts and hardware lists below to identify and separate each of the pieces included.
- The illustrations provided allow for easier assembly when used in conjunction with the assembly instructions.
- The use of power tools to aid in assembly is not recommended. Power tools can damage hardware and split wood.

### Parts Included:

(A) Daybed	1 pc	(E) Fabric Strap	4 pcs
(B) Post	4 pcs	(F) Roof Cover	1 pc
(C) Roof	1 pc	(G) Cushion	2 pcs
(D) Side Curtain	8 pcs		


**(A)**

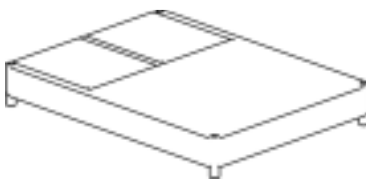


**(B)**



**(C)**

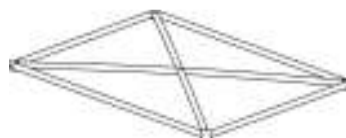

**(D)**

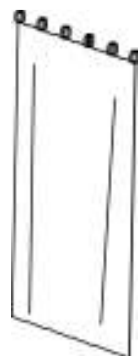


**(E)**






**(F)**

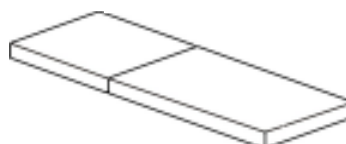

**(G)**



**Hardware Included:**

(H) Allen Bolt  M6 x 20 12x	(I) Flat Washer  12x	(J) Allen Key  1x
--	--	--

**Assembly Instruction Steps:**

1. Lay the Daybed (A) sideways on scratch-free or carpeted surface. Insert the Posts (B) to Daybed (A) by aligning the pre-drilled holes on the posts to the holes on the daybed. From under the daybed, secure with 8 pcs Allen Bolts (H), 8 pcs Flat Washers (I) and tighten with the supplied Allen Key (J).

(Fig. 1)

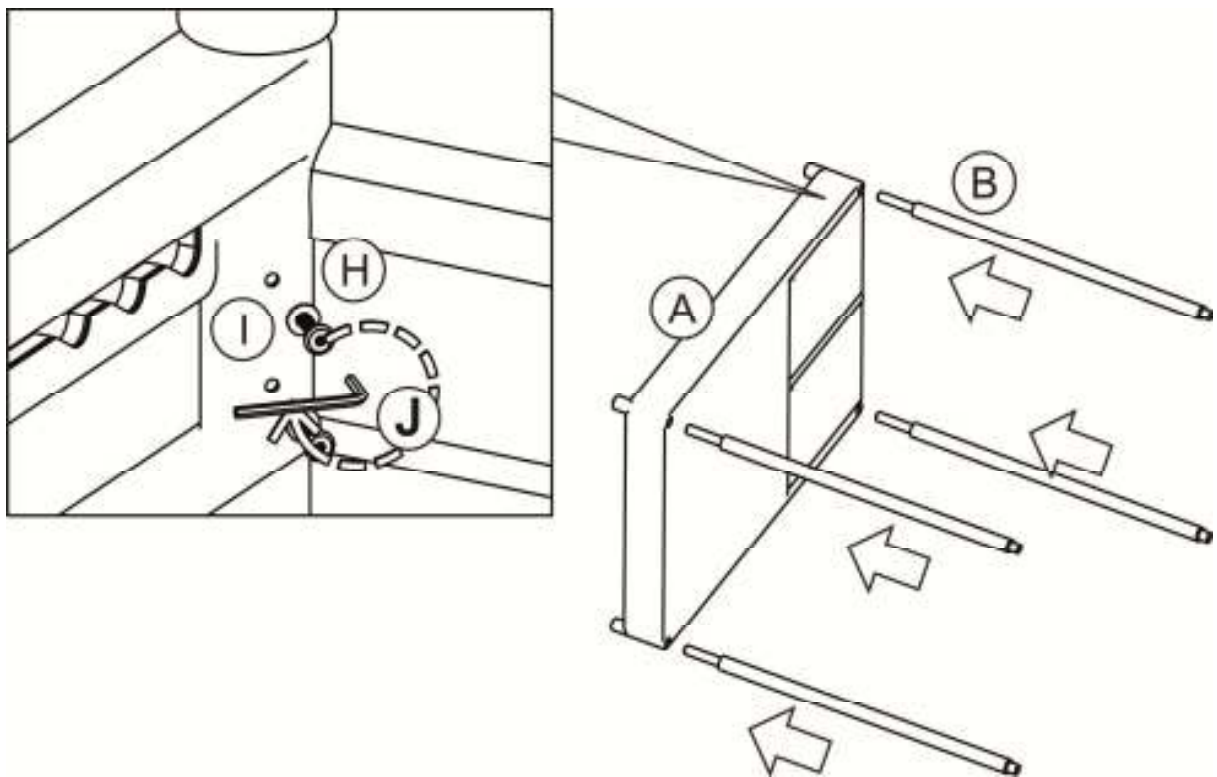


Fig. 1

2. Assemble the Roof (C) to the Posts (B) and secure with 4 pcs Allen Bolts (H), 4 pcs Flat Washers (I) and tighten with the supplied Allen Key (J).

(Fig. 2)

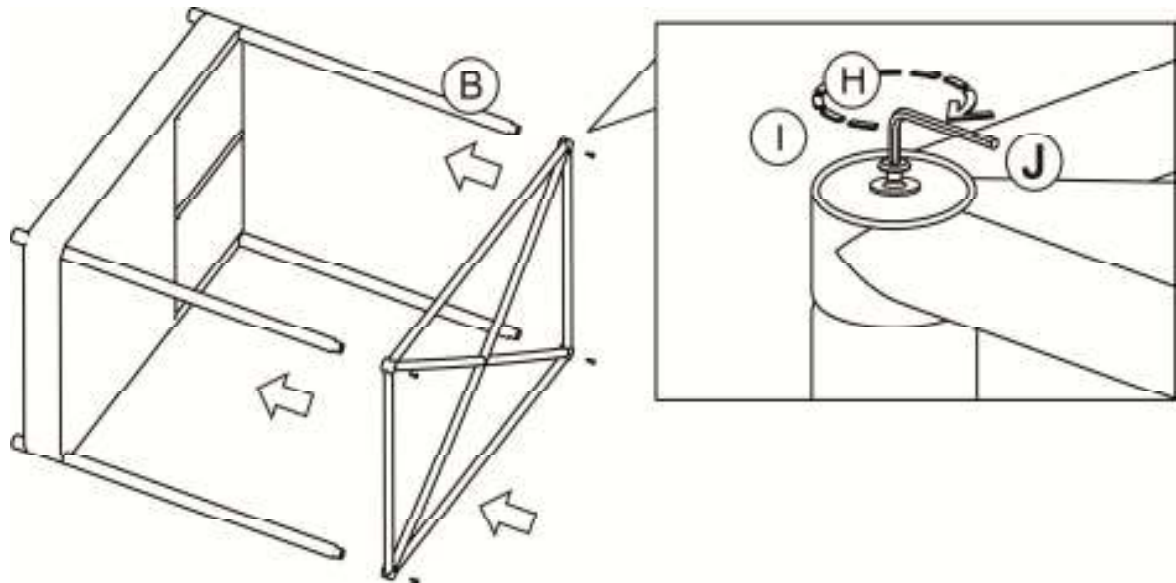


Fig. 2

3. Attach the Side Curtain (D) to the roof frame using Velcro as shown. (Fig. 3)

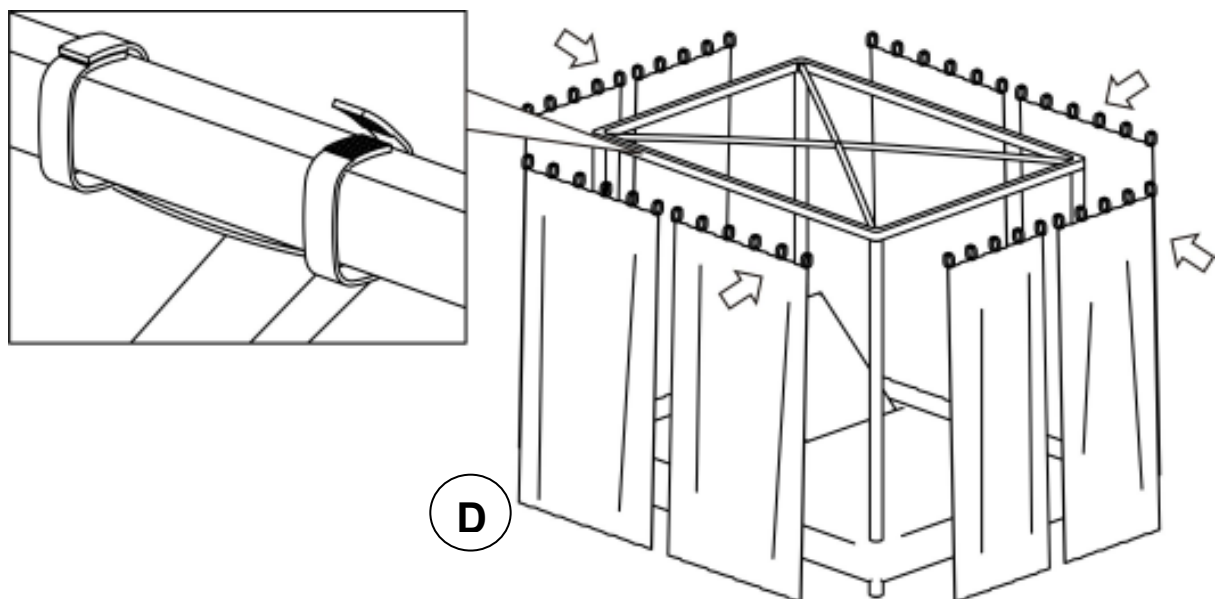


Fig. 3

4. Attach the Roof Cover (F) to the Roof frame (C) with Velcro on all 4 corners & center. Fasten the curtain using Fabric Strap (E). (Fig. 4)

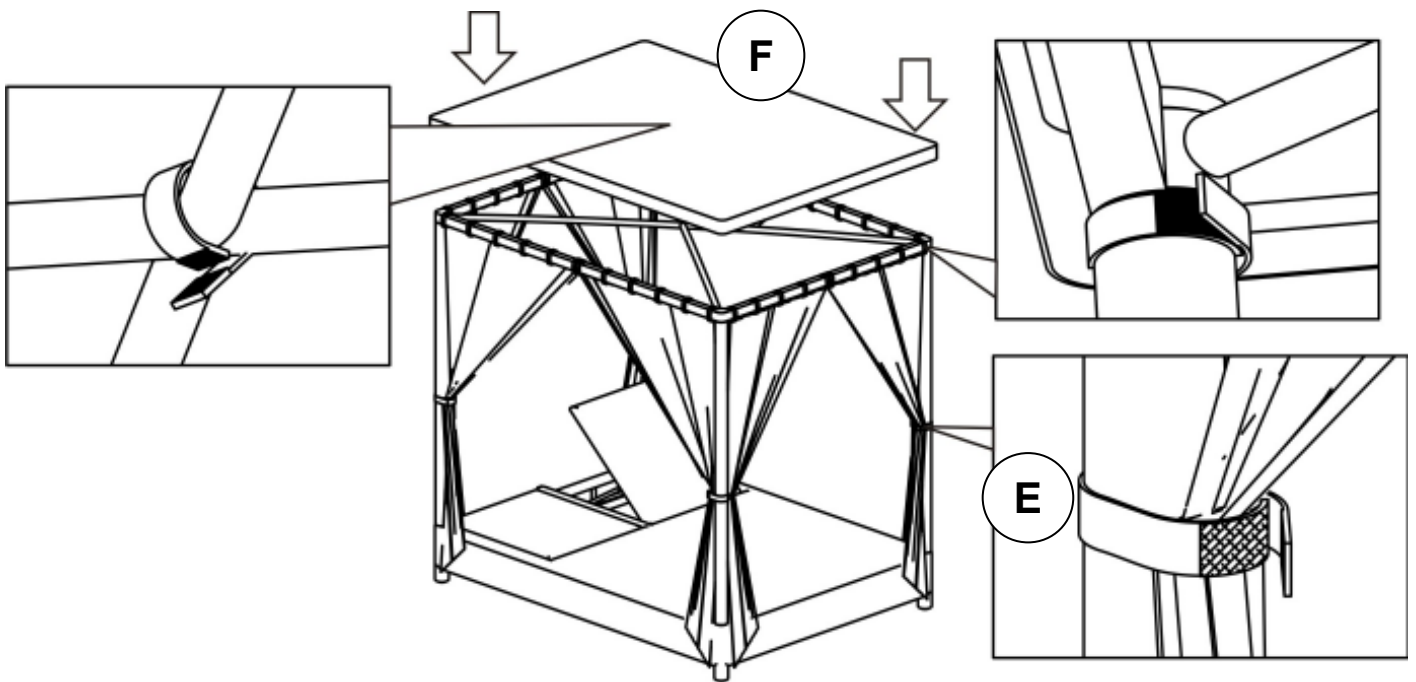


Fig. 4

5. Attach the Cushion (G) on the daybed by inserting the strap into the ring and secure with the Velcro. (Fig. 5)

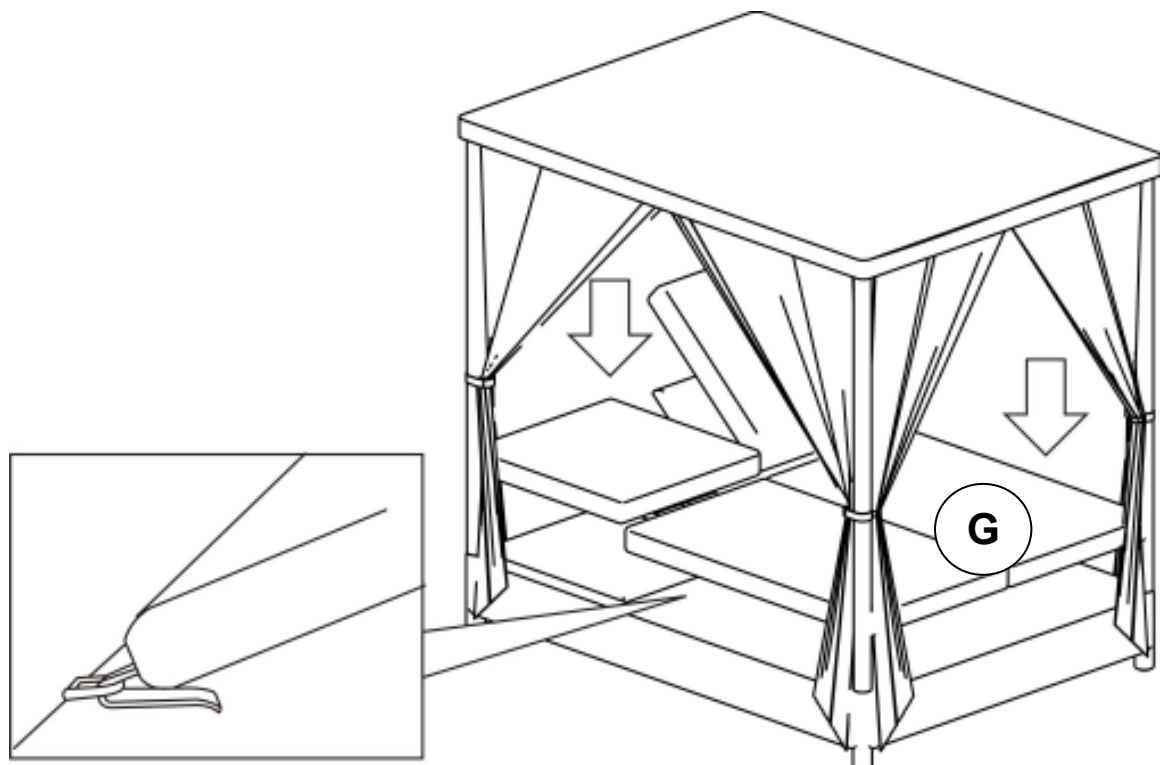
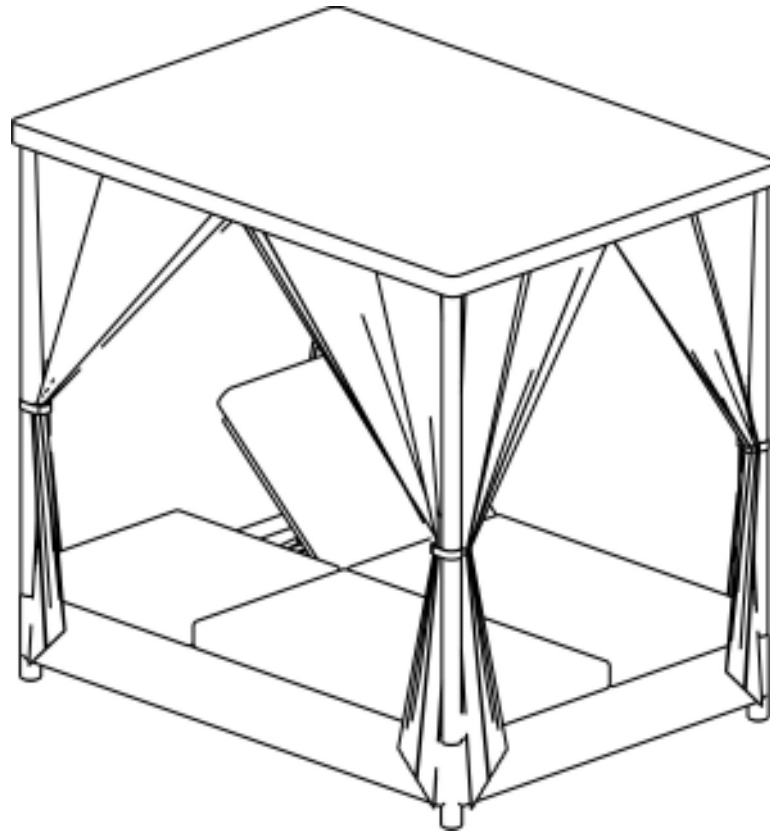


Fig. 5

**6.** Assembly is complete. (Fig. 6)



**Fig. 6**

**Care Instructions:**

- Dust often using a clean, soft, dry and lint-free cloth.
- Blot spills immediately and wipe with a clean, damp, cloth.
- To protect the furniture from spills, always use coasters.
- We do not recommend the use of chemical cleansers, abrasives or furniture polish on our lacquered finish.
- Hardware may loosen over time. Periodically check to make sure all connections are tight.
- Re-tighten if necessary.