

P O T T E R Y B A R N

Hudson Bed Full

Pre-Assembly:

- ❖ Please read all instructions carefully before assembly.
- ❖ For your safety and ease, assembly by two people is recommended.
- ❖ Carefully lay out and identify all parts and hardware prior to assembly.
- ❖ Save all packing materials until assembly is complete to avoid accidentally discarding small parts or hardware.

Part Included:


- | | | |
|---------------------|---------------------|---------------------------|
| BOX 1 | BOX 2 | BOX 3 |
| • (1) Headboard (A) | • (1) Footboard (B) | • (2) Side rails (C1, C2) |
| | | • (1) Slat Roll (D) |

Hardware Enclosed:

- (34) Wood screws $\frac{1}{4}$ x 1" (includes 2 additional screws)

Assembly instructions:

1. Attach side rails (C1, C2) to headboard (A) and footboard (B), placing hook into slot. (Fig. 1)
2. Lay the slat roll (D) in place so the pre-drilled holes on the end of each slat lines up with the pre-drilled holes on the side rail lip.
3. Secure the slats by inserting the wood screws. Tighten screws with a Phillips screwdriver.
4. Assembly is complete.

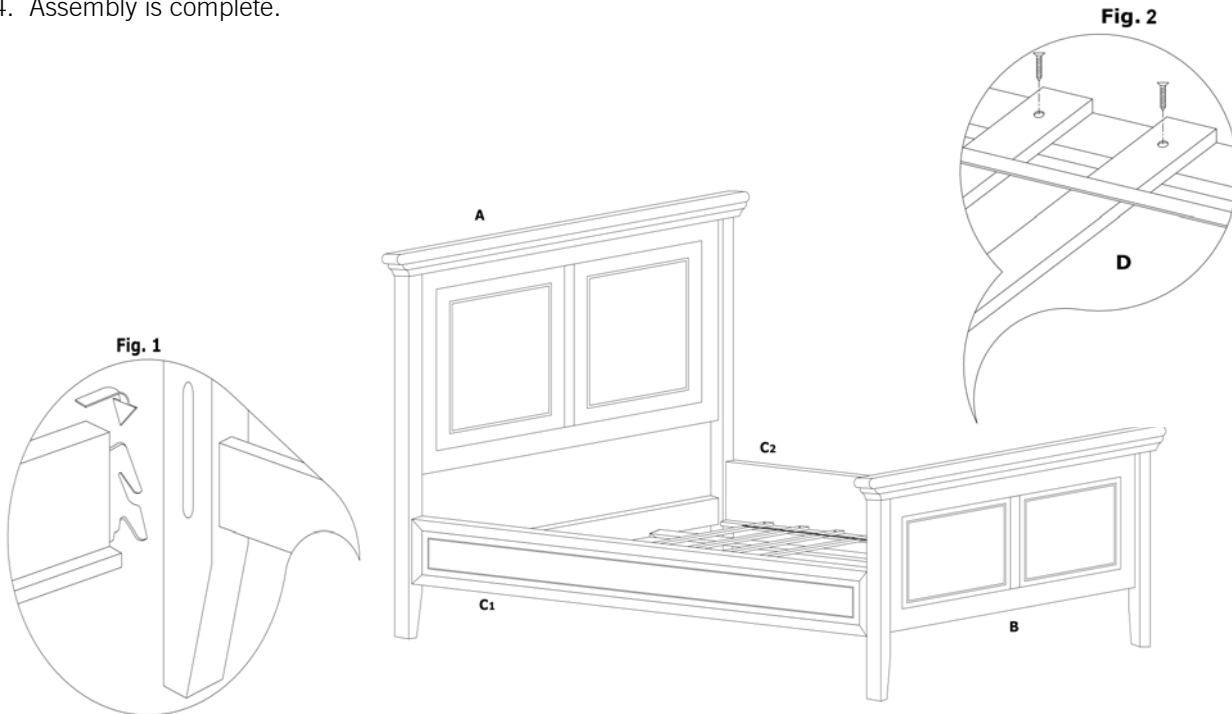

Care Instructions:

- For daily cleaning, dust with a dry, soft cloth.
- Avoid the use of chemical and abrasive cleaners.
- Wipe up spills immediately.

thank you for your purchase