

POTTERY BARN

Covington Hardware 24" Towel Bar Pol Nickel Assembly Instructions

Note:

For safe mounting, it is essential to use the proper hardware for your wall type. Contact your local hardware store for assistance, if necessary. For safety and ease of mounting, installation is recommended using two people. Mount to wood studs whenever possible.

Tools Needed:

Level, tape measure, stud finder, Phillips screwdriver, pencil

Parts Included:

- 4 Plastic anchors (for dry wall only)
- 4 Metal screws
- 1 Allen wrench
- 1 24" Towel Bar with pre-attached set screws

Mounting Instruction

1. Pre-assemble 24" Towel Bar. With a pencil, mark on the wall the screw hole location. Remove from wall. These marks will be used to determine the location of your mounting hardware.
2. Use a level or measure up from the floor at each mark to ensure the bar will be level.

Dry Wall Mounting:

1. Use a Phillips screwdriver to insert the plastic anchors. Do not "push" or drive the anchors into the wall, they are designed to bore into the wall like a drill bit. Slowly turn the anchors clockwise while applying pressure until the flange just touches the wall.



Previously installed dry wall plastic anchors and attached 24" Towel Bar on to plastic anchors Secure by turning set screws clockwise with Allen wrench until tight. Then Inserting metal screws Tighten screws with a Phillips screwdriver.

Stud Mounting:

Anchor directly into the wall and attached the 24" Towel Bar on to anchor Secure by turning set screws clockwise with Allen wrench until tight then Tighten screws with a Phillips screwdriver.

Care Instructions:

Wipe with a soft, dry cloth. To protect the finish, do not use household cleaners or abrasives.

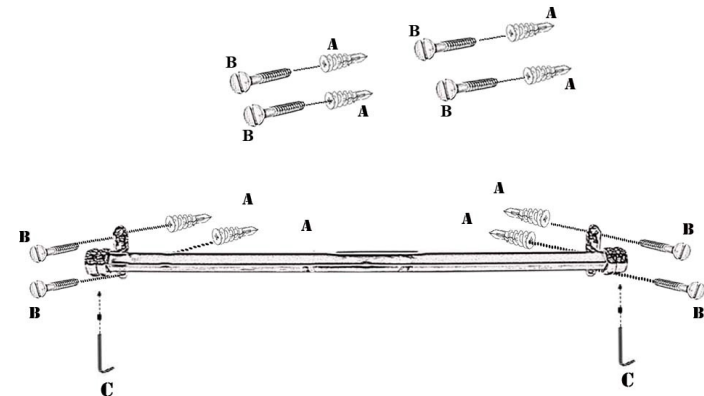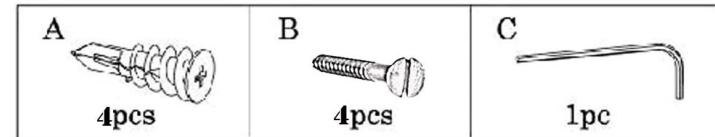

Thank you for your purchase

Stores | catalog | www.potterybarn.com