


# P O T T E R Y B A R N

## Equestrian Wall Mirror

### Mounting Instruction

**Note:** The hardware provided is meant for dry wall/stud mounting only. If walls are concrete, brick or plaster, please consult your local hardware store for assistance. The mirror is supported using the two keyhole plates pre-secured on the back of the mirror. The metal loop of the mirror is meant for decorative use only and it should not support the weight of the mirror.

#### PARTS INCLUDED:

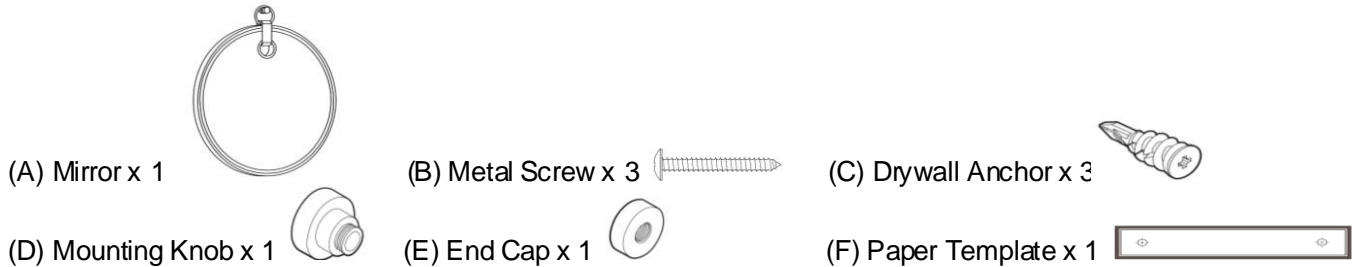

#### TOOLS REQUIRED:

Phillips Screwdriver, Pencil, Tape Measure, Level, Stud-finder.

#### MOUNTING INSTRUCTIONS:

1) Determine a desired mounting location for the mirror. Place the provided paper template on the wall and using a carpenter's level to ensure a level installation. Using a pencil, mark the wall through the template at each screw mark. Remove the template, the resulting marks on the wall are the insertion locations for the mounting hardware.



2) Use a stud-finder to determine if there is a wall stud located at either insertion mark. Install the proper hardware, as following.

- Dry Wall Installation (diagram shown on the right):


Using a Phillips screwdriver to engage an anchor (C), press the anchor tip against the wall at insertion mark. Driver the anchor into the wall (turn the anchor clockwise while applying an even pressure on it) until its head is flush with the wall surface. Do not over-tighten. Insert a screw (B) into each installed anchor and rotate with the screwdriver. Leave the screw head about 3/8 inch protruded from the wall.

- Wood Stud Installation (diagram shown below):

If any of the insertion marks aligns with a wall stud, use the Phillips screwdriver to secure the screw (B) directly into the wall and stud. Same, leave the screw head about 3/8 inch protruded from the wall.

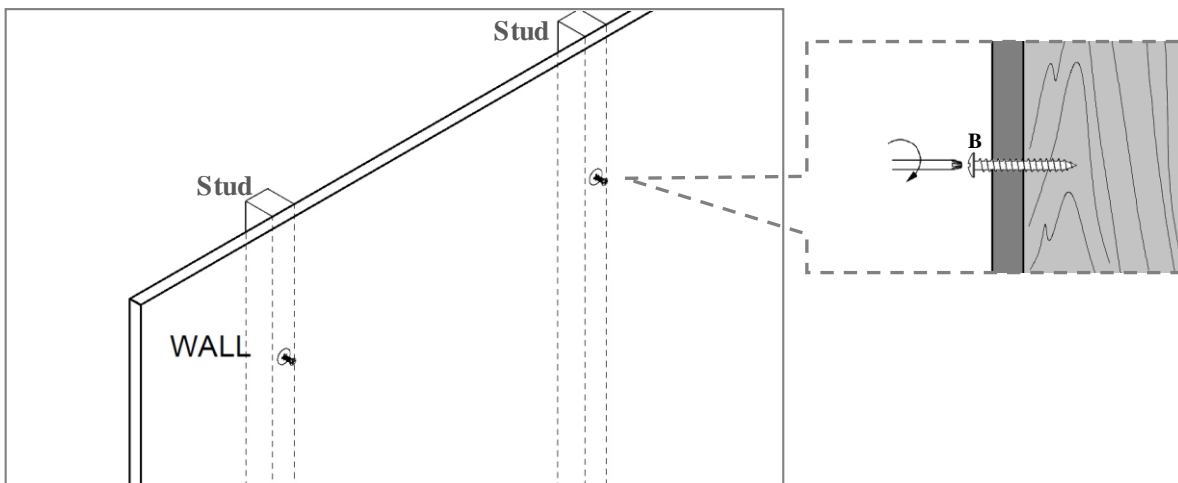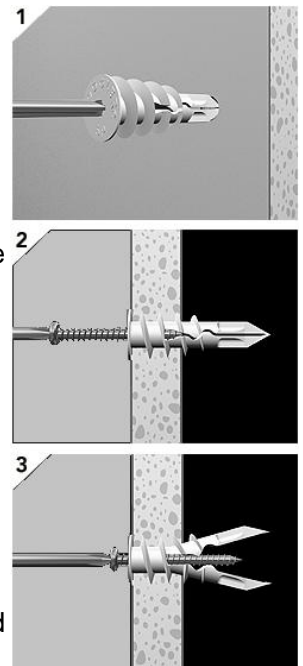

- 3) Once both screws are secured in place, raise the mirror against the wall and align the two keyholes over the screw heads and then slide the mirror down until the keyholes are engaged with the screws. The mirror now should be fully supported by the screws.

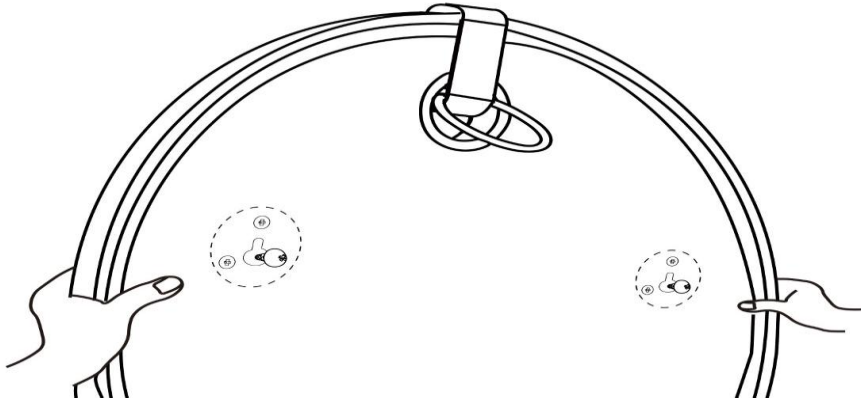

- 4) Hand the mirror's loop up and mark location of mounting knob (D). Refer to step#2 for installing the other anchor. Once installed, position the mounting knob over the anchor and secure using screw (B), tighten firmly. (Fig.1)
- 5) Attach the metal loop onto mounting knob (Fig.2) and fasten the end cap (E). (Fig3)

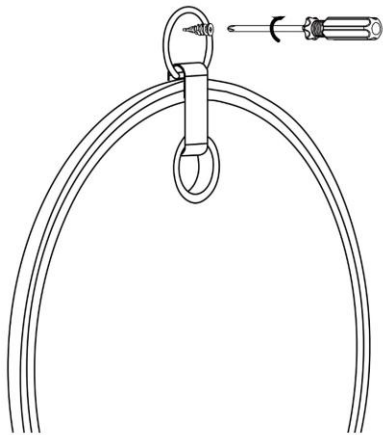


Fig.1

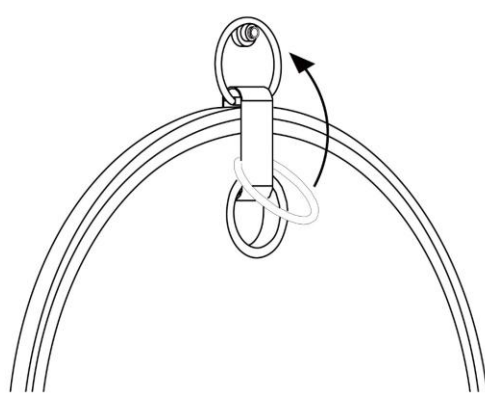


Fig.2

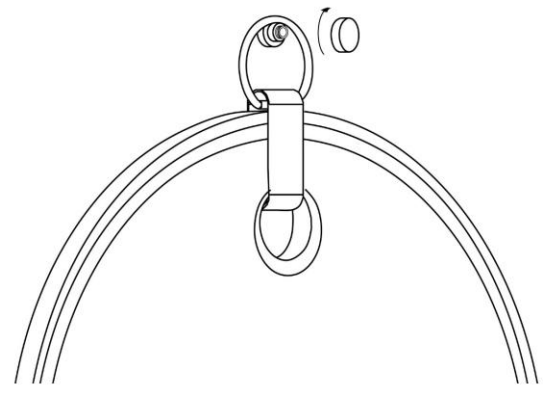


Fig.3

#### CARE INSTRUCTIONS:

- Wipe with a soft, dry cloth. To protect the finish, do not use house cleaners or abrasives.
- A household glass cleaner may be used for the mirror surface – spray the cleaner on a clean cloth first and then use the cloth to clean the mirror.

**Thank you for your purchase.**  
Stores | Catalog | [www.potterybarn.com](http://www.potterybarn.com)