

P O T T E R Y B A R N

Beachcomber Mirror Mounting instructions

Tools Needed: Pencil, Phillips Screwdriver
Stud Finder, Level, Tape-
Measure, Masking Tape


The hardware included with this item is meant for drywall or stud mounting only. If your walls are made from concrete, brick or plaster, please consult your local hardware store for assistance in selecting the appropriate hardware.

Hardware Included: (2) Anchors, (2) Screws

This large circular mirror includes two D-rings located on the rear surface. The item is meant to be hung on a wall directly from these two D-rings. Do not use cable to hang this mirror.

Mounting Instructions:

- 1) Carefully lay the mirror face down on a protected surface and then use a tape measure to measure the distance between the center of each D-ring. This will be referred to as the "D-ring Measurement".
- 2) With the help of another person, hold a length of masking tape taut across the rear surface so that the lower edge of the tape aligns with the top of each D-ring, as shown in the adjacent illustration. The tape should be long enough to extend beyond the edge of the mirror frame.

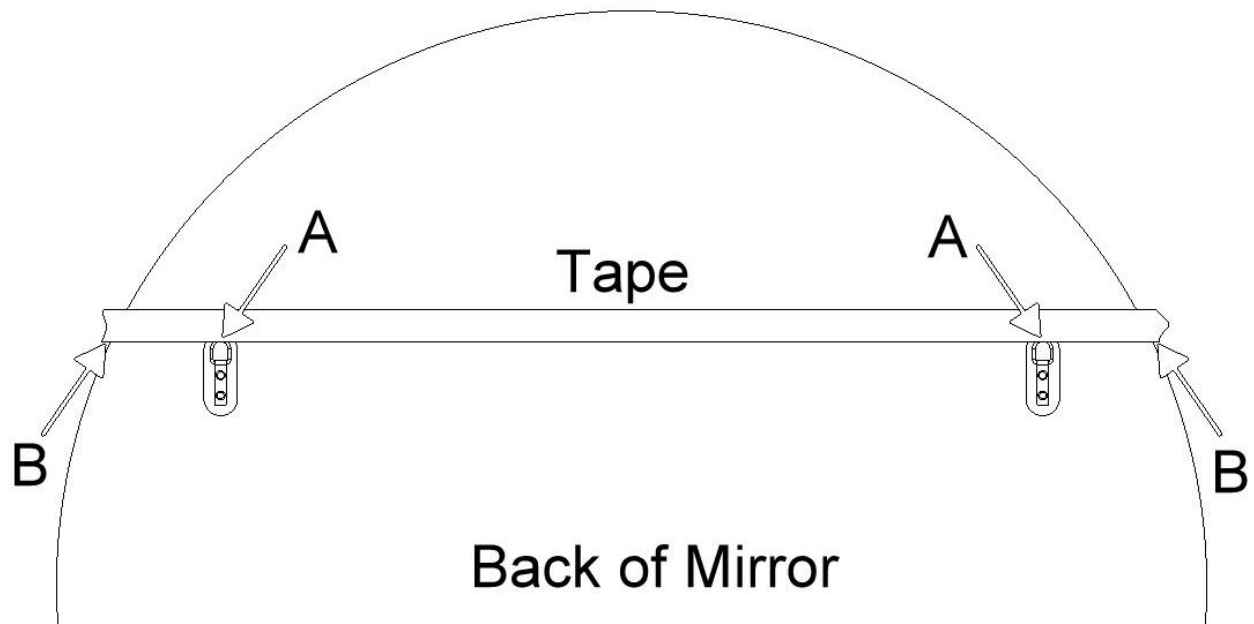


- 3) With the help of one or two people, hold the mirror upright against a wall at a desired mounting location (with the back of the mirror against the wall) . You should see the ends of the tape extending beyond the edge of the mirror (see the illustration. Hold the mirror so that the tape ends are as level as possible and then use a pencil to mark the wall at the

intersection of the edge of the mirror and the lower edge of the tape (at point (B) in the illustration). Set the mirror aside.

- 4) Use a level to confirm that the two marks on the wall are indeed level and then connect the marks with a level line.

- 5) Use the “D-ring Measurement” to make two marks centered along this line. The two marks should be spaced a distance equal to the “D-ring Measurement”. These two marks are the insertion marks for the hanging hardware.

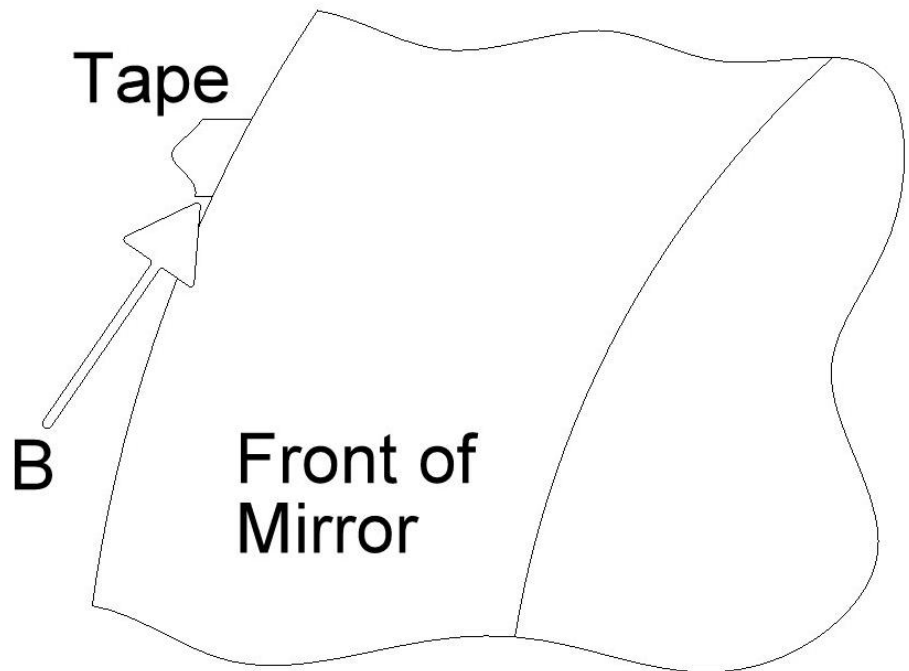

- 6) The provided anchors cannot penetrate wood studs. Therefore we have to find out if either insertion mark of Step (5) happens to align with a wall stud (use a stud-finder to determine this). If a mark does align, use a screwdriver to secure only a provided screw at this location – do not use an anchor. Rotate the screw clockwise until the screw head resides about 3/8 inch from the wall.
- 7) For marks that do not align with a stud, use the screwdriver to install an anchor into the wall at each mark. Engage the head of the anchor with the screwdriver and position the anchor’s tip at one of the marks. Rotate the anchor clockwise while pushing it firmly into the wall. The anchor will automatically drive itself into the wall. Continue rotating until the end of the anchor becomes even with the wall surface. Do not over-tighten.
- 8) Use the screwdriver to secure a screw into each installed anchor of Step (7). Rotate the screw clockwise until the screw head resides about 3/8 inch from the wall.
- 9) With the help of another person, raise the mirror against the wall so that the D-rings align and engage with the protruding screw heads. Lower the mirror so the screws support its weight.

Installation is complete - go take a break - you deserve it!

**DO NOT USE OR ATTACH WIRE
FOR HANGING, IT IS MEANT
TO HANG FROM THE AFFIXED
D-RINGS ON THE BACK**

Care and Instructions:

Wipe with soft, dry cloth.

Do not use strong abrasive or chemical cleaners.

Thank you for your purchase!