

P O T T E R Y B A R N

Kellan Wall Mounted Storage

Mounting instructions

The hardware included with this item is meant for dry wall or stud mounting only. If your walls are made from concrete, brick or plaster, please consult your local hardware store for assistance. Owing to the size of this item, we recommend that three people work together to mount this item to a wall. **Max. Load: 100 lbs (about 45.4 kilograms).**

Tools Needed:

Level
Stud Finder
Phillips screwdriver
Pencil

Parts Included:

(1) Wall Storage
(6) Hooks
(4) Screws
(4) Anchors

This item is made from an open wire construction and includes four through-hole mounting washers located along the rear panel. The included screws are used at these points to secure this item to a wall.

Mounting Instructions:


- 1) With the help of two other people, hold the item against a wall in a desired location. Place a bubble level on one of the shelves so that the item may be held level. While the item is being held, use a pencil to mark the wall through each of the four mounting washers located on the rear panel. Carefully set the item aside.
- 2) Typical drywall is supported by spaced wooden studs located behind the wall. The provided anchors cannot penetrate these studs so we have to determine if any of the four marks made in step (1) happen to align with a stud. Use a stud finder to locate the studs in the area around the marks on the wall. If any of the marks aligns with a stud, do not use an anchor at that location. Instead, you will use only a provided screw, as explained below. You also have the option of simply relocating the item to the left or the right about 2 inches to avoid the stud.
- 3) For each mark that does not align with a stud, install a provided anchor. To do this, use a screwdriver to engage an anchor and position the tip of the anchor at one of the marks. Rotate the anchor clockwise as you simultaneously gently push the anchor into the wall. The anchor will drive itself into the wall. Continue rotating until the wide flange of the anchor becomes even with the surface of the wall. Repeat this step with the other marks and anchors.
- 4) With the help of two other people, raise the storage unit against the wall so that the mounting washers align with the installed anchors (or marks). Use the screwdriver to secure a screw into each installed anchor. For marks that align with a stud, just install a screw at this location. Make sure all screws are tighten, but do not over-tighten.
- 5) Install the 6 hooks along the lower bar.

Installation Complete!

Care Instructions:

Wipe with a soft, dry cloth.

We strongly recommend against using harsh chemical or abrasive cleaners.

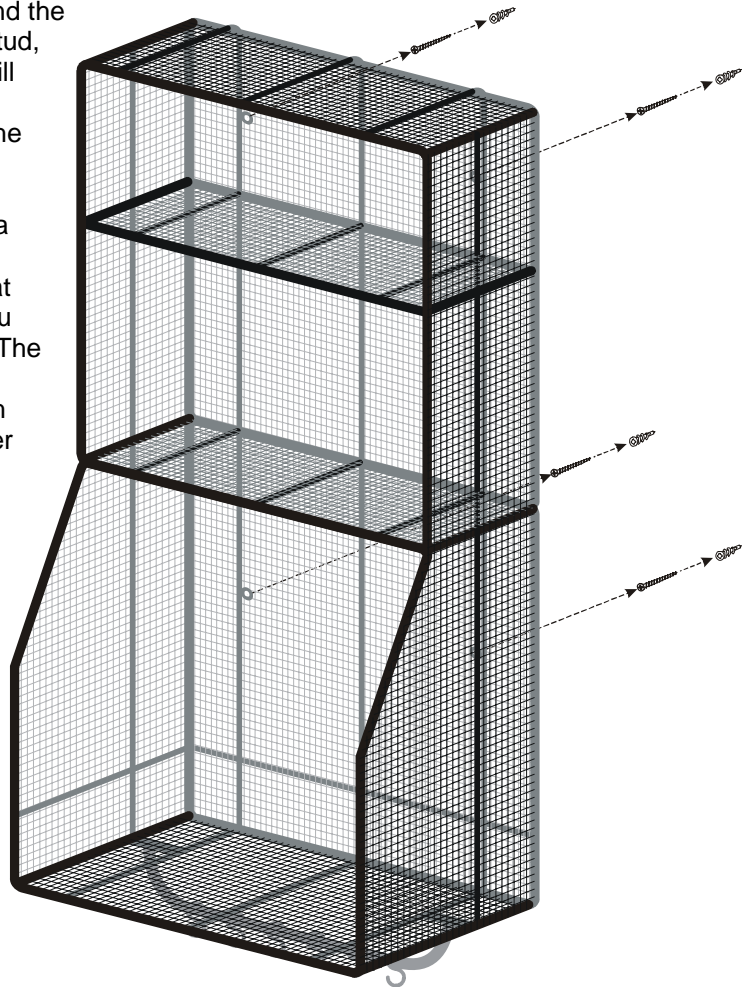

Thank you for your purchase!
store | catalog | www.potterybarn.com