

# P O T T E R Y B A R N

## Sussex Pivot Oval Mirror

### Note

- Please read these instructions entirety before beginning assembly.
- This mounting hardware is meant for dry wall/stud mounting only. If walls are concrete, brick or plaster, please consult your local hardware store for assistance.
- For your safety, assembly by two people is strongly recommended.

### Hardware/Parts Included:

- (1) Mirror
- (2) Wall brackets
- (2) Flat washers
- (2) Finial caps
- (6) Screws
- (6) Wall anchors (for dry wall only)

### Tools Required for Assembly

- Level
- Stud finder
- Pencil
- # 2 Phillips screwdriver

### Assembly Instructions:

1. Slide a wall bracket, then flat washer over the pre-fixed bolts on the mirror. Secure the brackets with the finial caps provided.
2. Hold the mirror in the desired location. With a pencil, mark on the wall the location of the screw holes. These will be the insertion points of your mounting hardware.
3. Using the proper hardware for your wall type, mount mirror to wall.


### Dry Wall Mounting:

1. Use a Phillips screwdriver to insert the wall anchors. Do not “push” or drive the anchors into the wall, they are designed to bore into the wall like a drill bit. Slowly turn the anchors clockwise while applying pressure until the flange just touches the wall.
2. Insert the metal screw through the screw holes of the bracket and into the wall anchor until tight.

### Stud Mounting:

Stud mounting is always best, so try to position over studs if possible. Use a stud finder to locate a stud in desired location. If there is no stud, the wall anchors/metal screws are both required.

1. With a Phillips screwdriver, insert metal screws through the screw holes of the brackets and into the stud; turning clockwise until tight.

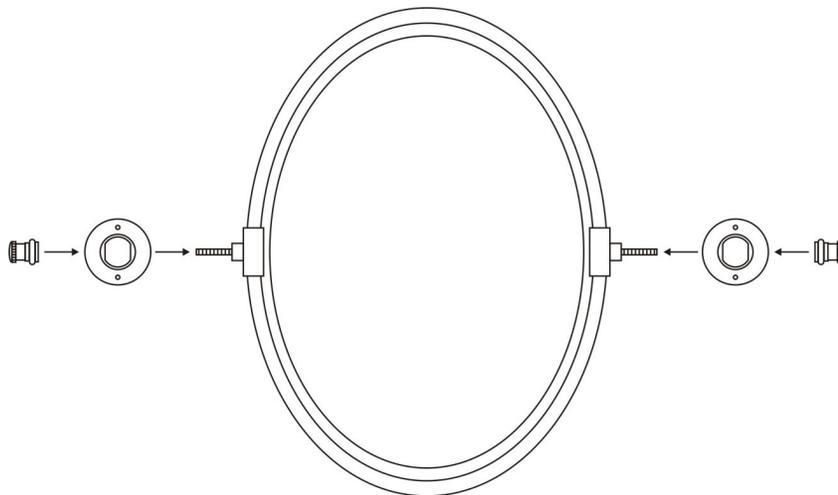

### Care Instructions:

- Wipe with a soft, dry cloth only.
- Avoid cleaners and abrasives as they may damage the finish.

*thank you for your purchase*  
stores | catalog | [www.potterybarn.com](http://www.potterybarn.com)