






P O T T E R Y B A R N

Rowen Headboard Assembly Instructions

Pre-Assembly:

- Please read all instructions carefully before beginning assembly.
- Save all packing materials until the item fully assembled to avoid accidentally discarding any small parts or hardware.
- For your safety, assembly by two people is recommended.

Hardware Included:

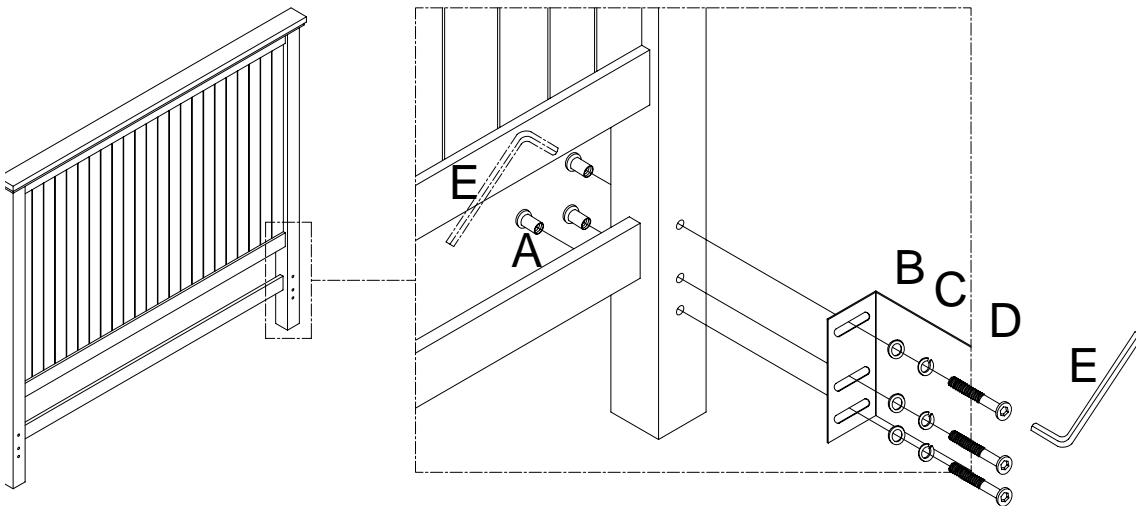
(6) Sleeve Nut A	(6) Flat Washer B	(6) Lock Washer C	(6) Allen Bolt (M6 x60 mm) D	(2) Allen Key E
				

Needed for assembly:

(1) Bed frame (sold separately)

Assembly Instructions:

1. Hold headboard upright and tilted slightly towards the faceplates of the pre-assembled bed frame.
2. Align the slots in the faceplate with the pre-drilled holes of the headboard. Insert the Allen Bolt (D) with Flat Washers (B) and Lock Washers (C) through the plate and headboard's pre-drilled holes. Screw in the Sleeve Nut (A) from the other side. Tighten with the Allen Keys (E).
3. Assembly is complete. Periodically tighten all connections.



Care Instructions:

- For daily cleaning, wipe with a soft damp cloth. Wipe dry immediately.
- Wipe up spills immediately.
- To protect the finish, avoid the use of chemicals and harsh cleaning agents.