

P O T T E R Y B A R N

Standing Shoe Rack

Assembly Instructions

Note: Assembly by two people recommended. Open the box safely and unpack all the included items. Do not discard packing until assembly is completed.

Parts Included:


- (2) Legs (A & B)
- (1) Large Frame (C)
- (1) Small Frame (D)

Hardware Included: (4) Allen Screws, (1) Allen Key

Step 1: Place Leg (A) on the floor such that its bottom holes through aligns to the Large Frame (C) as per illustration and matches the holes. Insert allen screw in the holes and tight with the help of provided allen key. Do not completely tight.

Step 2: Now, place Leg (B) at the end of frame (C) as per illustration, match the holes of Frame (C) and Legs (B) insert allen screws and tight with the help of allen key. Do not completely tight.

Step 3: Now, place the small frame (D) in between both fitted legs (A & B) so that its holes align to the holes provided at the wooden legs (A & B). Insert allen screw and rotate clockwise until tight with the help of Allen key provided as shown in the illustration and then tight all four allen screws.

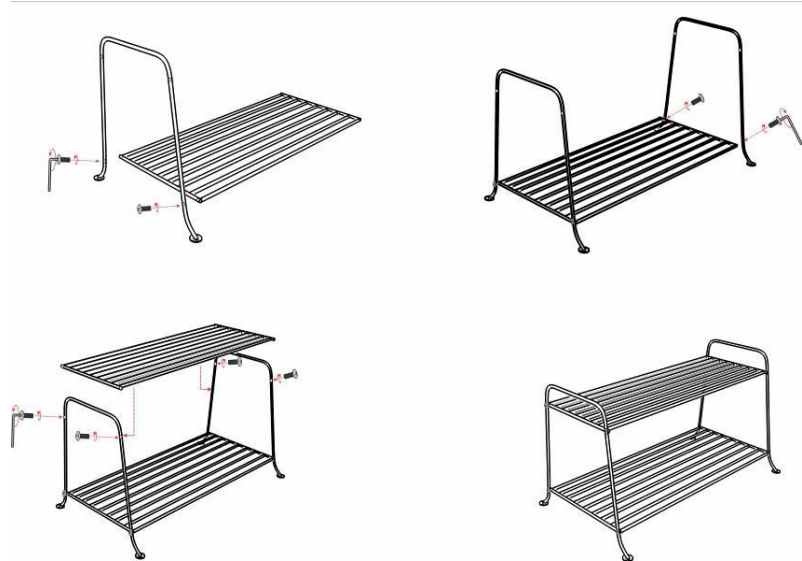

Assembly is complete.

Care Instructions:

Wipe with a soft, dry cloth. Do not use any abrasive or chemical household cleaners.

Thank you for your purchase!
Stores | Catalog | www.potterybarn.com