# POTTERYBARN

# Leaf Chandelier Wall Sconce

# Important Safety Instructions:

- These instructions are provided for your safety. It is important that they are read carefully and completely before installing fixture.
- This fixture has been rated for up to (3) 60-watt maximum standard Type B bulbs (not included). To avoid the risk of fire, do not exceed the recommended wattage.

### Pre-assembly:

- Remove all parts and hardware from the box and lay out on a clear workspace, along with any plastic protective packaging.

  Do not dispose of any contents until assembly is completed to avoid accidentally discarding small parts or hardware.
- Use the parts and hardware lists to identify and separate each of the components included.

#### Parts List:


- 1 Mounting Bar (B)
- 1 Back Plate (E)
- 6 Clear Crystals (I)
- 1 Hanging Loop (F)
- 2 Cord Covers (G) and (H)
- 3 Tube Sleeves (J)

# Hardware Enclosed:

- 2 Mounting Screws (C)
- 2 Drywall Anchors (A)
- 2 Small Fixture Screws (D)

## To Install You Will Need:

- 2 people recommended
- Phillips Screwdriver
- Electrical tape
- Wire cutters

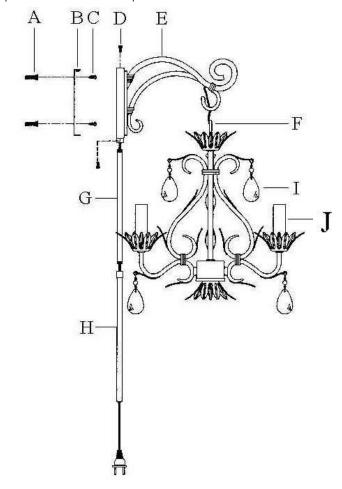

# To Assemble:

- 1. SHUT OFF THE MAIN ELECTRICAL SUPPLY FROM THE MAIN FUSE BOX/CIRCUIT BREAKER.
- 2. Carefully unpack all fixture parts and hardware and lay them out on a clear workspace.

# Connecting The Parts:

- 3. For Stud Mounting: Locate stud in wall. Mark the distance between holes in mounting bar (B) on wall with pencil for reference. Drive one mounting screw(C) through mounting bar (B) and half way into wall. Then drive second screw into wall completely. Finish driving the first screw into wall.
- 4. For Drywall Mounting: Use wall anchors (A) by drilling 1/4" pilot holes, and inserting anchors into wall before attaching mounting bar with screws (C).
- 5. Attach fixture back plate (E) to mounting bar (B) and secure with small fixture screws (D).
- 6. Hang steel loop (F) onto the arm of the back plate (B).
- 7. Screw one cord cover (G) into back plate (E), screw the second cover (H) into the first (G).
- 8. Hang crystals (I) on the chandelier.
- 9. Place tube sleeves (J) onto sockets.

# Completing the Assembly:

- 1. Insert three TYPE B 60W bulbs (not included) into the socket. DO NOT EXCEED SPECIFIED WATTAGE.
- 2. Restore power to junction box and test fixture.
- **3.** Assembly is complete.

#### Care Instructions:

- Wipe clean using a soft, dry cloth or static duster.
- Avoid the use of harsh chemicals and abrasives to clean fixture as they may damage the finish.

thank you for your purchase stores | catalog | www.potterybarn.com