

P O T T E R Y B A R N

New York Shoe Rack Mounting instruction

Parts Included:

- 1) 2 Wall Mounted Brackets (Part- A)
- 2) 4 Iron rods ((Part- B)

Hardware Included:

- 1) 4 ITW Anchors (For Dry wall mounting)
- 2) 4 ITW Screws
- 3) 8 Allen Screws
- 4) 1 Allen key

Maximum total weight capacity for NEW YORK Shoe Rack is pounds (Kg).

Note: Assembly by two people recommended. Open the box safely and unpack all the included items. Do not discard packing until assembly is completed.

Pre- assembly:

- 1) Take out the 2 brackets (A) and 4 iron rods (B) for assembling the shoe rack.
- 2) Place the Iron rod (B) on the wall mount bracket (A) as shown in illustration and secure by tightening the Allen screw with the help of Allen key provided. Similarly secure other 3 rods (B).


Dry Wall mounting:

- 1) Mark the location on the wall. These marks will be used to determine the location of your mounting hardware.
- 2) Use a Phillips screw driver to insert the anchors. Do not "push" or drive the anchors into the wall as they are designed to bore into the wall like a drill bit. Slowly turn the anchor clockwise while applying pressure until the flange just touches the wall.
- 3) Using a Phillips-head screw driver, drive the screws into wall anchors. The screws should not be flush to the wall. Leave a gap of $\frac{1}{4}$ " between the head of screw and the wall
- 4) Hang the shoe rack on the screw heads. If it does not fit properly, you may need to adjust the gap between the head of screw and the wall and hang again.


Wood Stud mounting:

- 1) Mark the location on the wall. These marks will be used to determine the location of your mounting hardware.
- 2) Using a Phillips-head Screw driver, drive the screws into the wall at the desired location. The screws should not flush to the wall. Leave a gap of $\frac{1}{4}$ " between the head of screw and the wall.
- 2) Hang the shoe rack on the screw heads. If it does not fit properly, you may need to adjust the gap between the head of screw and the wall, and hang again.

Assembly is complete.

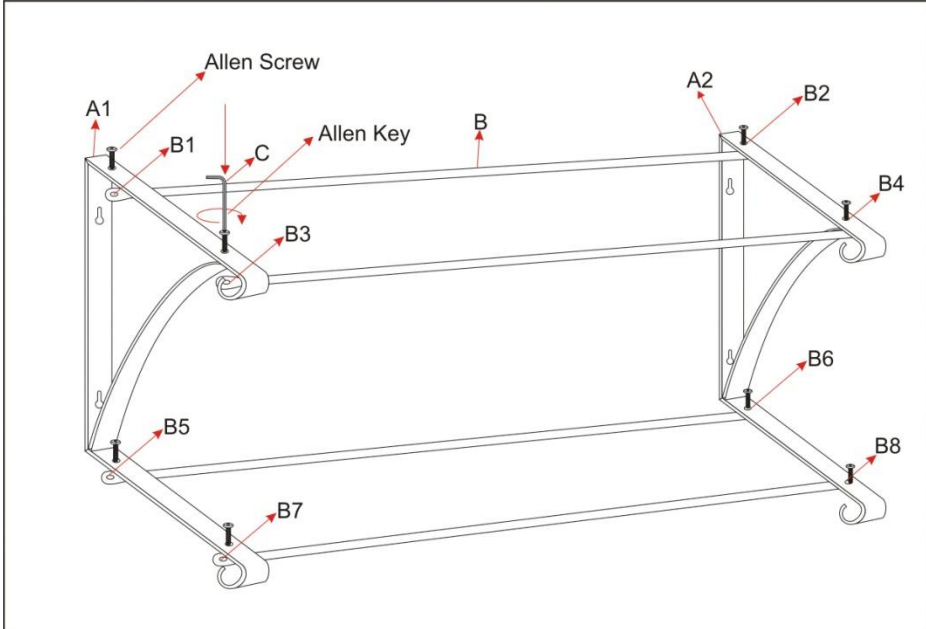

Assembled

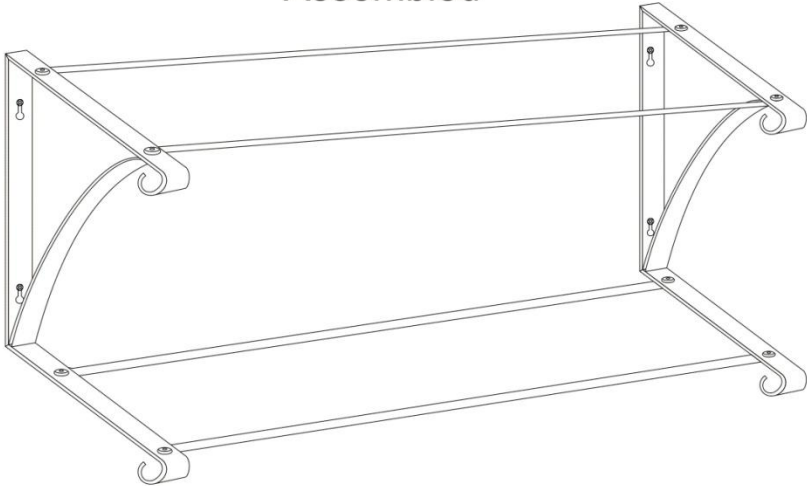

Care Instructions:

Wipe with a soft, dry cloth only. Avoid cleaners and abrasives as they may damage the finish.

Thank you for your purchase