

POTTERY BARN

GYPSY TOWEL BAR

Assembly Instructions

Note: For safe mounting, Pottery Barn recommends the following:

- Stud mounting is preferred over dry wall mounting when possible.
- Consult your local hardware store if you have any questions about installing your Accessories.
- Tools needed for installation: Phillips head screwdriver, Measuring Tape, Level and Pencil

Parts Included:

- 2 Screws
- 2 Wall Anchors

Pre-Assembly:

- Remove all parts from the box and lay out on a clear workspace, along with any plastic protective packaging. Do not dispose of any contents until assembly is completed to avoid accidentally discarding small parts or hardware.
- Use the parts list above to identify and separate each of the pieces included.
- Please note failure to follow these instructions may cause improper assembly.

Stud Mounting Instructions:


1. Use a measuring tape and a level to determine the proper placement of the towel bar.
2. Locate interior wood studs through wall. Place the "S" shape part of the towel bar over the wood stud at the desired height. Mark the location of the pre-drilled mounting holes on the wall with a pencil.
3. Align the mounting holes on the "S" shape bar with the pencil markings and then place the front oval piece over the "S" shape bar so that the holes are aligned.
4. Insert the metal screws through the holes of both the parts of the towel bar. Using a screwdriver, turn the screws clockwise until both the parts are tightened together and the towel bar is secured snugly to the wall.

Dry Wall Mounting Instructions:

1. Place the "S" shape part of the towel bar at the desired height.
2. Use a measuring tape and a level to determine the proper placement of the towel bar.
3. Mark the location of the pre-drilled mounting holes on the wall with a pencil.
4. Using a Phillips head screwdriver screw the two dry wall anchors directly into the wall at the two pencil marks. Do not "push" the anchor; it is designed to bore into the wall like a drill bit. Slowly turn the anchor clockwise while applying pressure until the flange just touches the wall.
5. Align the mounting holes on the "S" shape part with the anchor screws on the wall and then place the front oval piece over the "S" shape bar so that the holes are aligned, making sure the smooth surface of the towel bar is facing the wall.
6. Insert the metal screws through the holes of both the aligned parts of the Towel bar and place them into the wall anchor holes. Using a screwdriver, turn the screws clockwise until both the parts are tightened together and the Towel bar is secured snugly to the wall.

Care Instructions:

- Wipe with a soft, dry cloth only.
- Avoid cleaners and abrasives as they may damage the finish.

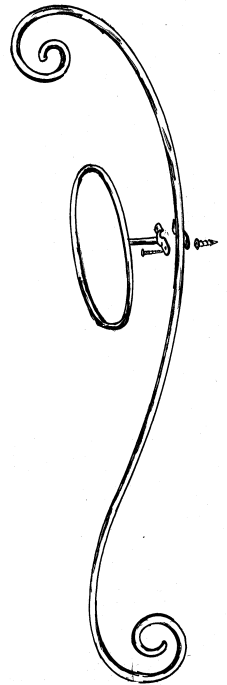

Thank you for your purchase
stores | catalog | www.potterybarn.com