

P O T T E R Y B A R N

Metal Private Sign

MOUNTING INSTRUCTIONS

Tools Required: Phillips Screwdriver, Pencil, Level, Tape Measure, Stud-Finder

Hardware Included: (2) Anchors
(2) Screws


The hardware included with this item is meant for drywall or stud mounting only. If your wall is made from another material such as concrete or plaster, please consult your local hardware store for assistance in selecting the correct hardware.

This item includes one pair of D-rings on the back for wall mounting.

Before you get started, use a tape measure to measure the exact distance between the two D-rings (measure from center to center of each D-ring). This measurement is "Distance (A)".

MOUNTING INSTRUCTIONS:

- 1) With the help of another person, hold the item against a wall at a desired mounting location so that the back of the item faces you and you can see the D-rings. Use a level to ensure the item is level and then, using a pencil, mark the wall on both sides of the item adjacent to each D-ring so that the two pencil marks and the two D-rings are all aligned horizontally. Carefully set the item aside.
- 2) Connect the two marks of Step #1 with a light pencil line and use a level to make sure that line is still level, adjust if necessary.
- 3) Use the pencil and a tape measure to make two "insertion marks" centered along the line of Step #2 that are spaced apart a distance equal to "Distance A". These are the insertion points for the mounting hardware.
- 4) The provided anchors cannot penetrate wood studs. Therefore we have to find out if either insertion mark of Step #3 happens to align with a wall stud (use a stud-finder to determine this). If either does, do not use the anchor at that location – use only the screw. In this instance, use a screwdriver to secure a screw directly into the wall at that mark. Rotate clockwise until the screw head resides about 3/8 inch from the wall.
- 5) For marks that do not align with a wall stud, first install an anchor into the wall. To do this, use a Phillips screwdriver to engage an anchor and then, position the anchor tip against the wall at one of the marks. Rotate the anchor clockwise as you push it firmly into the wall. The anchor will drive itself into the wall like a large screw. Continue rotating until the anchor's head becomes even with the wall surface. Do not over-tighten.
- 6) Now secure a screw into each installed anchor and use a screwdriver to rotate the screw clockwise until the screw head resides about 3/8 inch from the wall.
- 7) Mount the item on the wall by hanging the D-rings over the screw heads and slide the item down so it is fully supported by the screws.

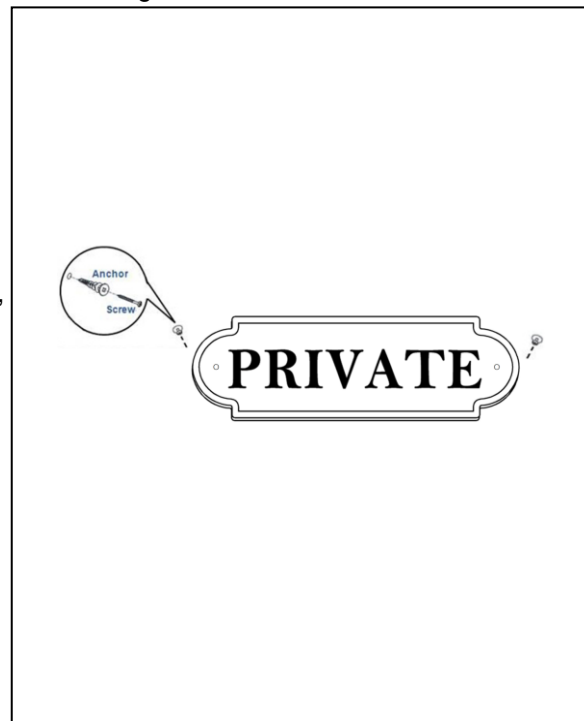

Care Instructions:

- Wipe with a soft, dry cloth. Do not use abrasive or strong chemical household cleaners.
- A household glass cleaner may be used for the mirror surface – spray the cleaner on a clean cloth first and then use the cloth to clean the mirror.

Thank you for your purchase!
Stores | Catalog | www.potterybarn.com