

POTTERY BARN

Caleb Sconce Bronze

Assembly and Installation Instructions

CAUTION:

- **DO NOT ASSEMBLE THE GLASS SHADE BEFORE MOUNT THE CANOPY TO THE CEILING.**
- **BEFORE INSTALLING FIXTURE, MAKE SURE THE POWER TO THE CIRCUIT IS TURNED OFF AT THE MAIN FUSE BOX / CIRCUIT BREAKER UTILITY BOX.**

Important Safety Instructions:


- These instructions are provided for your safety. It is very important that they are read carefully and completely before beginning the assembly and installation of this lighting fixture.
- We strongly recommend that a professional electrician install all direct wire fixtures.
- THIS PRODUCT MUST BE INSTALLED IN ACCORDANCE WITH THE APPLICABLE INSTALLATION CODES BY A PERSON FAMILIAR WITH THE CONSTRUCTION AND OPERATION OF THE PRODUCT AND THE HAZARDS INVOLVED.
- The lighting fixture is meant for indoor use. It must be connected only to 3-wire, single-phase electrical supply systems (provided with Ground wire or equivalent protection system).
- For your safety, it is strongly recommended that two people install the lighting fixture.
- This fixture has been rated for up to two (2) **40-watt maximum TYPE B standard incandescent light bulb** (not included) or two (2) **9-watt compact fluorescent light bulb** (not included). To avoid the risk of fire, do not exceed the recommended wattage
- The lighting fixture is meant for indoor use, SUITABLE FOR DRY LOCATIONS **ONLY**.
- Light bulb should be centered inside the sconce shade. Making sure it does not touch the shade side.
- **Save these instructions.**

WARNING:


- To reduce the risk of fire, electrical shock or personal injury, always turn off light fixture and allow it to cool prior to replacing light bulb.
- Do not touch bulb when fixture is turned on. Do not look directly at lit bulb.
- Keep flammable materials away from lit bulb.
- This lighting fixture contains lead, a chemical known to the State of California to cause cancer, birth defects and other reproductive harm. Wash hands after installing, handling, cleaning or otherwise touching this light fixture.

Pre-assembly:

- Remove all parts and hardware from box along with any plastic protective packaging.
- Do not discard any contents until after assembly is complete to avoid accidentally discarding small parts or hardware.
- For your safety and convenience, assembly by two people is recommended.
- If needed, separate Mounting Plate (C) from Sconce Fixture (A) by removing the four Fixture Side Screws (E) Hold the Mounting Plate (C) against a wall at the desired mounting location. Use one of the provided screws (K) to mark the wall through each of the four through-holes of the mounting and then set the Mounting Plate(C) aside.

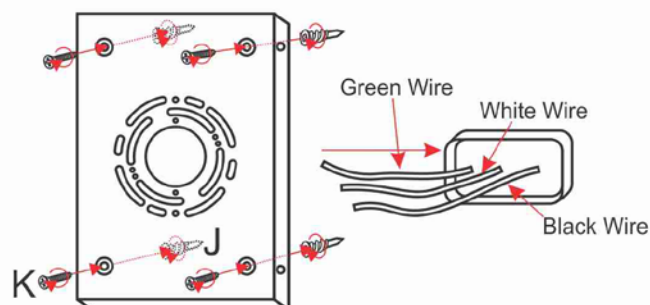

- If either of the four marks of Step (1) aligns with a wall stud (use a stud-finder to determine this), use a screwdriver to secure a screw at this mark directly into the wall and stud when instructed to do so below. Do not use a provided Plastic Anchor(J) at this stud location because the Plastic Anchor(J) cannot penetrate wood.
- For each mark that does not align with a stud, use a Phillips screwdriver to install a Plastic Anchor(J) into the wall. To do this, position the tip of the Plastic Anchor(J) against the wall at the mark and then firmly push the Plastic Anchor(J) into the wall as you rotate it clockwise. The Plastic Anchor(J) is designed to drive itself into the wall as it is rotated. Continue rotating the Plastic Anchor(J) until the wide end becomes even with the surface of the wall.
- With the help of another person, hold the Mounting Plate (C) upright and against the wall so that the four through holes align with either a stud-aligned mark or an installed Plastic Anchor(J). Use a screwdriver to secure a provided screw through each through hole and into the wall or an installed anchor. Rotate the screw clockwise until tight.
- Mounting Plate (C) installation complete.

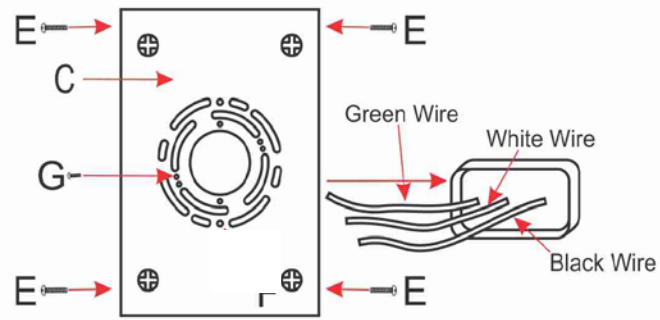


Parts Included:

- (1) Sconce Fixture (A)
- (1) Mounting Plate (C)
- (2) Socket (I)

Hardware Enclosed:

- (4) Fixture Side Screws (E)
- (1) Green Ground Screw (G)
- (3) Plastic Wire Nut Connectors (H)
- (4) Plastic Anchor(J)
- (4) Screws (K)

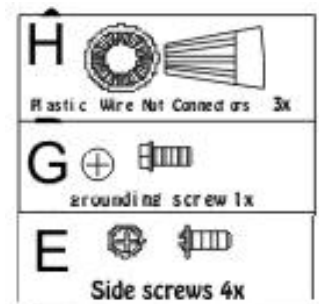


Tools Required: (not included): Step Ladder, Philips Head & Flat Blade Screwdrivers, Wire Cutter/Stripper, **Stud Finder** & Electrical Tape.

Assembly & Installation Instructions:

1. **SHUT OFF THE MAIN ELECTRICAL SUPPLY FROM THE MAIN FUSE BOX/CIRCUIT BREAKER!**
2. Carefully unpack all fixture parts and hardware and lay out them on a clear workspace.
3. If needed, separate Mounting Plate (C) from Sconce Fixture (A) by removing the four Fixture Side Screws (E). Do not discard Fixture Side Screws (E) as these will be used later.
4. Gently pull existing wire out from the wall junction box and allow wires to hang. The HOT or LIVE wire is usually black. The NEUTRAL wire is usually white. Check to see if there is a ground wire that is usually green or green with a yellow stripe or exposed copper metal wire. If needed, use a pair of wire strippers to remove about 1/2 inch of insulation from each wire.
5. Carefully inspect the fixtures wires. The NEUTRAL FIXTURE is WHITE. The HOT FIXTURE WIRE is Black and the green wire is the GROUND WIRE. If you have any doubt and cannot identify the power-supply wires with confidence, then we recommend that you ask an electrician and that you not continue with the installation.
6. Insert the sconce wires through the center opening of the Mounting Plate (C).
7. Attach the GROUND WIRE from the fixture to the GROUND JUNCTION BOX WIRE from the wall outlet junction box (J-box) (usually green insulation or bare wire). Fasten each together with a Plastic Wire Nut Connector (H) by twisting the connector in a clockwise direction and wrap the connection with electrical tape. Be sure that no wire strands are exposed. If your outlet junction box DOES NOT have a GROUND WIRE, be sure to insert the Green Ground Screw (G) into the Mounting Plate (C) marked as "GND", facing downward and wrap the fixture's green ground wire around the Green Ground Screw (G). Tighten screw to clamp ground wire between ground screw head and Mounting Plate (C). **IT IS IMPERATIVE THAT THE JUNCTION BOX IN YOUR HOME BE PROPERLY GROUNDED!**
8. Connect the NEUTRAL FIXTURE WIRE to the NEUTRAL JUNCTION BOX WIRE (usually white insulation). Fasten each together with a Plastic Wire Nut Connector (H) by twisting the connector in a clockwise direction and wrap the connection with electrical tape. Be sure that no wire strands are exposed.
9. Connect the HOT FIXTURE WIRE to the HOT JUNCTION BOX WIRE (usually black insulation). Fasten each

together with a Plastic Wire Nut Connector (H) by twisting the connector in a clockwise direction and wrap the connection with electrical tape. Be sure that no wire strands are exposed. **DO NOT REVERSE THE HOT AND NEUTRAL CONNECTIONS OR SAFETY WILL BE COMPROMISED.**

10. Check the wiring connections and if all looks good, gently tuck the wire connections neatly into the wall junction box.
11. Attach the Mounting Plate (C) to the wall outlet box as instructed above in “**Pre-assembly**” section.
12. Position Sconce Fixture (A) over the Mounting Plate (C), aligning the four holes in the Mounting Plate (C) with the four holes on the side of the Sconce Fixture (A).
13. Insert the 4 Fixture Side Screws (E) and tighten each with a screwdriver until secure.
14. Insert two (2) **40-watt maximum TYPE B standard incandescent light bulb** (not included) or two (2) **9-watt compact fluorescent light bulb** (not included) into the sockets (I). **DO NOT EXCEED THE SPECIFIED WATTAGE.**
15. Restore power to junction box and test fixture.

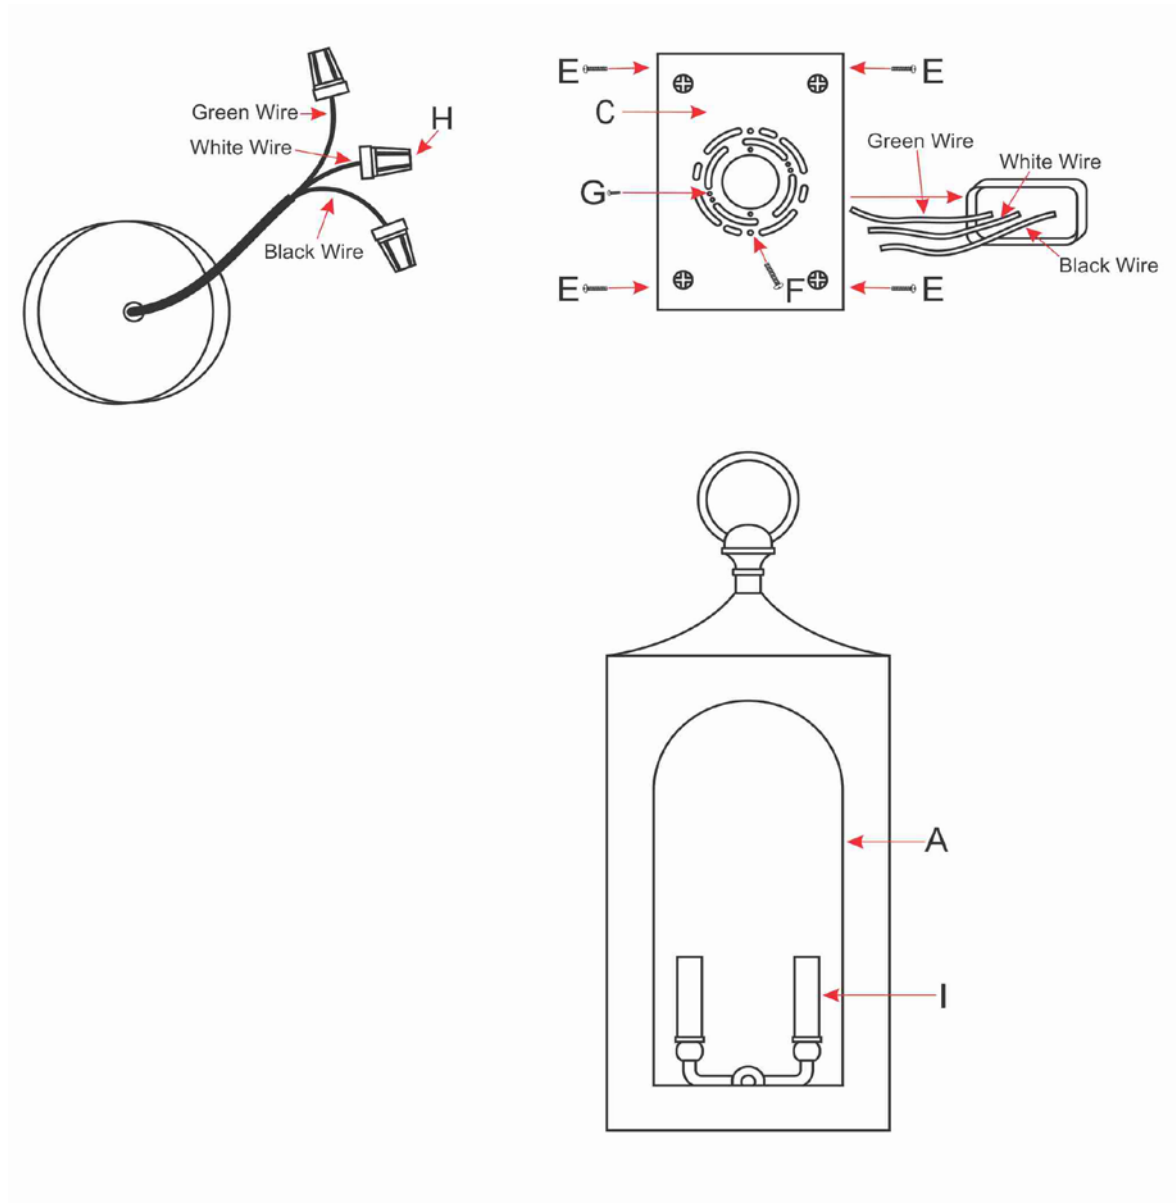

16. Assembly and installation is complete.

Care instructions:

- Wipe clean with a soft, dry cloth or static duster.
- Always avoid the use of harsh chemicals or abrasive cleaners as they may cause damage to the fixture's finish.

Thank you for your purchase
Stores | Catalog | www.potterybarn.com
USA 1.800.290.8181