POTTERY BARN

Important Safety Instructions:

- Please read all instructions carefully before assembling.
- For your safety, assembly by two or more adults is strongly recommended.
- Keep instructions for future use.
- Use only vendor supplied hardware to assemble. Using unauthorized hardware could jeopardize the structural integrity of the item.

Pre-assembly:

- Remove all parts and hardware from the box and lay out on a clear carpeted or scratch-free work surface, as this will avoid damaging parts during assembly. The shipping box provides an ideal work surface.
- Do not dispose of any packaging or contents of the shipping carton until assembly is completed to avoid accidentally discarding small parts or hardware.
- Use the parts and hardware lists below to identify and separate each of the pieces included.
- The illustrations provided allow for easier assembly when used in conjunction with the assembly instructions.
- The use of power tools to aid in assembly is not recommended. Power tools can damage hardware and split wood.

Parts Included:

(A) Headboard

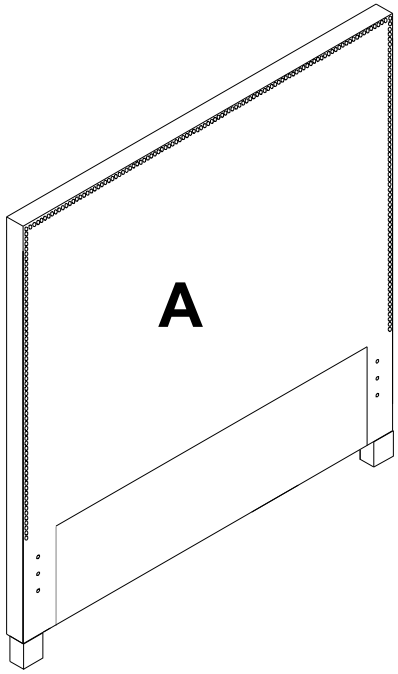

Hardware Not Included:

H1

M6 Bolts x6

H2

Lock Washers x6

H3

Flat Washers x6

Tools Required:



Small L Wrench **(not included)**

Assembly Instructions Steps:

1. With assistance place the headboard in the room as desired. Check to make sure the headboard legs are properly secured and tightened.

2. Adjust metal bed frame ensuring slots are correctly aligned with inserts of headboard.

a. Note: Please refer to the provided metal bed frame assembly instructions for information on the adjustability of each connection bracket.

3. Once the metal bed frame is aligned correctly, proceed to fastening with flat washer followed by lock washer and M6 bolt. Tighten with smaller L wrench.

